

ARCS PROCEDURE	RE-INITIALIZING SAT PHONE	PRO(BBSS)-048.000
Author: D. Reass		1 April 2002 Page 1 of 1

Re-Initializing SAT Phone

I. Purpose:

This procedure describes how to re-initialize satellite phones at the ARM sites in the Tropical Western Pacific locale.

II. Cautions and Hazards:

None.

III. Requirements:

None.

IV. Procedure:

A. Re-Initializing SAT Phone Unit

1. Hold down the power button (red LED) on the phone for three seconds or longer. This will make the display go plank.
2. Wait for a few seconds, and then turn the phone unit on. The phone should immediately start searching for a satellite in the Pacific Ocean Region (POR).
3. When the phone locks on to the satellite and prompts to "Accept," make sure the signal strength indicated on the display is 400 or greater.
4. Press the function key (indicated by "OK" in the display) to accept the signal. At this point, the phone will take a few moments to complete initialization.
5. When the display indicates "Dial 00 + country code + ...," the initialization is complete.

V. References:

1. Outfitter SAT Phone Installation — PRO(ADAM)-038.
2. Outfitter SAT Phone Operations — PRO(ADAM)-039.

VI. Attachments:

None.