Author: D. Curran

Programming SAT Phone for Non-SIM Use

I. Purpose:

This procedure explains how to program the Mini-M satellite phone so that it can make calls without a SIM card installed. In this configuration, the phone will be locked to dial only from the internal phonebook. It also allows the system to be prepaid and to provide email-based notification when the phone is about to run out of the pre-paid credit.

II. Cautions and Hazards:

None.

III. Requirements:

• To establish a non-SIM, pre-paid account, first contact Outfitter Satellite Operations at 615-889-8833.

IV. Procedure:

A. Programming SAT Phone for Non-SIM Use

- 1. Edit the phonebook so that it contains only the numbers that anyone should call.
- 2. Once the phonebook has been properly configured, follow the steps below:
 - a) Press "Menu" key.
 - b) Enter "Set access level."
 - c) Press "Owner."
 - d) Enter Owner-level pass code: 1234567890
 - e) Once the Owner level is established, return to "Menu."
 - f) Enter "Advanced functions."
 - g) Enter "Access control."
 - h) Enter "Restricted dialing."
 - i) Set to "Dial from book only."
 - j) Return to "Menu."
 - k) Enter "Set access level."

- Author: D. Curran
 - I) Reset to "User level."

B. Overriding Non-SIM Configuration

Follow one of the two ways to override the lock.

- a) Use the Owner-level pass code to disable restricted dialing.
- b) Insert a SIM card. Note: With a SIM card inserted, all calls will be billed to the phone's account.

V. References:

None.

VI. Attachments:

None.