AERI Monthly Operations

I. Purpose:

Routine procedures to be carried out monthly for maintenance of the AERI blower.

II. Cautions and Hazards:

None

III. Requirements:

None

IV. Procedure:

A. Blower maintenance:

Before working with the blower, switch the motor off and turn the circuit breaker off.

- 1. Belt inspection:
 - By examining the floor beneath the belt, verify that the floor is free of black debris caused from belt abrasion.
 - By hand-turning the belt, examine the entire length for excessive wear. The belt should be about ½" on the outside edge and about ¼" on the inside edge with a thickness of about ½". Verify that the belt is not frayed or very thin.
- 2. Filter replacement:
 - Remove the filter by sliding it straight up.
 - Verify that the filter is not clogged with dirt or sea salt.
 - Replace the filter if it is clogged.

V. References:

None

VI. Attachments:

None.