

ARCS PROCEDURE: Author: J. Schmelzer	RSR MOTOR REPLACEMENT PROCEDURE	PRO(RSR)-009.002 August 7, 1998 Page 1 of 1
---	------------------------------------	---

RSR Motor Replacement Procedure

I. Purpose:

This procedure describes the steps necessary to replace a RSR motor.

II. Cautions and Hazards:

None.

III. Requirements:

- New motor.
- Screwdriver.

IV. Procedure:

A. Steps:

1. Turn power "OFF" to RSR by disconnecting RSR fuse.
2. Remove cable to band motor.
3. Remove the pinch screw from the latitude adjustment; the entire band motor should come off.

Note: Make marks for latitude adjustment location.

4. Remove band by unscrewing the set screw.

Note: When installing a new band motor (or reusing the old motor), be sure to push the band piece all the way into the motor.

5. Add new motor and band by reversing these steps.
6. Record start-time, end-time, date, and comments on the site operations checklist.

V. References:

1. J. Schmelzer, conversations at SNL July, 1995.

VI. Attachments:

None.