

ARCS PROCEDURE:	ACTIVATE THE MFRSR FROM ADAM	PRO(RSR)-016.000
Author: P. Malone		May 25, 1999 Page 1 of 1

Activate the MFRSR from ADaM

I. Purpose:

Describes the procedure to activate the MFRSR from ADaM.

II. Cautions and Hazards:

None

III. Requirements:

None

IV. Procedure:

A. Steps:

1. On the X-terminal press the 'Instruments' icon.
2. Select the 'MFRSR' instrument icon.
3. Select 'Activate' from the command list.
4. Select 'Execute command.'
5. Click the mouse in the black area of the password block. The cursor should be blinking
6. Enter the password ADaM.
7. Press OK
8. If the password block times out before you can type the password, then you can restart at step 3.

V. References:

None

VI. Attachments:

None