

ARCS PROCEDURE	MFRSR CONNECTOR FITTING	PRO(RSR)-020.000
Author: J. Schmelzer		17 September 2002 Page 1 of 1

MFRSR Connector Fitting

I. Purpose:

This procedure describes how to fit MFRSR connectors when replacing head.

II. Cautions and Hazards:

None.

III. Requirements:

None.

IV. Procedure:

A. Fitting MFRSR Connectors

1. Replace the 1/8" NPT plug in the end just above the signal connector end with SS NPT 1/8" 90° to 1/16" barbed fitting.
2. Make sure to give the head a small breather hole to keep moisture from accumulating inside when power goes off.

V. References:

None.

VI. Attachments:

None.