

(3) The placement of seat backs in an upright position before takeoff and landing;

(4) Location and means for opening the passenger entry door and emergency exits;

(5) Location of survival equipment;

(6) If the flight involves extended overwater operation, ditching procedures and the use of required flotation equipment;

(7) If the flight involves operations above 12,000 feet MSL, the normal and emergency use of oxygen; and

(8) Location and operation of fire extinguishers.

(b) Before each takeoff, the pilot in command shall ensure that each person who may need the assistance of another person to move expeditiously to an exit if an emergency occurs and that person's attendant, if any, has received a briefing as to the procedures to be followed if an evacuation occurs. This paragraph does not apply to a person who has been given a briefing before a previous leg of a flight in the same airplane.

(c) The oral briefing required by paragraph (a) of this section shall be given by the pilot in command or a member of the crew. It shall be supplemented by printed cards for the use of each passenger containing—

(1) A diagram and method of operating the emergency exits; and

(2) Other instructions necessary for the use of emergency equipment on board the airplane.

Each card used under this paragraph must be carried in the airplane in locations convenient for the use of each passenger and must contain information that is appropriate to the airplane on which it is to be used.

(d) The certificate holder shall describe in its manual the procedure to be followed in the briefing required by paragraph (a) of this section.

(e) If the airplane does not proceed directly over water after takeoff, no part of the briefing required by paragraph (a)(6) of this section has to be given before takeoff but the briefing required by paragraph (a)(6) must be

given before reaching the overwater part of the flight.

[Doc. No. 19779, 45 FR 67235, Oct. 9, 1980, as amended by Amdt. 125-17, 57 FR 42675, Sept. 15, 1992]

**§ 125.328 Prohibition on crew interference.**

No person may assault, threaten, intimidate, or interfere with a crewmember in the performance of the crewmember's duties aboard an aircraft being operated under this part.

[Doc. No. FAA-1998-4954, 64 FR 1080, Jan. 7, 1999]

**§ 125.329 Minimum altitudes for use of autopilot.**

(a) Except as provided in paragraphs (b), (c), (d), and (e) of this section, no person may use an autopilot at an altitude above the terrain which is less than 500 feet or less than twice the maximum altitude loss specified in the approved Airplane Flight Manual or equivalent for a malfunction of the autopilot, whichever is higher.

(b) When using an instrument approach facility other than ILS, no person may use an autopilot at an altitude above the terrain that is less than 50 feet below the approved minimum descent altitude for that procedure, or less than twice the maximum loss specified in the approved Airplane Flight Manual or equivalent for a malfunction of the autopilot under approach conditions, whichever is higher.

(c) For ILS approaches when reported weather conditions are less than the basic weather conditions in §91.155 of this chapter, no person may use an autopilot with an approach coupler at an altitude above the terrain that is less than 50 feet above the terrain, or the maximum altitude loss specified in the approved Airplane Flight Manual or equivalent for the malfunction of the autopilot with approach coupler, whichever is higher.

(d) Without regard to paragraph (a), (b), or (c) of this section, the Administrator may issue operations specifications to allow the use, to touchdown, of an approved flight control guidance system with automatic capability, if—

(1) The system does not contain any altitude loss (above zero) specified in the approved Airplane Flight Manual