 


**EXPLANATION**

- Water-table contour**—Shows altitude of water table. Dashed where approximate. Contour interval is 5 feet except between contours 580 and 585 where the interval is 2.5 feet. Contour lines reproduced from Greeman, 1995. Control points for contour lines not shown.
- Flow arrow**—Shows direction of ground-water flow. Dashed where approximate
- Ground water divide**—Dashed where approximate
- Facility boundary
- Monitoring well for water quality data
- Monitoring well for water-quality data with known inaccurate location.

Base from U.S. Geological Survey 1:100,000 digital data 1983  
 Universal Transverse Mercator projection, zone 16

(Modified from Greeman, 1995)



**Figure 14.** Configuration and altitude of the water table and directions of ground-water flow near U.S. Steel—Gary Works, May 9-16, 1986 (location for this area shown in plate 1).