

DOCUMENT TYPE: Standard Operating Procedure

TITLE: Coleman Generator Operation

PREPARED BY: Jeanette de la Rosa, Quality Assurance Officer

REVIEWED BY: Anne Cheung, Laboratory Manager

APPROVED BY: Marshall K. Cheung, Ph.D., Laboratory Director

Table of Contents

1.	Scope and Application	3
2.	Summary of Method	3
	Equipment	
4.	Reagents	3
5.	Procedure	3
6.	Maintenance	4
7.	Bibliography	4



DOCUMENT TYPE: Standard Operating Procedure

TITLE: Coleman Generator Operation

PREPARED BY: Jeanette de la Rosa, Quality Assurance Officer

REVIEWED BY: Anne Cheung, Laboratory Manager

APPROVED BY: Marshall K. Cheung, Ph.D., Laboratory Director

Table of Contents

1.	Scope and Application	3
2.	Summary of Method	3
	Equipment	
4.	Reagents	3
5.	Procedure	3
6.	Maintenance	4
7.	Bibliography	4



Document No.:	SOP - SP 005 - 001
Copy provided to:	Anne Y. Cheung
Title:	Laboratory Manager
	29 Palms Laboratory
	47-250 Dillon Road
	Coachella, CA 92236
Copy provided by:	Jeanette de la Rosa
Title:	Quality Assurance Officer
Date:	July 28, 2004



1. Scope and Application

- 1.1. This SOP provides instructions for the safe use of the Coleman electric generator.
- 1.2. Maintenance of the generator is also described.

2. Summary of Method

- 2.1. Check oil
- 2.2. Check gasoline
- 2.3. Start generator
 - 2.3.1. Move choke bar into position
 - 2.3.2. Put throttle on fast
 - 2.3.3. Ground with copper stake in ground
 - 2.3.4. Turn Stop Control switch to on
 - 2.3.5. Push the red I/O key to I.
 - 2.3.6. Pull rip cord to start
 - 2.3.7. Adjust choke and throttle to achieve smooth idle.
- 2.4. Stop Generator
 - 2.4.1. Move throttle to slow
 - 2.4.2. Turn the switch to off

3. Equipment

- 3.1. Coleman Generator
- 3.2. Rags

4. Reagents

- 4.1. Gasoline
- 4.2. Oil (30 SAE)

5. Procedure

- 5.1. Check the oil level in the generator.
 - 5.1.1. Change oil after first five hours then every eight thereafter.
- 5.2. Fill generator gas tank with unleaded gasoline.
- 5.3. Start the generator
 - 5.3.1. Move **choke bar** to *choke* position.
 - 5.3.2. Put **throttle** to *fast* position (to the left).
 - 5.3.3. Ground the generator with **copper wire** and **stake**.
 - 5.3.4. Place **Stop Control Switch** on.
 - 5.3.5. Push the red I/O key to I.
 - 5.3.6. Pull **rip cord** to start.
 - 5.3.7. Move **choke** to the *run* position.
 - 5.3.8. Adjust **throttle** to control speed.
- 5.4. Stop the Generator
 - 5.4.1. Move throttle to *slow* position (to the right).
 - 5.4.2. Turn **Stop Control Switch** off.



6. Maintenance

- 6.1. Change the oil after the first 5 hours of operation then every 8 hours thereafter.
- 6.2. Change the spark plugs after every 100 hours of operation.

7. Bibliography

7.1. Briggs & Stratton Operator/Owner Manual. Copyright 1997 by Briggs & Stratton Corporation