

§ 113.20-1

or alarm system must not be less than 125 percent of the maximum load.

[CGD 74-125A, 47 FR 15272, Apr. 8, 1982, as amended by CGD 94-108, 61 FR 28288, June 4, 1996]

Subpart 113.20—Automatic Sprinkler Systems

§ 113.20-1 Sprinkler alarm system.

Each sprinkler alarm system, including annunciator, power supply, alarm switches, and bells, must meet Subpart 76.25 of this chapter.

§ 113.20-3 Connection boxes.

Each connection box and each switch enclosure in an automatic sprinkler system must be constructed in accordance with NEMA 250 Type 4 or 4X or IEC IP 56 requirements.

[CGD 94-108, 61 FR 28288, June 4, 1996, as amended at 62 FR 23910, May 1, 1997]

Subpart 113.25—General Emergency Alarm Systems

EDITORIAL NOTE: Nomenclature changes appear at CGD 94-108, 61 FR 28288, June 4, 1996.

§ 113.25-1 Applicability.

(a) This subpart, except §§ 113.25-25 and 113.25-30, applies to each manned vessel of over 100 gross tons, except barges, scows, and similar vessels.

(b) Section 113.25-25 applies to each manned ocean and coastwise barge of over 100 gross tons if the crew is divided into watches for the purpose of steering.

(c) Section 113.25-30 applies to each barge of 300 or more gross tons that has sleeping accommodations for more than six persons.

§ 113.25-3 Requirements.

Each vessel must have a general emergency alarm system that meets the requirements of this subpart.

§ 113.25-5 Location of contact makers.

(a) *Passenger vessels and cargo and miscellaneous vessels.* Each passenger vessel, cargo vessel, and miscellaneous vessel must have a manually operated

46 CFR Ch. I (10-1-02 Edition)

contact maker for the general emergency alarm system:

(1) In the navigating bridge; and

(2) At the feeder distribution panel if the general alarm power supply is not in or next to the navigating bridge.

(b) *Tank vessels.* Each tank vessel must have a manually operated contact maker for the general emergency alarm system:

(1) In the navigating bridge;

(2) At the deck officers' quarters farthest from the engineroom;

(3) in the engineroom;

(4) At the location of the emergency means of stopping cargo transfer required under 33 CFR 155.780; and

(5) At the feeder distribution panel if the general alarm power supply is not in or next to the navigating bridge.

(c) *Mobile offshore drilling units.* Each mobile offshore drilling unit must have a manually operated contact maker for the general emergency alarm system:

(1) In the main control room;

(2) At the drilling console;

(3) At the feeder distribution panel;

(4) In the navigating bridge, if a navigating bridge is installed; and

(5) In a routinely occupied space that is as far as practicable from all other contact makers.

(d) *Additional contact maker.* A vessel must not have more than one other contact maker that operates the general emergency alarm system in addition to those required under paragraph (a), (b), or (c) of this section unless the installation of other contact makers has been accepted by the Commandant.

(e) *Special system.* If a vessel has an emergency squad when operating, has a manual fire alarm system, or is an ocean-going passenger vessel, it must have:

(1) An independent manually operated contact maker in the navigating bridge that is connected to operate only the general emergency alarm signal in crew's quarters and machinery spaces; or

(2) A separate alarm system that sounds in the crew's quarters and machinery spaces.

§ 113.25-6 Power supply.

(a) The power supply for the general emergency alarm system must meet