

§ 111.01-17

ambient temperature for that component is assumed to be 40°C. For installations using Navy type circuit breakers the ambient temperature for that component is assumed to be 50°C.

(d) Unless otherwise indicated in this subchapter, a 55°C ambient temperature is assumed for all control and instrumentation equipment.

(e) If electrical equipment is utilized in a space in which the equipment's rated ambient temperature is below the assumed ambient temperature of the space, its load must be derated. The assumed ambient temperature of the space plus the equipment's actual temperature rise at its derated load must not exceed the equipment's total rated temperature (equipment's rated ambient temperature plus its rated temperature rise).

[CGD 94-108, 61 FR 28276, June 4, 1996, as amended at 62 FR 23907, May 1, 1997]

§ 111.01-17 Voltage and frequency variations.

Unless otherwise stated, electrical equipment must function at variations of at least ± 5 percent of rated frequency and +6 percent to -10 percent of rated voltage. This limitation does not address transient conditions.

[CGD 94-108, 61 FR 28276, June 4, 1996]

§ 111.01-19 Inclination of the vessel.

(a) All electrical equipment must be designed and installed to operate for the particular location and environment in which it is to be used. Additionally, electrical equipment necessary for the maneuvering, navigation, and safety of the vessel or its personnel must be designed and installed to operate under any combination of the following conditions:

(1) 15 degrees static list, 22.5 degrees dynamic roll; and

(2) 7.5 degrees static trim.

(b) All emergency installations must be designed and installed to operate when the vessel is at 22.5 degrees list and 10 degrees trim.

[CGD 94-108, 61 FR 28276, June 4, 1996, as amended at 62 FR 23907, May 1, 1997]

46 CFR Ch. I (10-1-02 Edition)

Subpart 111.05—Equipment Ground, Ground Detection, and Grounded Systems

§ 111.05-1 Purpose.

This subpart contains requirements for the grounding of electric systems, circuits, and equipment.

NOTE: Circuits are grounded to limit excessive voltage from lightning, transient surges, and unintentional contact with higher voltage lines, and to limit the voltage to ground during normal operation. Conductive materials enclosing electric conductors and equipment, or forming part of that equipment, are grounded to prevent a voltage above ground on the enclosure materials.

[CGD 74-125A, 47 FR 15236, Apr. 8, 1982, as amended by CGD 94-108, 61 FR 28276, June 4, 1996]

EQUIPMENT GROUND

§ 111.05-3 Design, construction, and installation; general.

(a) An electric apparatus must be designed, constructed, and installed to prevent any person from accidentally contacting energized parts.

(b) Exposed, noncurrent-carrying metal parts of fixed equipment that may become energized because of any condition must be grounded.

(c) Exposed, noncurrent-carrying metal parts of portable equipment must be grounded through a conductor in the supply cable to the grounding pole in the receptacle.

(d) If the installation of the electrical equipment does not ensure a positive ground to the metal hull or equivalent conducting body, the apparatus must be grounded to the hull with a grounding conductor.

§ 111.05-7 Armored and metallic-sheathed cable.

When installed, the metallic armor or sheath must meet the installation requirements of IEC 92-3 or section 20 of IEEE Std 45.

[CGD 94-108, 61 FR 28276, June 4, 1996]

§ 111.05-9 Masts.

Each nonmetallic mast and topmast must have a lightning ground conductor in accordance with section 10 of IEC 92-401.

[CGD 94-108, 62 FR 23907, May 1, 1997]