

## SYSTEM GROUNDING

**§ 111.05-11 Hull return.**

(a) A vessel's hull must not carry current as a conductor except for the following systems:

(1) Impressed current cathodic protection systems.

(2) Limited and locally grounded systems, such as a battery system for engine starting that has a one-wire system and the ground lead connected to the engine.

(3) Insulation level monitoring devices if the circulation current does not exceed 30 milliamperes under the most unfavorable conditions.

(4) Welding systems with hull return except vessels subject to 46 CFR Subchapter D.

**§ 111.05-13 Grounding connection.**

Each grounded system must have only one point of connection to ground regardless of the number of power sources operating in parallel in the system.

**§ 111.05-15 Neutral grounding.**

(a) Each propulsion, power, lighting, or distribution system having a neutral bus or conductor must have the neutral grounded.

(b) The neutral of a dual-voltage system must be solidly grounded at the generator switchboard.

**§ 111.05-17 Generation and distribution system grounding.**

The neutral of each grounded generation and distribution system must:

(a) Be grounded at the generator switchboard, except the neutral of an emergency power generation system must be grounded with:

(1) No direct ground connection at the emergency switchboard;

(2) The neutral bus permanently connected to the neutral bus on the main switchboard; and

(3) No switch, circuit breaker, or fuse in the neutral conductor of the bus-tie feeder connecting the emergency switchboard to the main switchboard; and

(b) Have the ground connection accessible for checking the insulation resistance of the generator to ground be-

fore the generator is connected to the bus.

**§ 111.05-19 Tank vessels; grounded distribution systems.**

(a) If the voltage of a distribution system is less than 1,000 volts, line to line, a tank vessel must not have a grounded distribution system.

(b) If the voltage of a distribution system on a tank vessel is 1,000 volts or greater, line to line, and the distribution system is grounded (including high-impedance grounding), any resulting current must not flow through a hazardous (classified) location.

[CGD 94-108, 61 FR 28276, June 4, 1996, as amended at 62 FR 23907, May 1, 1997]

## GROUND DETECTION

**§ 111.05-21 Ground detection.**

There must be ground detection for each:

(a) Electric propulsion system;

(b) Ship's service power system;

(c) Lighting system; and

(d) Power or lighting distribution system that is isolated from the ship's service power and lighting system by transformers, motor generator sets, or other devices.

**§ 111.05-23 Location of ground indicators.**

Ground indicators must:

(a) Be at the vessel's ship's service generator distribution switchboard for the normal power, normal lighting, and emergency lighting systems;

(b) Be at the propulsion switchboard for propulsion systems; and

(c) Be readily accessible.

(d) Be provided (at the distribution switchboard or at another location, such as a centralized monitoring position for the circuit affected) for each feeder circuit that is isolated from the main source by a transformer or other device.

NOTE TO PARAGRAPH (d): An alarm contact or indicating device returned to the main switchboard via a control cable, that allows the detecting equipment to remain near the transformer or other isolating device for local troubleshooting, is allowed.

[CGD 74-125A, 47 FR 15236, Apr. 8, 1982, as amended by CGD 94-108, 61 FR 28276, June 4, 1996; 62 FR 23907, May 1, 1997]