§91.209

section must be attached to the airplane in such a manner that the probability of damage to the transmitter in the event of crash impact is minimized. Fixed and deployable automatic type transmitters must be attached to the airplane as far aft as practicable.

- (c) Batteries used in the emergency locator transmitters required by paragraphs (a) and (b) of this section must be replaced (or recharged, if the batteries are rechargeable)—
- (1) When the transmitter has been in use for more than 1 cumulative hour; or
- (2) When 50 percent of their useful life (or, for rechargeable batteries, 50 percent of their useful life of charge) has expired, as established by the transmitter manufacturer under its approval.

The new expiration date for replacing (or recharging) the battery must be legibly marked on the outside of the transmitter and entered in the aircraft maintenance record. Paragraph (c)(2) of this section does not apply to batteries (such as water-activated batteries) that are essentially unaffected during probable storage intervals.

- (d) Each emergency locator transmitter required by paragraph (a) of this section must be inspected within 12 calendar months after the last inspection for—
 - (1) Proper installation;
 - (2) Battery corrosion;
- (3) Operation of the controls and crash sensor; and
- (4) The presence of a sufficient signal radiated from its antenna.
- (e) Notwithstanding paragraph (a) of this section, a person may—
- (1) Ferry a newly acquired airplane from the place where possession of it was taken to a place where the emergency locator transmitter is to be installed; and
- (2) Ferry an airplane with an inoperative emergency locator transmitter from a place where repairs or replacements cannot be made to a place where they can be made.

No person other than required crewmembers may be carried aboard an airplane being ferried under paragraph (e) of this section.

(f) Paragraph (a) of this section does not apply to—

- (1) Before January 1, 2004, turbojet-powered aircraft;
- (2) Aircraft while engaged in scheduled flights by scheduled air carriers;
- (3) Aircraft while engaged in training operations conducted entirely within a 50-nautical mile radius of the airport from which such local flight operations began:
- (4) Aircraft while engaged in flight operations incident to design and testing:
- (5) New aircraft while engaged in flight operations incident to their manufacture, preparation, and delivery;
- (6) Aircraft while engaged in flight operations incident to the aerial application of chemicals and other substances for agricultural purposes;
- (7) Aircraft certificated by the Administrator for research and development purposes;
- (8) Aircraft while used for showing compliance with regulations, crew training, exhibition, air racing, or market surveys:
- (9) Aircraft equipped to carry not more than one person.
- (10) An aircraft during any period for which the transmitter has been temporarily removed for inspection, repair, modification, or replacement, subject to the following:
- (i) No person may operate the aircraft unless the aircraft records contain an entry which includes the date of initial removal, the make, model, serial number, and reason for removing the transmitter, and a placard located in view of the pilot to show "ELT not installed."
- (ii) No person may operate the aircraft more than 90 days after the ELT is initially removed from the aircraft; and
- (11) On and after January 1, 2004, aircraft with a maximum payload capacity of more than 18,000 pounds when used in air transportation.

[Doc. No. 18334, 54 FR 34304, Aug. 18, 1989, as amended by Amdt. 91–242, 59 FR 32057, June 21, 1994; 59 FR 34578, July 6, 1994; Amdt. 91–265, 65 FR 81319, Dec. 22, 2000; 66 FR 16316, Mar. 23, 2001]

§91.209 Aircraft lights.

No person may:

- (a) During the period from sunset to sunrise (or, in Alaska, during the period a prominent unlighted object cannot be seen from a distance of 3 statute miles or the sun is more than 6 degrees below the horizon)—
- (1) Operate an aircraft unless it has lighted position lights;
- (2) Park or move an aircraft in, or in dangerous proximity to, a night flight operations area of an airport unless the aircraft—
 - (i) Is clearly illuminated;
 - (ii) Has lighted position lights; or
- (iii) is in an area that is marked by obstruction lights;
- (3) Anchor an aircraft unless the aircraft—
 - (i) Has lighted anchor lights; or
- (ii) Is in an area where anchor lights are not required on vessels; or
- (b) Operate an aircraft that is equipped with an anticollision light system, unless it has lighted anticollision lights. However, the anticollision lights need not be lighted when the pilot-in-command determines that, because of operating conditions, it would be in the interest of safety to turn the lights off.

[Doc. No. 27806, 61 FR 5171, Feb. 9, 1996]

§91.211 Supplemental oxygen.

- (a) General. No person may operate a civil aircraft of U.S. registry—
- (1) At cabin pressure altitudes above 12,500 feet (MSL) up to and including 14,000 feet (MSL) unless the required minimum flight crew is provided with and uses supplemental oxygen for that part of the flight at those altitudes that is of more than 30 minutes duration;
- (2) At cabin pressure altitudes above 14,000 feet (MSL) unless the required minimum flight crew is provided with and uses supplemental oxygen during the entire flight time at those altitudes: and
- (3) At cabin pressure altitudes above 15,000 feet (MSL) unless each occupant of the aircraft is provided with supplemental oxygen.
- (b) Pressurized cabin aircraft. (1) No person may operate a civil aircraft of U.S. registry with a pressurized cabin—
- (i) At flight altitudes above flight level 250 unless at least a 10-minute supply of supplemental oxygen, in addi-

- tion to any oxygen required to satisfy paragraph (a) of this section, is available for each occupant of the aircraft for use in the event that a descent is necessitated by loss of cabin pressurization; and
- (ii) At flight altitudes above flight level 350 unless one pilot at the controls of the airplane is wearing and using an oxygen mask that is secured and sealed and that either supplies oxygen at all times or automatically supplies oxygen whenever the cabin pressure altitude of the airplane exceeds 14,000 feet (MSL), except that the one pilot need not wear and use an oxygen mask while at or below flight level 410 if there are two pilots at the controls and each pilot has a quick-donning type of oxygen mask that can be placed on the face with one hand from the ready position within 5 seconds, supplying oxygen and properly secured and sealed.
- (2) Notwithstanding paragraph (b)(1)(ii) of this section, if for any reason at any time it is necessary for one pilot to leave the controls of the aircraft when operating at flight altitudes above flight level 350, the remaining pilot at the controls shall put on and use an oxygen mask until the other pilot has returned to that crewmember's station.

§91.213 Inoperative instruments and equipment.

- (a) Except as provided in paragraph (d) of this section, no person may take off an aircraft with inoperative instruments or equipment installed unless the following conditions are met:
- (1) An approved Minimum Equipment List exists for that aircraft.
- (2) The aircraft has within it a letter of authorization, issued by the FAA Flight Standards district office having jurisdiction over the area in which the operator is located, authorizing operation of the aircraft under the Minimum Equipment List. The letter of authorization may be obtained by written request of the airworthiness certificate holder. The Minimum Equipment List and the letter of authorization constitute a supplemental type certificate for the aircraft.
- (3) The approved Minimum Equipment List must—