

## § 109.323

whenever overhauled, or at least once every 5 years.

(j) *Maintenance of falls.* (1) Each fall used in a launching appliance must be turned end-for-end at intervals of not more than 30 months and must be renewed when necessary due to deterioration or at intervals of not more than 5 years, whichever is earlier.

(2) As an alternative to paragraph (j)(1) of this section, each fall may be inspected annually and renewed whenever necessary due to deterioration or at intervals of not more than 4 years, whichever is earlier.

(k) *Rotational deployment of marine evacuation systems.* In addition to or in conjunction with the servicing intervals of marine evacuation systems required by paragraph (g)(1) of this section, each marine evacuation system must be deployed from the unit on a rotational basis. Each marine evacuation system must be deployed at least once every 6 years.

[CGD 84-069, 61 FR 25301, May 20, 1996, as amended by CGD 85-205, 62 FR 35392, July 1, 1997; CGD 84-069, 63 FR 52816, Oct. 1, 1998; USCG-2001-11118, 67 FR 58541, Sept. 17, 2002]

### § 109.323 Manning of survival craft and supervision.

(a) There must be a sufficient number of trained persons on board the survival craft for mustering and assisting untrained persons.

(b) There must be a sufficient number of deck officers, able seamen, or certificated persons on board to operate the survival craft and launching arrangements required for abandonment by the total number of persons on board.

(c) There must be one person placed in charge of each survival craft to be used. The person in charge must—

(1) Be a deck officer, able seaman, or certificated person. The OCMI, considering the number of persons permitted on board, and the characteristics of the unit, may permit persons practiced in the handling and operation of liferafts or inflatable buoyant apparatus to be placed in charge of liferafts or inflatable buoyant apparatus;

(2) Have another person designated second-in-command of each lifeboat permitted to carry more than 40 persons. This person should be a deck offi-

## 46 CFR Ch. I (10-1-06 Edition)

cer, able seaman, or certificated person; and

(3) Have a list of the survival craft crew and must see that the crewmembers are acquainted with their duties. The second-in-command of a lifeboat must also have a list of the lifeboat crew.

(d) There must be a person assigned to each motorized survival craft who is capable of operating the engine and carrying out minor adjustments.

(e) The person in charge must make sure that the persons required under paragraphs (a), (b), and (c) of this section are equitably distributed among the unit's survival craft.

[CGD 84-069, 61 FR 25302, May 20, 1996]

### § 109.329 Fire pumps.

The master or person in charge shall insure that at least one of the fire pumps required in § 108.415 is ready for use on the fire main system at all times.

### § 109.331 Firehoses and hydrants.

The master or person in charge shall insure that—

(a) At least one length of firehose with a combination nozzle is connected to each fire hydrant required by this subchapter, at all times, except that during heavy weather a firehose in an exposed location may be temporarily removed from the fire hydrant and stowed in an accessible, nearby location;

(b) A fire hose required by this subchapter is not used for any purpose other than firefighting, fire drills, and testing;

(c) Access to each fire hydrant is not blocked;

(d) Each firehose, except a firehose temporarily removed from an exposed location, is stowed on a rack or reel required by this subchapter; and

(e) Each low velocity spray applicator for a fire hose nozzle is attached to the nozzle or stowed next to the fire hydrant to which the fire hose is attached.

### § 109.333 Fire main cutoff valves.

The master or person in charge shall insure that each fire main cutoff valve is open and sealed to prevent closing, except that a cutoff valve may be