## **Driver Out-of-Service Rate (OOS)**

The driver out-of-service rate is calculated using inspections of drivers approved to be utilized in the U.S.-Mexico Cross-Border Trucking Pilot Program from the date the motor carrier was granted authority to participate in the Program.

This driver out-of-service rate may be different than the motor carrier's overall driver out-of-service rate.

## Type of Inspections included in the calculation:

Level 1

Level 2

Level 3

## **Calculation:**

(Number of OOS Violations ÷ Number of Inspections) x 100 = Driver OOS Rate

Example:  $(1 \div 26) \times 100 = 3.85\%$