

Vehicle Out-of-Service Rate (OOS)

The vehicle out-of-service rate is calculated using inspections of vehicles approved for use in the U.S.-Mexico Cross-Border Trucking Pilot Program from the date the motor carrier was granted authority to participate in the Program.

This vehicle out-of-service rate may be different than the motor carrier's overall vehicle out-of-service rate.

Type of Inspections included in the calculation:

Level 1

Level 2

Level 5

Calculation:

$(\text{Number of OOS Violations} \div \text{Number of Inspections}) \times 100 = \text{Vehicle OOS Rate}$

Example: $(1 \div 11) \times 100 = 9.09\%$