


## HOW TO SET UP A AZDEN WIRELESS SYSTEM



1. Remove the hotshoe tab at the top of the camera.

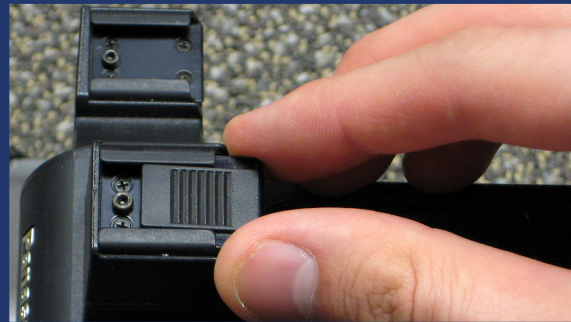

(Wireless receiver)




2. Check and/or replace the 9-volt batteries in the wireless receiver and microphone. When replacing the 9-volt battery, **BE CAREFUL NOT TO FORCE THE BATTERY COMPARTMENT CLOSED**. If it doesn't close easily, take the battery out and turn it around. Then mount the wireless receiver to the hotshoe. (Pictured above)

(For use with PANASONIC AGDVC10 / AGDVC15 cameras only)



## HOW TO SET UP A AZDEN WIRELESS SYSTEM

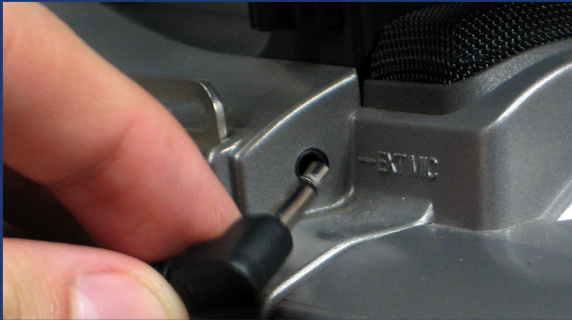

3. The "EXT MIC" input is located below the hotshoe. Now, plug the wireless receiver into the "EXT MIC" input on the camera. Next, fully extend the telescopic antenna for the best reception.



4. The side switch is used to turn the system on and off and to select a frequency. Turn on the wireless receiver to F1, the LED will light up indicating that the battery is good and the Transmitter is functioning properly. If you find the reception to be noisy on F1, change the position of the switch to F2. Make sure that the receiver is on the same frequency as the transmitter. When the LED light is green the system is working and the setup is complete.

**(For use with PANASONIC AGDVC10 / AGDVC15 cameras only)**