


Issues with Arsenic Containing Wastes in Modern Landfills

Timothy G. Townsend, PhD, PE

Department of Environmental Engineering Sciences
University of Florida

October 3-4, 2006
Boston, Massachusetts

Arsenic In Landfills: Protecting Water Quality

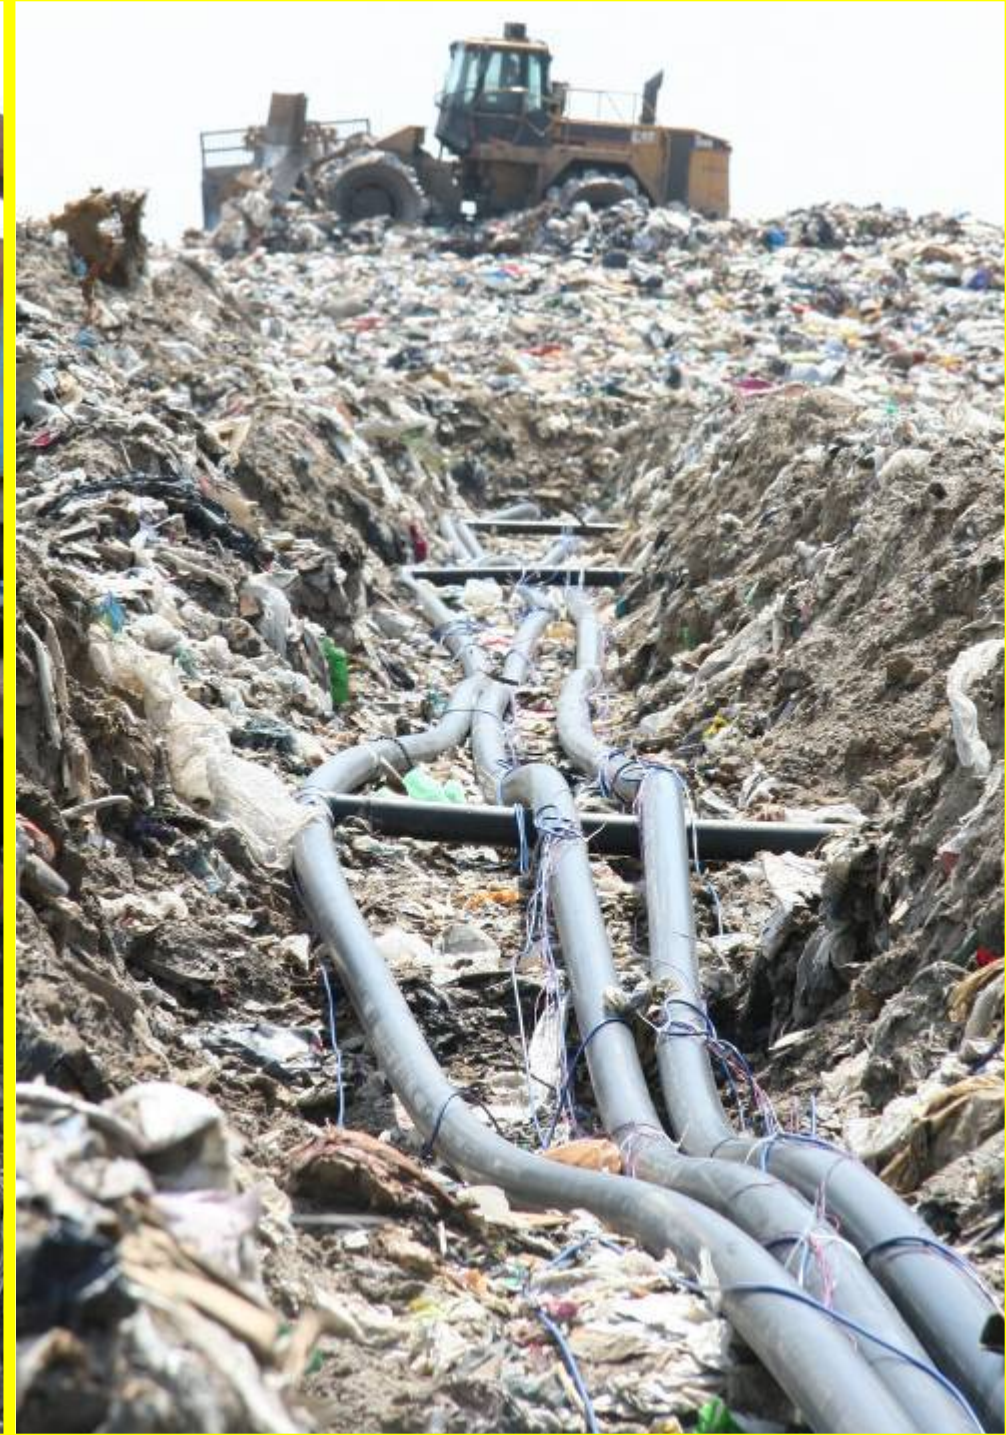



Topics

- Types of landfills
 - Regulations
 - Engineering Controls
 - Chemical environments
- Toxic chemicals in landfills
 - Concerns for the landfill operator
 - Lessons learned

Types of Landfills


- Hazardous waste landfills
- Municipal solid waste landfills
- Other types
 - Construction and demolition debris
 - Industrial waste landfills

Hazardous Waste Landfills: RCRA Subtitle C Landfill (40 CFR 264)



Typical Subtitle C Liner

Double Liner

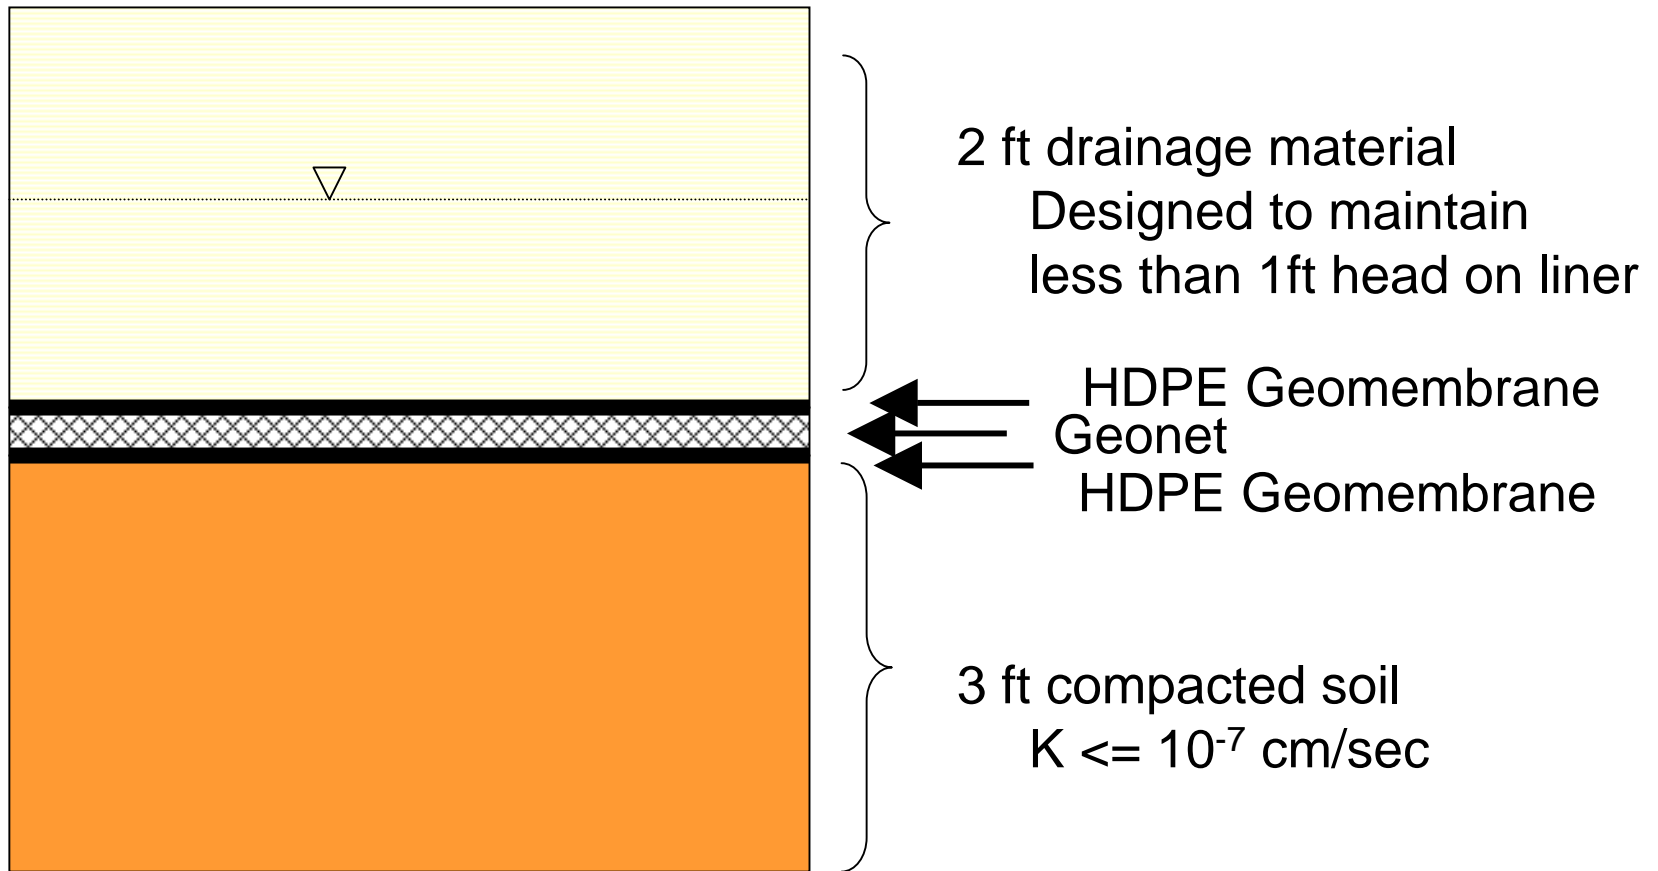


MSW Landfills: RCRA Subtitle D Landfill (40 CFR 258)



Typical Subtitle D Liner

Single Composite Liner

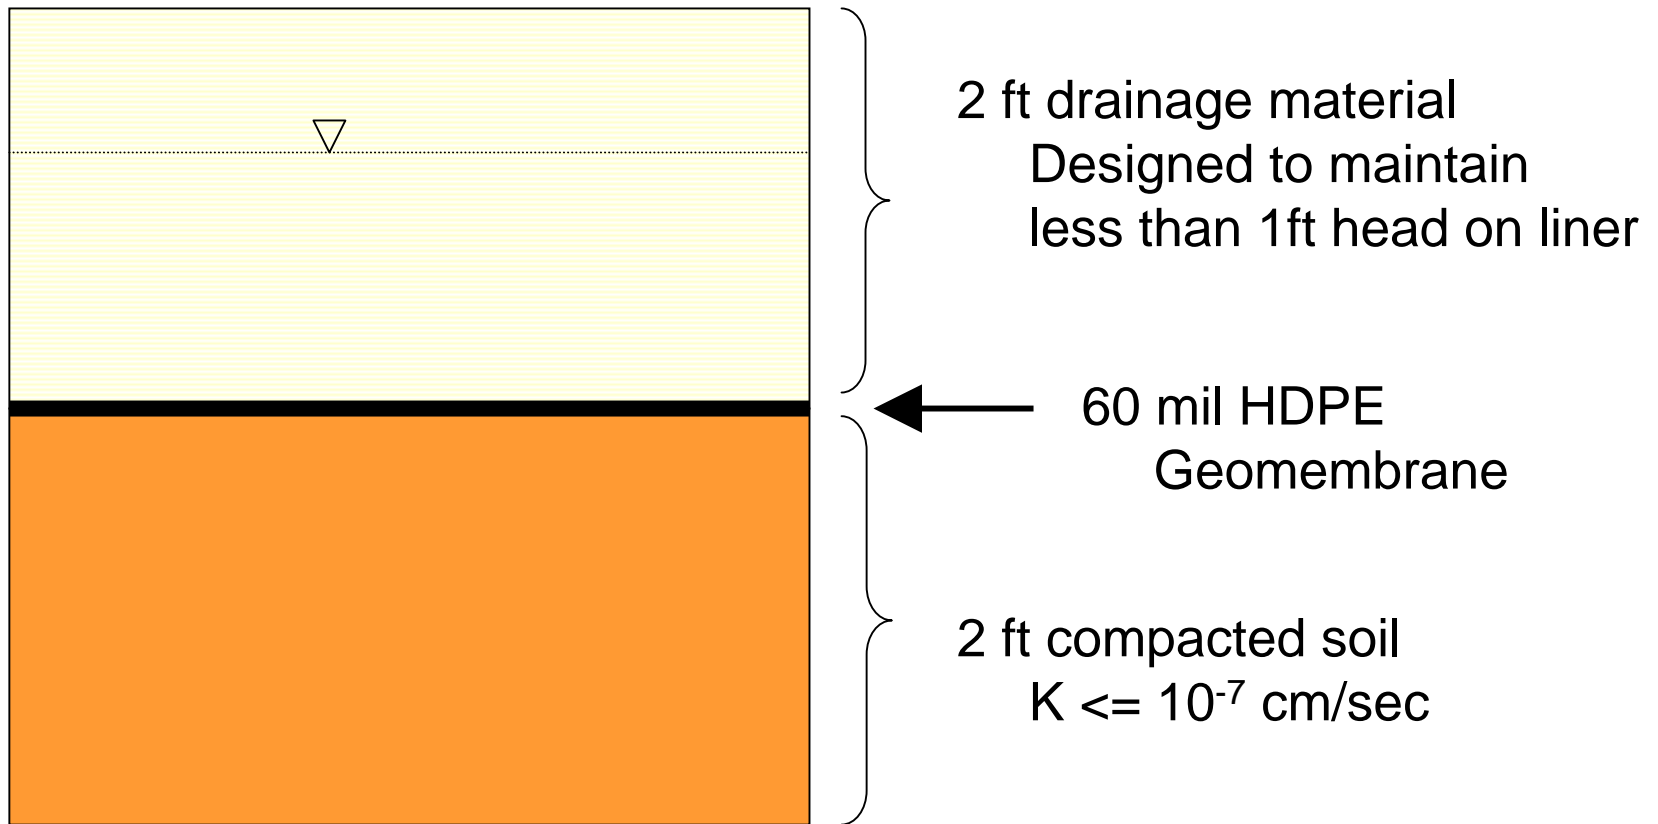














Leachate is then sent to Treatment and/or Storage Facility

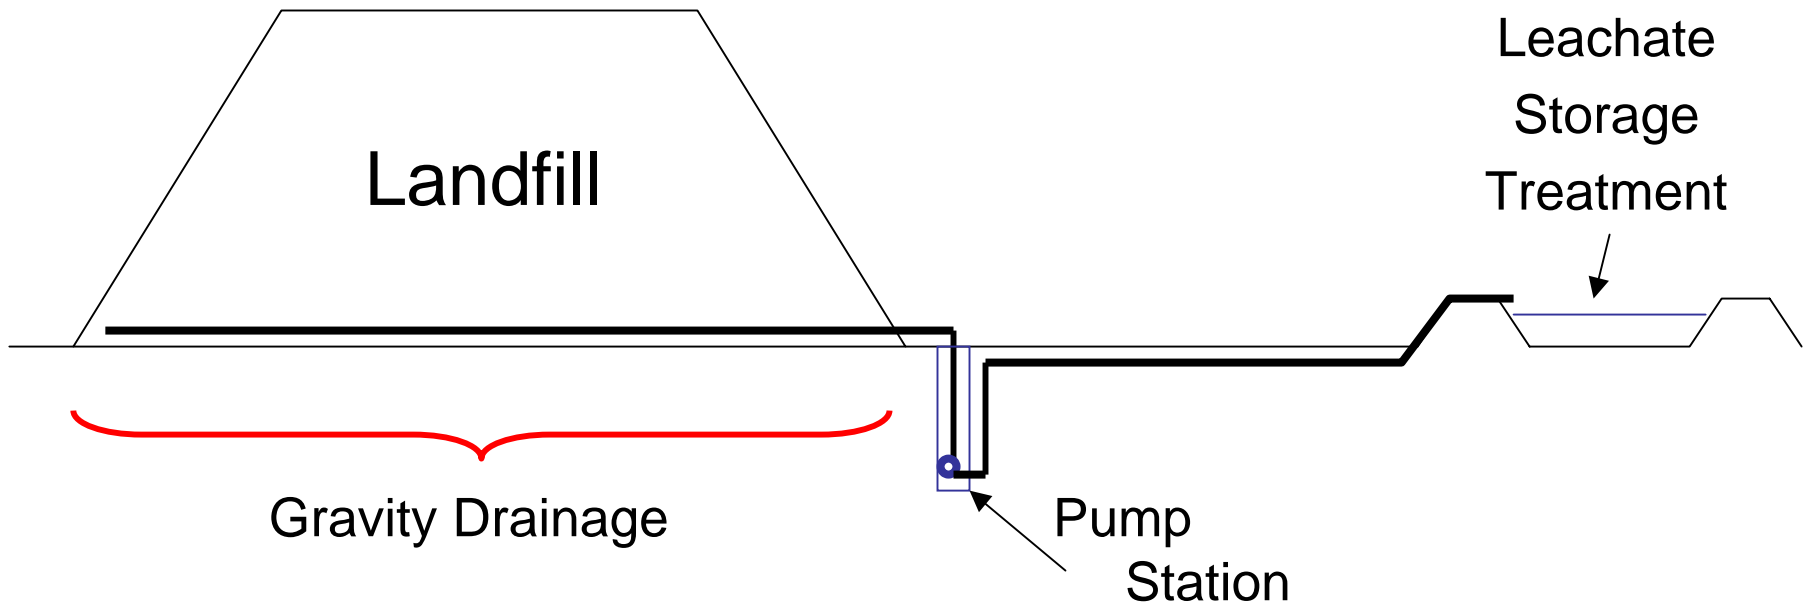





Lined Leachate Lagoon



Lined Leachate Lagoon


Leachate Storage Tank



Leachate Storage/Treatment Tanks



Leachate Treatment Plant

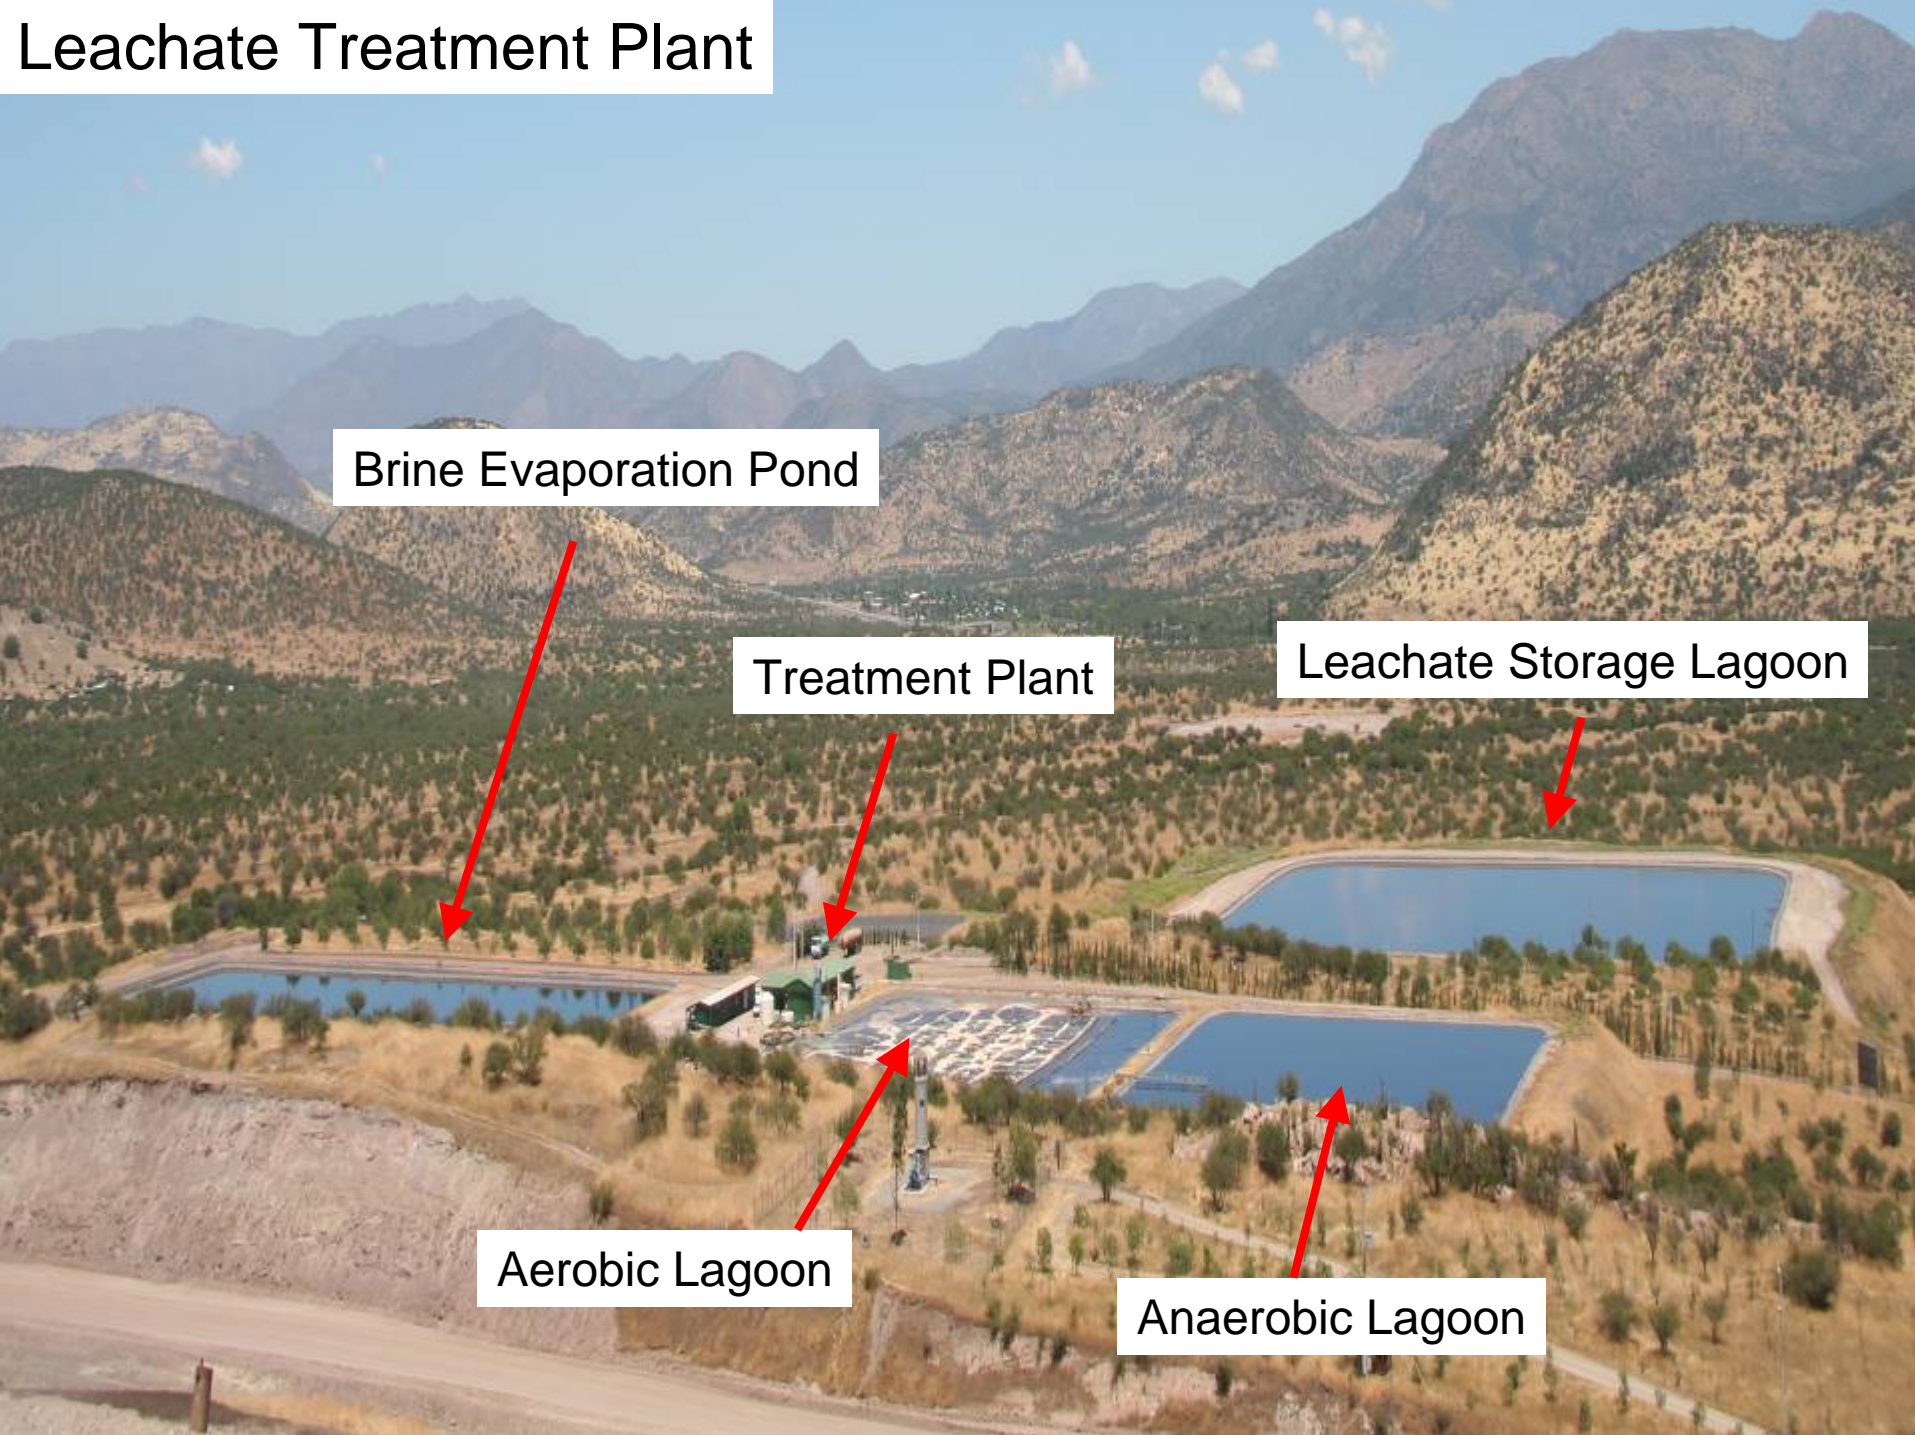

Brine Evaporation Pond

Treatment Plant

Leachate Storage Lagoon

Aerobic Lagoon

Anaerobic Lagoon

Aerobic Treatment Lagoon



Reverse Osmosis Treatment



Leachate Treatment Using Wetlands




Leachate Recirculation to Landfill using Spray Irrigation




Leachate Recirculation to Landfill using Horizontal Trenches




Waste Stabilization in MSW Landfills

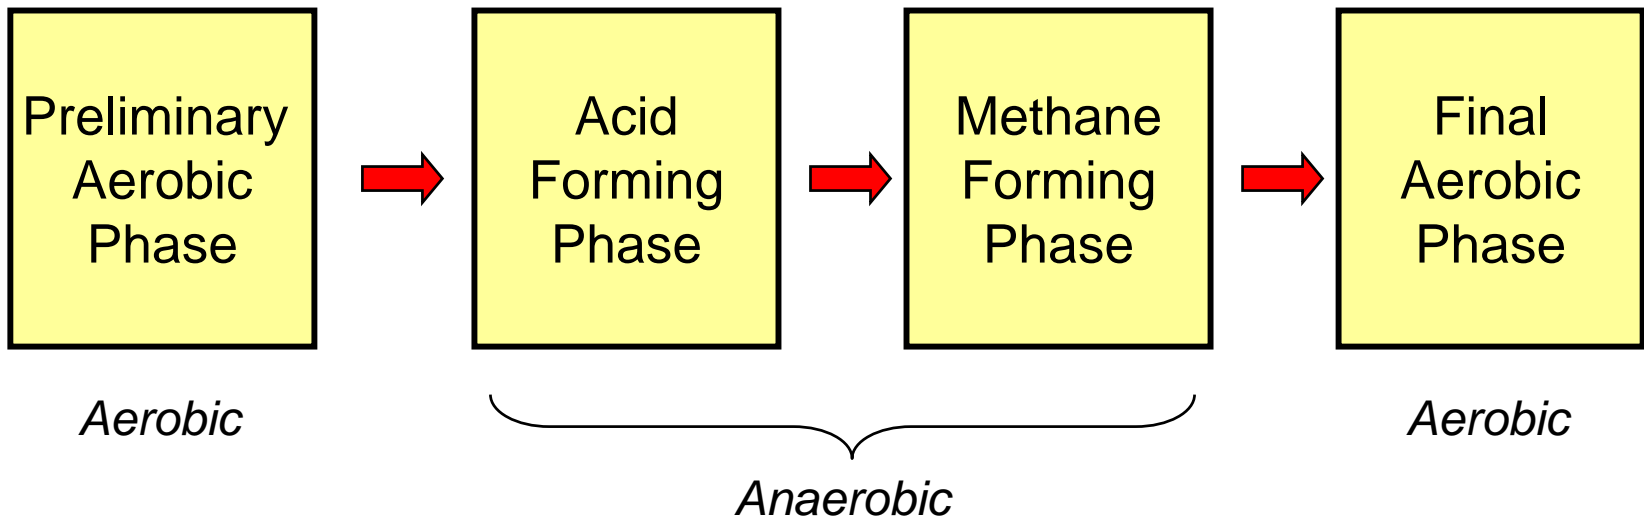


Waste Stabilization in MSW Landfills

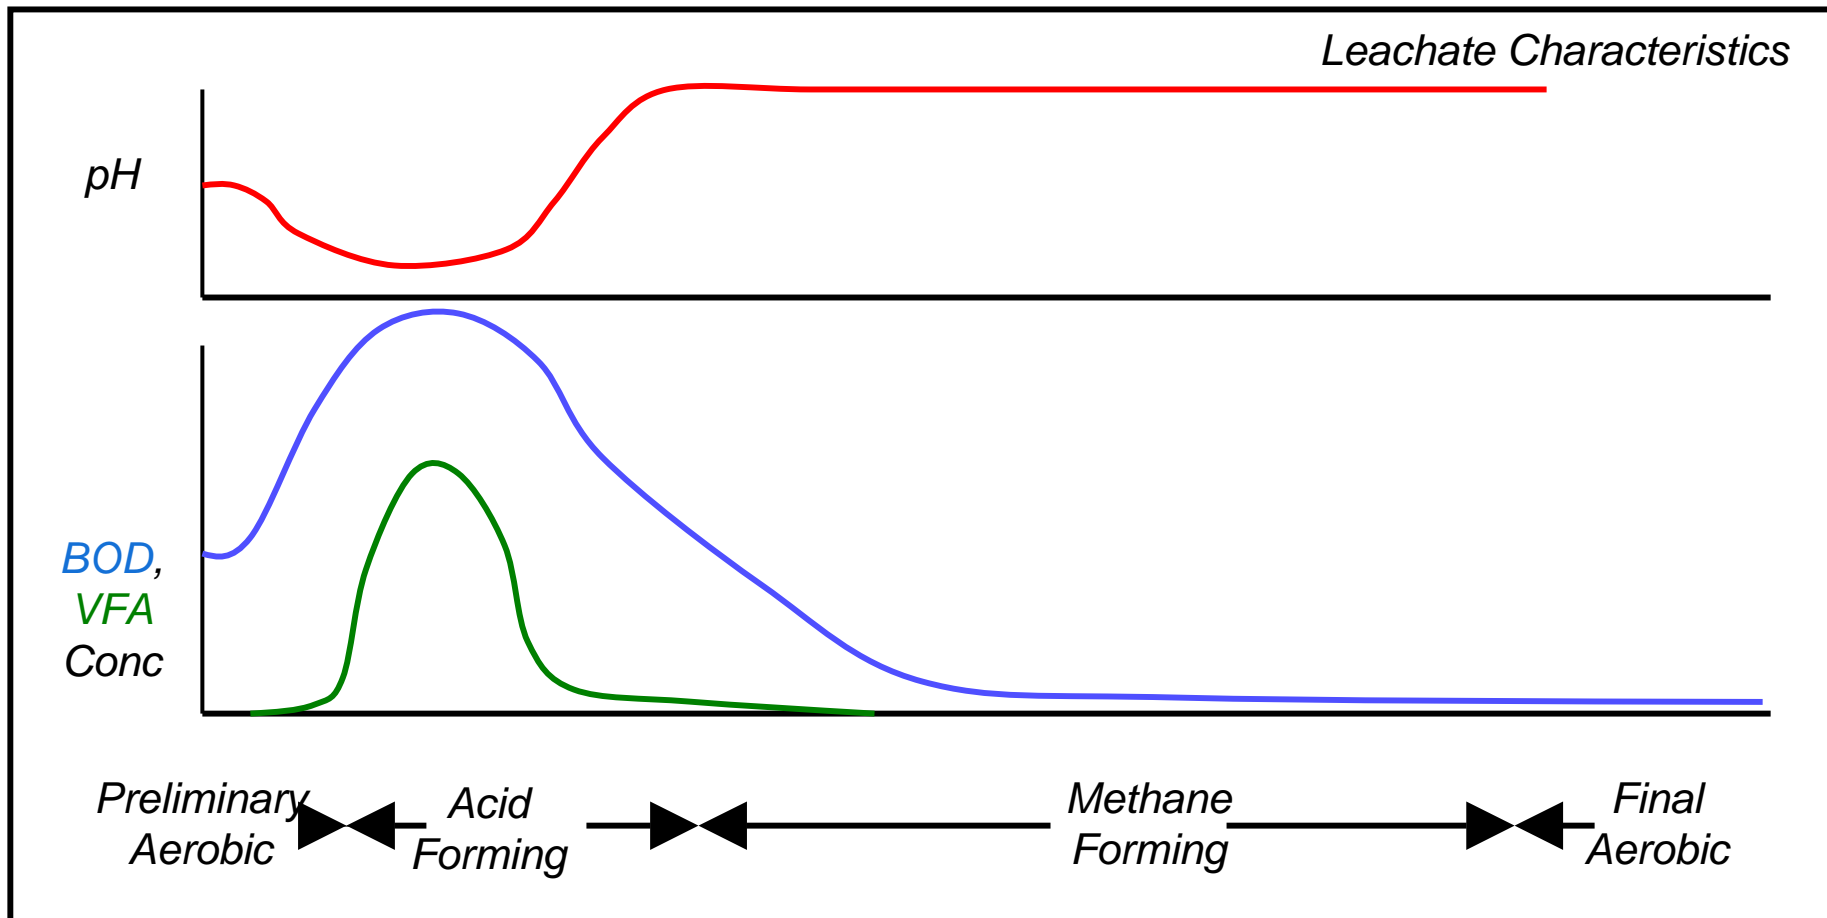

Cadmium Concentrations in MSW Landfill Leachate

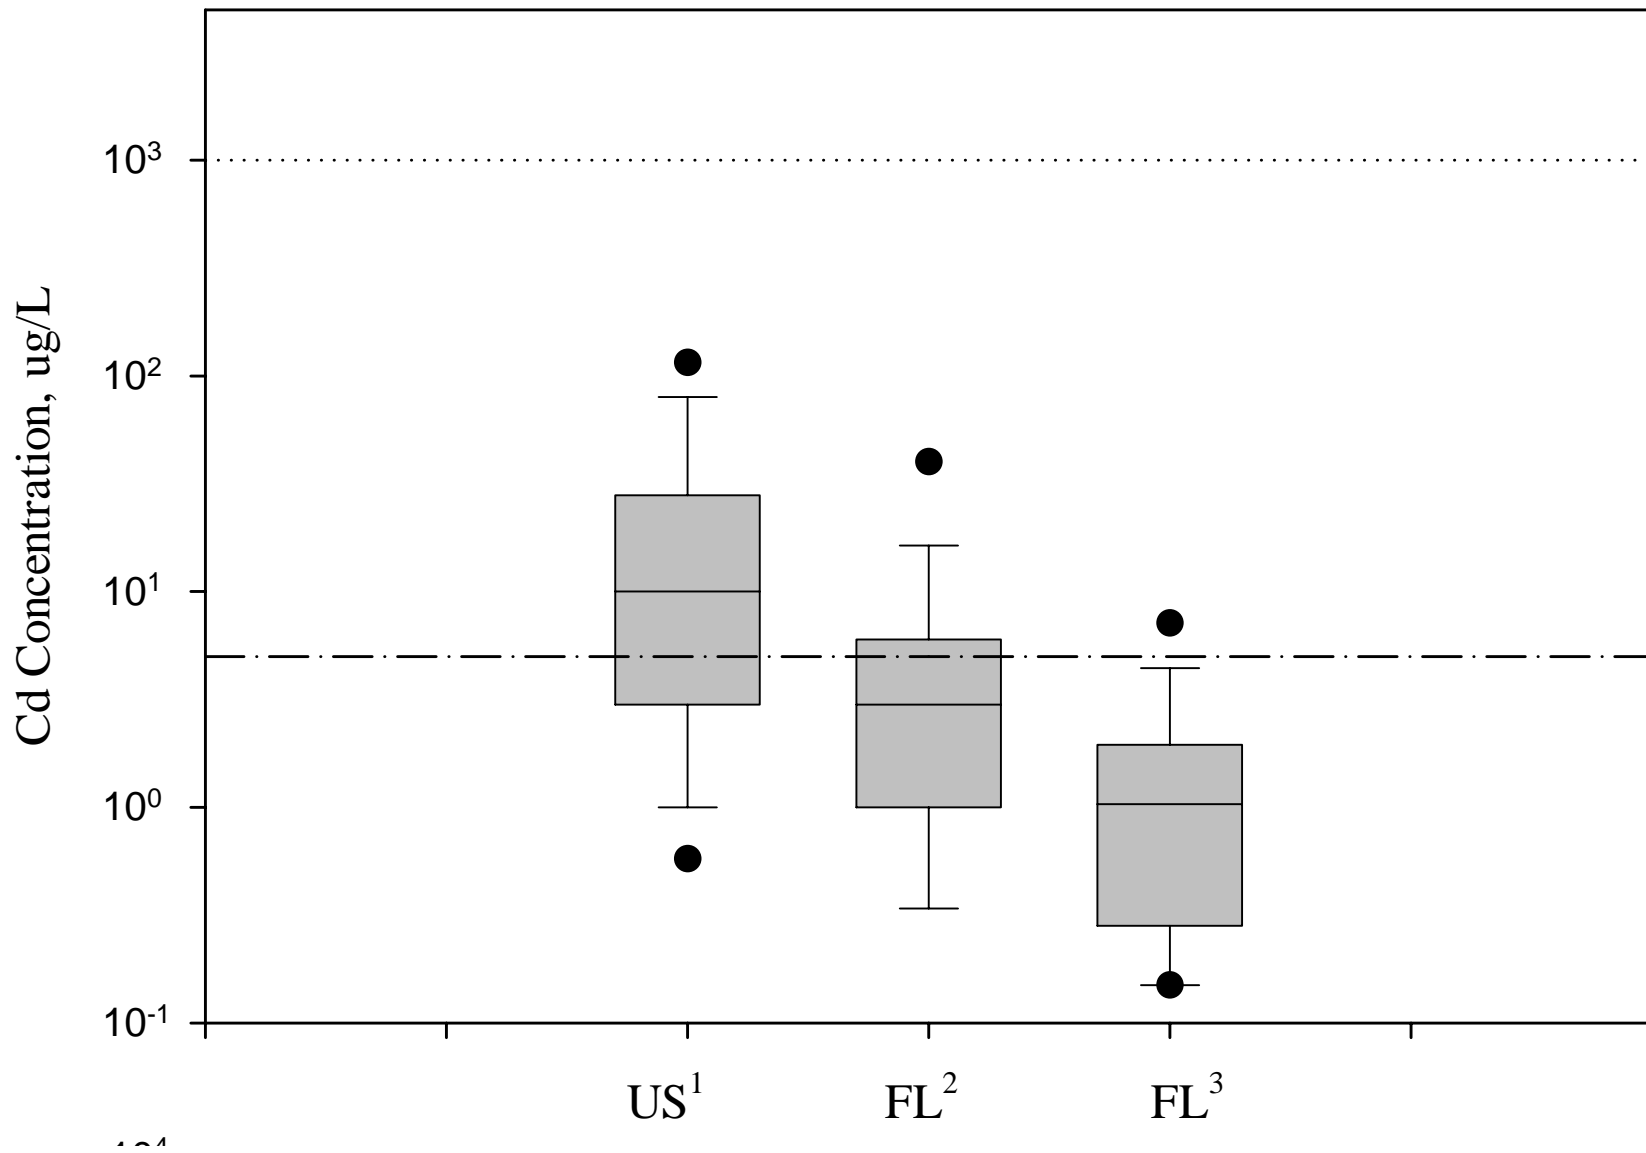

Arsenic Concentrations in MSW Landfill Leachate

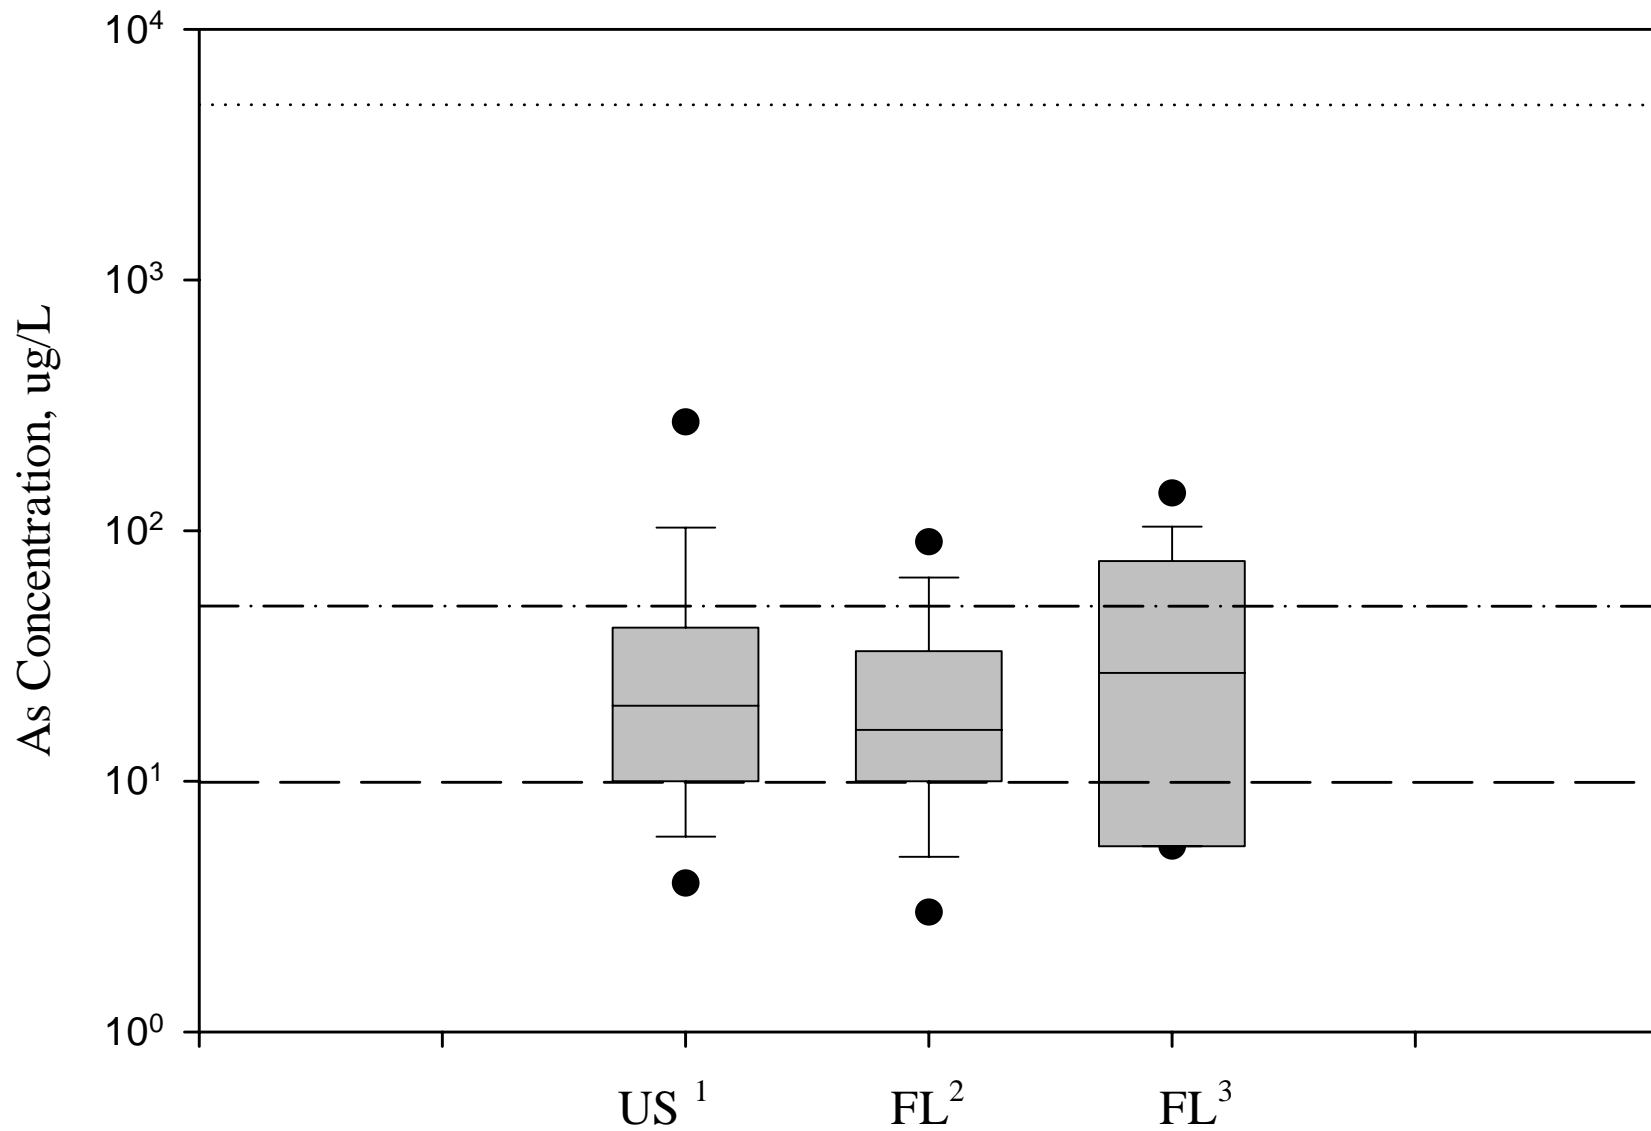

Other Landfill Types

- Construction and demolition (C&D) debris landfills
- Industrial waste landfills

C&D Debris Landfill



Approximately ½ of states have liner requirements

Unlined Landfill for Hurricane Katrina Debris





Issues Facing Landfill Operators when Accepting Any Waste

- Is the waste hazardous or otherwise prohibited?
- Is this waste a bulk liquid?



TCLP



Paint Filter Test

What about wastes that may be
legally disposed but do contained
toxic trace constituents

Lead-Based Paint



Mercury Lamps



Treated Wood



Wood Ash



WTE Ash





Discarded Electronic Devices



Drinking Water Sludge




If the waste is not hazardous,
and the landfill is lined with the
leachate going to a POTW, then
why do we care?

Potential Problems Posed

- Impact on leachate quality
- Impact on gas quality (e.g., Hg)
- Impact on waste decomposition
- Long-term operation issues

Impact on Waste Decomposition

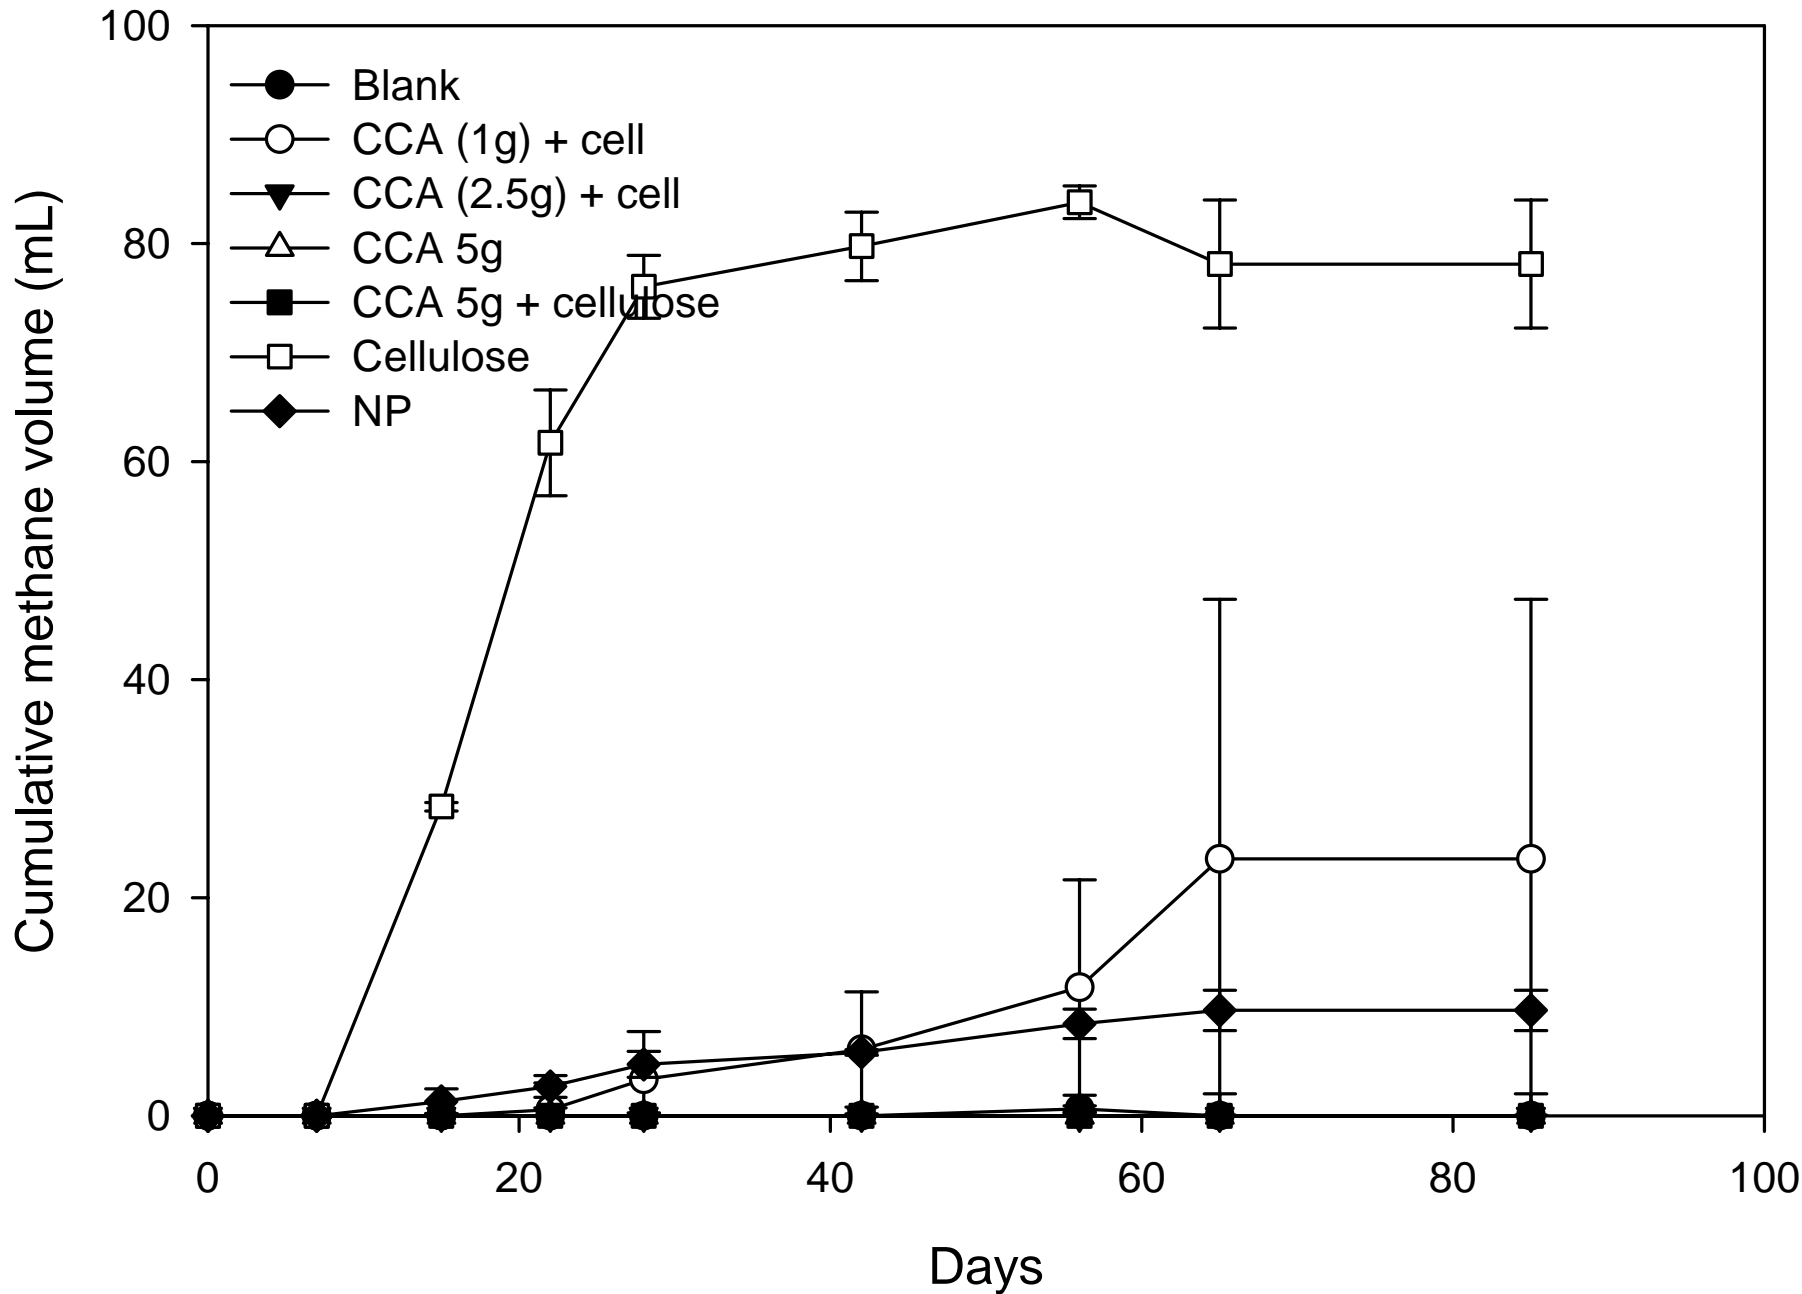

Implication of Elevated Leachate Concentrations

- Leachate concentrations can limit leachate management options
 - POTW pretreatment requirements
- Several sites in Florida encountered problems because of elevated concentrations of arsenic in the leachate

Factors to be Considered


- Leachability
- Rainfall and amount of leachate
- Fraction in the landfill

Important Point


- A majority of the waste in modern landfills stays dry



Incorrect Perception

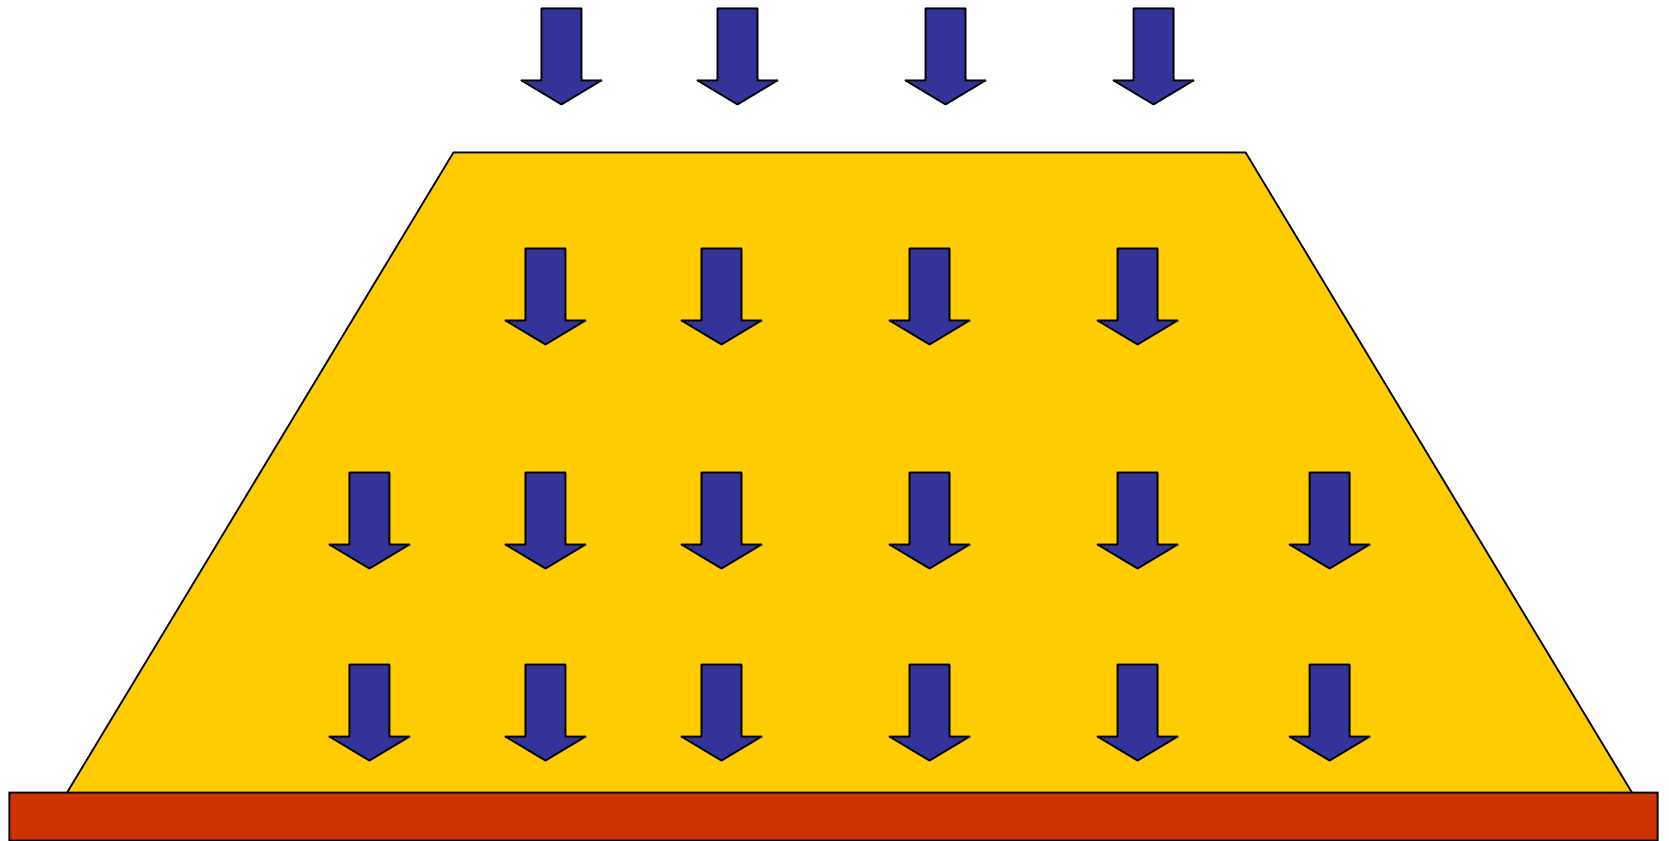


More Accurate Perception

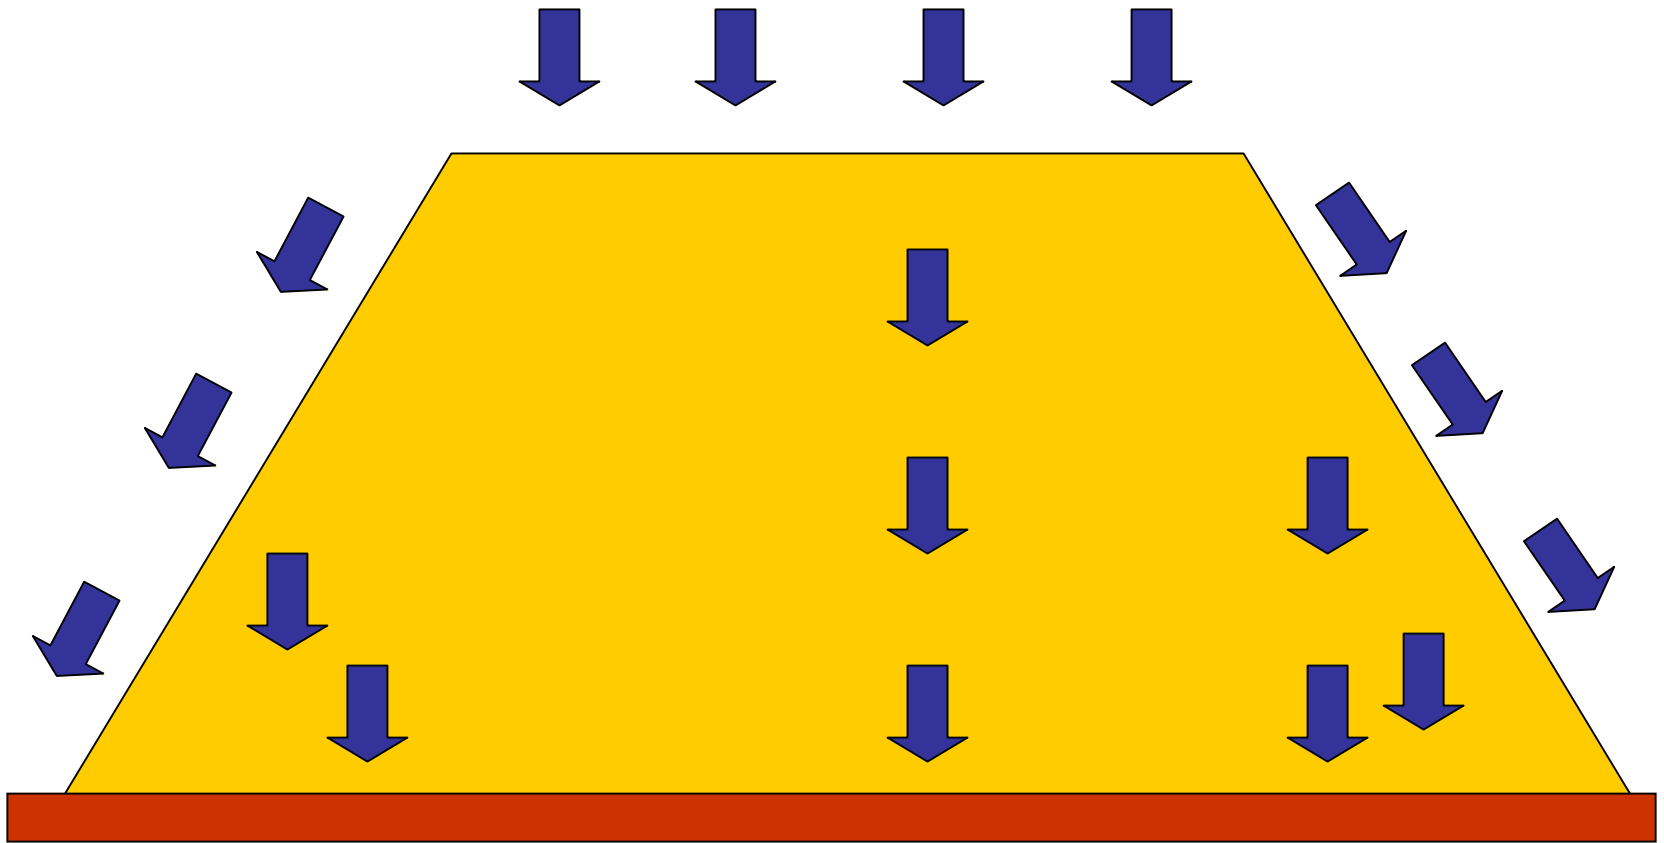


Concerns over Increased Chemical Concentrations

- Leaching tests such as TCLP can be conducted to assess potential problems
 - Several studies show that TCLP may not be reflective of leaching that will occur in a landfill for some wastes.
 - TCLP does not always under predict leaching.

Leaching in MSW LF Leachate

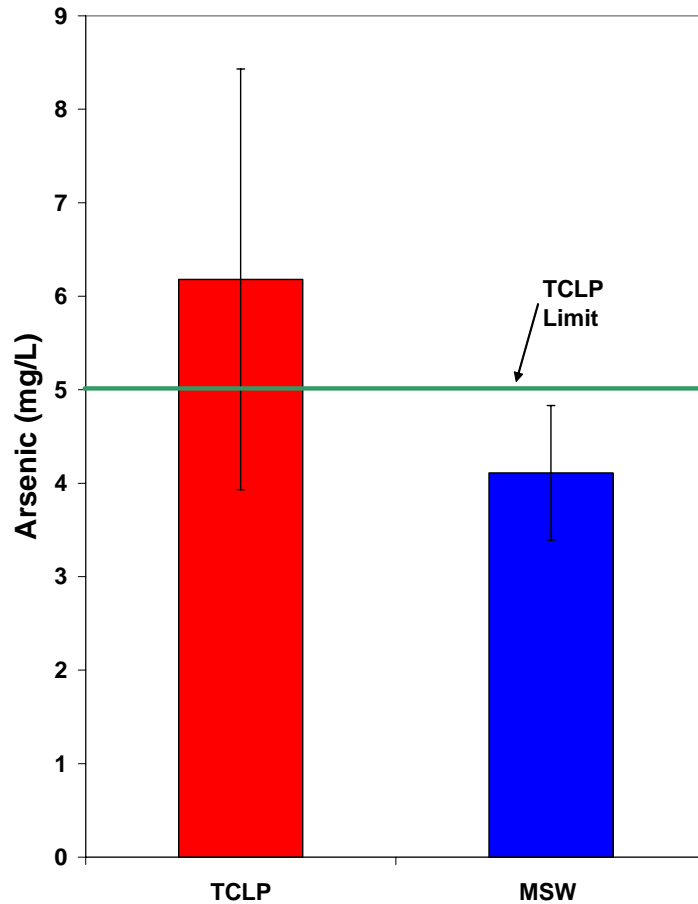

CCA-Treated Wood

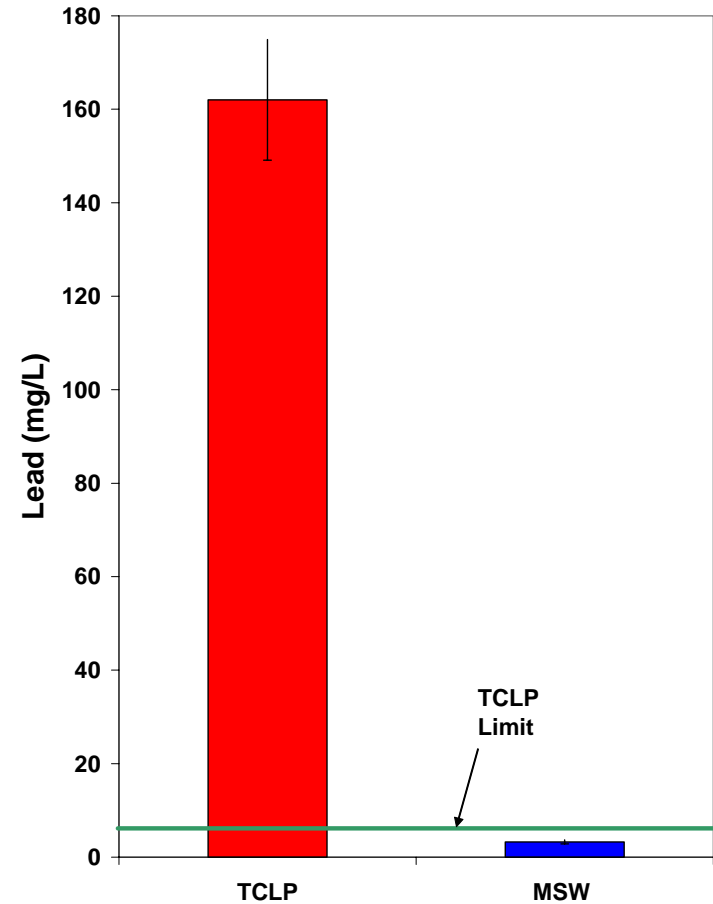

Printed Wire Boards

Many Reasons for the Difference

- pH
- Leachate chemistry
- Redox conditions
- Interactions with waste and other chemicals in leachate
 - Precipitation
 - Sorption

Simulated Landfills











SPEED
LIMIT
5

ALL WORKERS
MUST WEAR
HARD HATS
WHILE IN
THE WORK AREA





CCA

Lead based paint

ACQ





RECYCLING

000071

Cell Phones






Water distribution system




Box Plot of Leachate Lead Concentrations


(Leachates with pH less than 7 in cyan, pH greater than 7 in yellow)

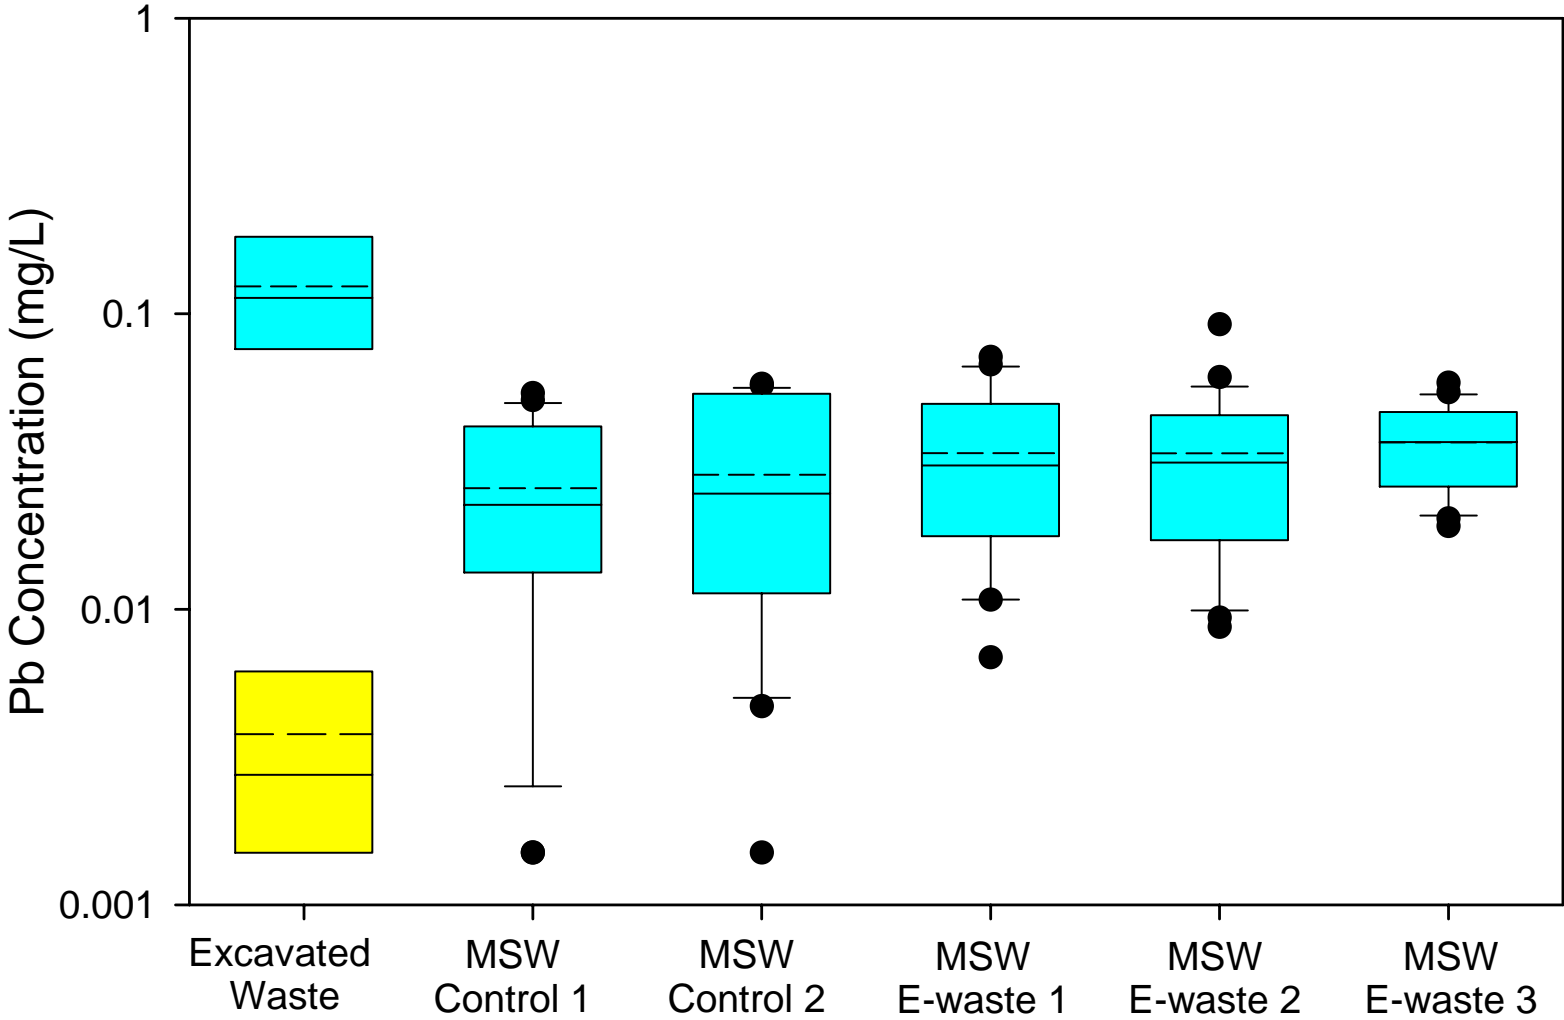

Arsenic vs. Time in C&D Lysimeter Leachate

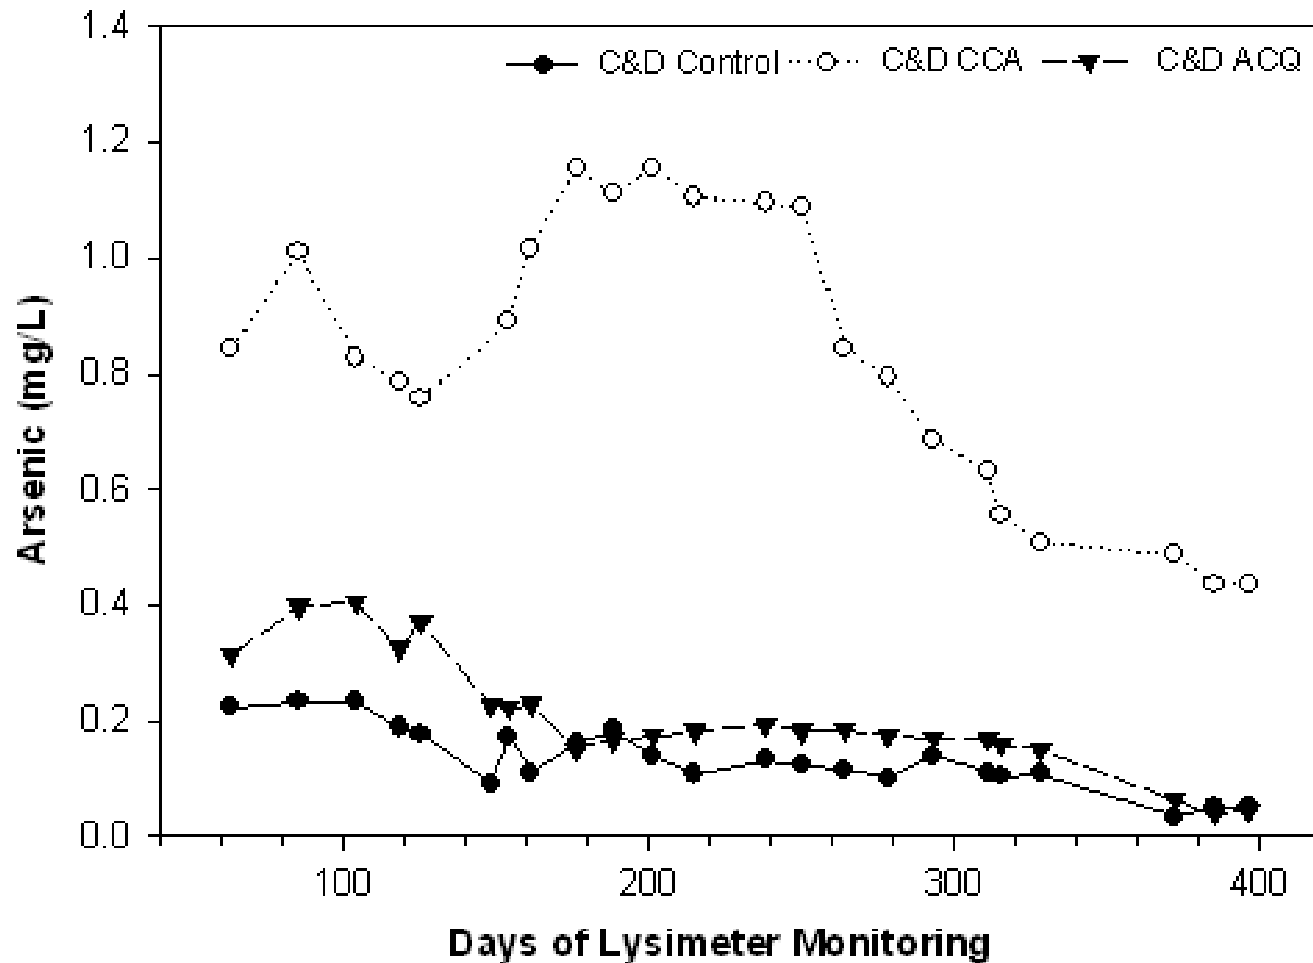


Arsenic Concentration in CCA Lysimeter Leachates from Three C&D Lysimeter Projects

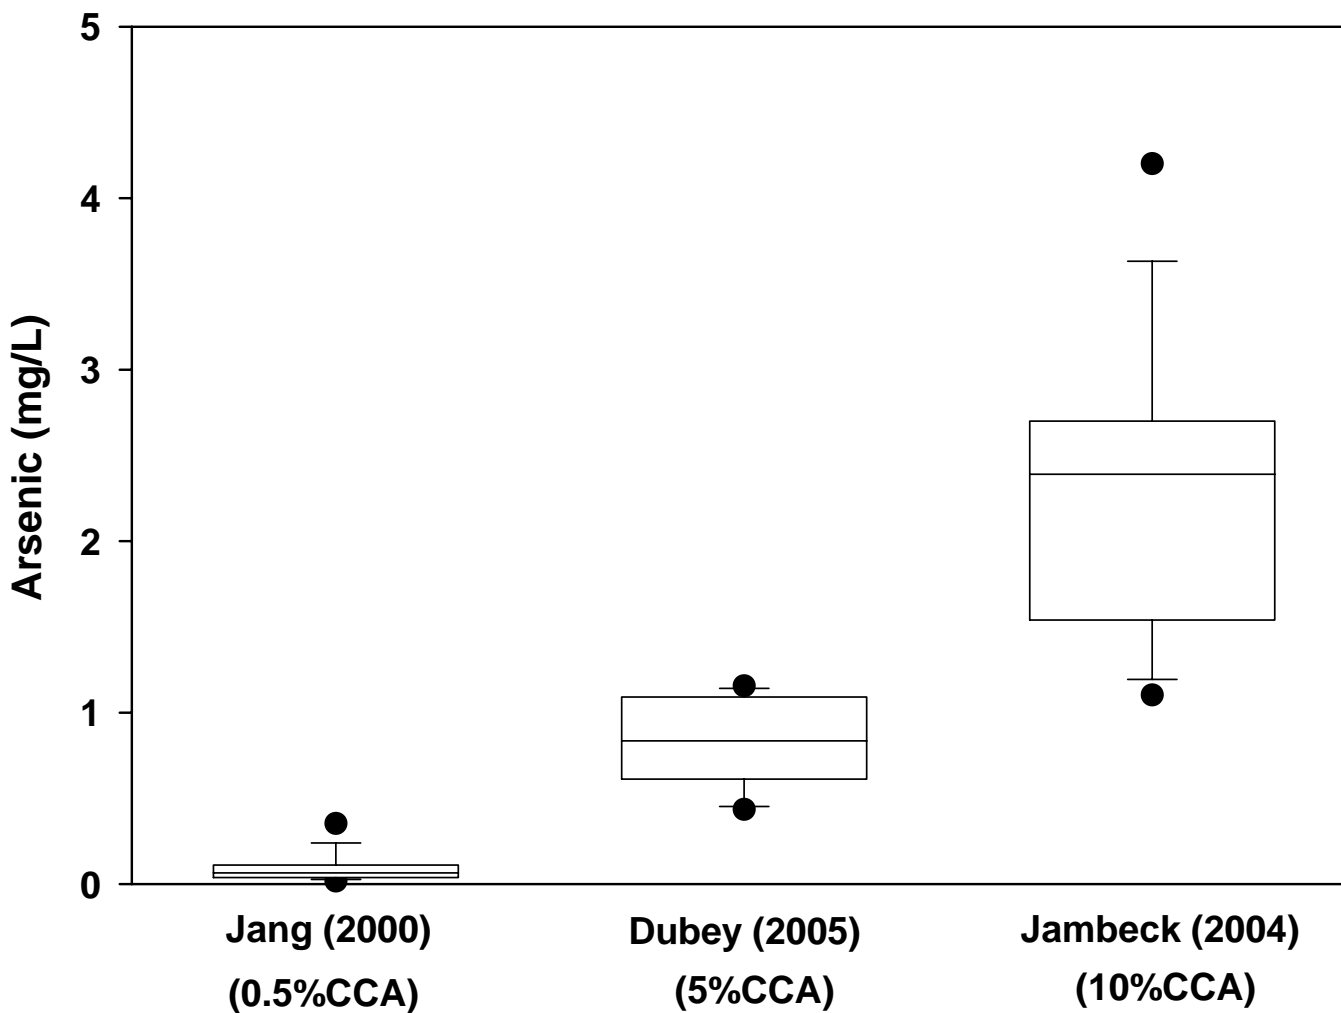


Current Situation with CCA-Treated Wood in Florida

- CCA-treated wood leaches enough arsenic to be characterized as a hazardous waste if not otherwise excluded in the regulations
- CCA-treated wood is currently allowed to be disposed in unlined C&D debris landfills in Florida
- The FDEP is developing new rules that would require unlined disposal facilities to identify and remove CCA-treated wood prior to disposal

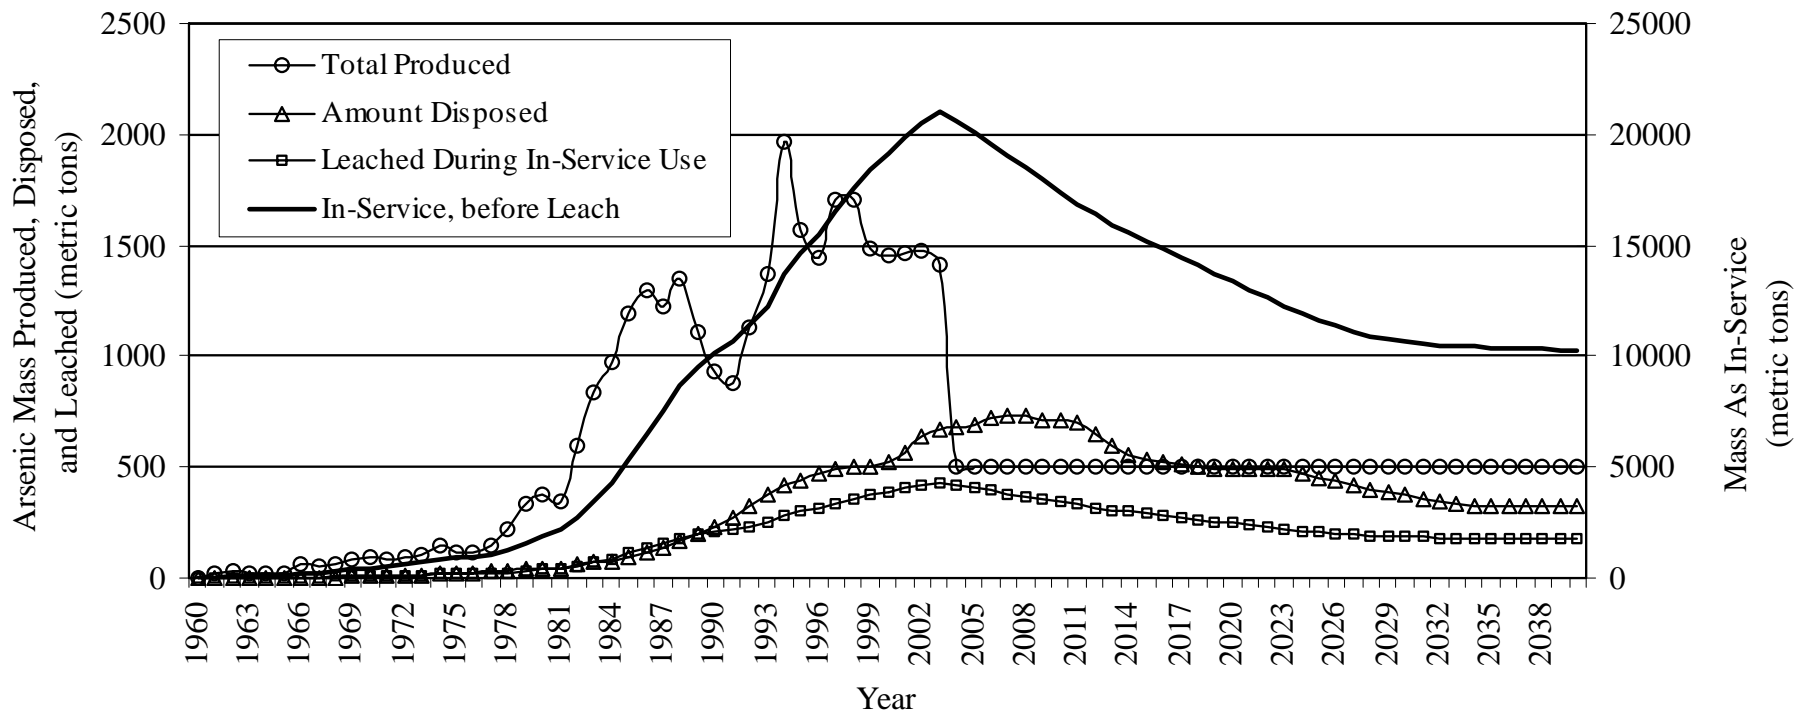

Yearly mass of arsenic associated with the production, disposal, and in-service leaching of CCA-treated wood products imported to Florida. Amount of arsenic associated with structures in-service also shown for reference.

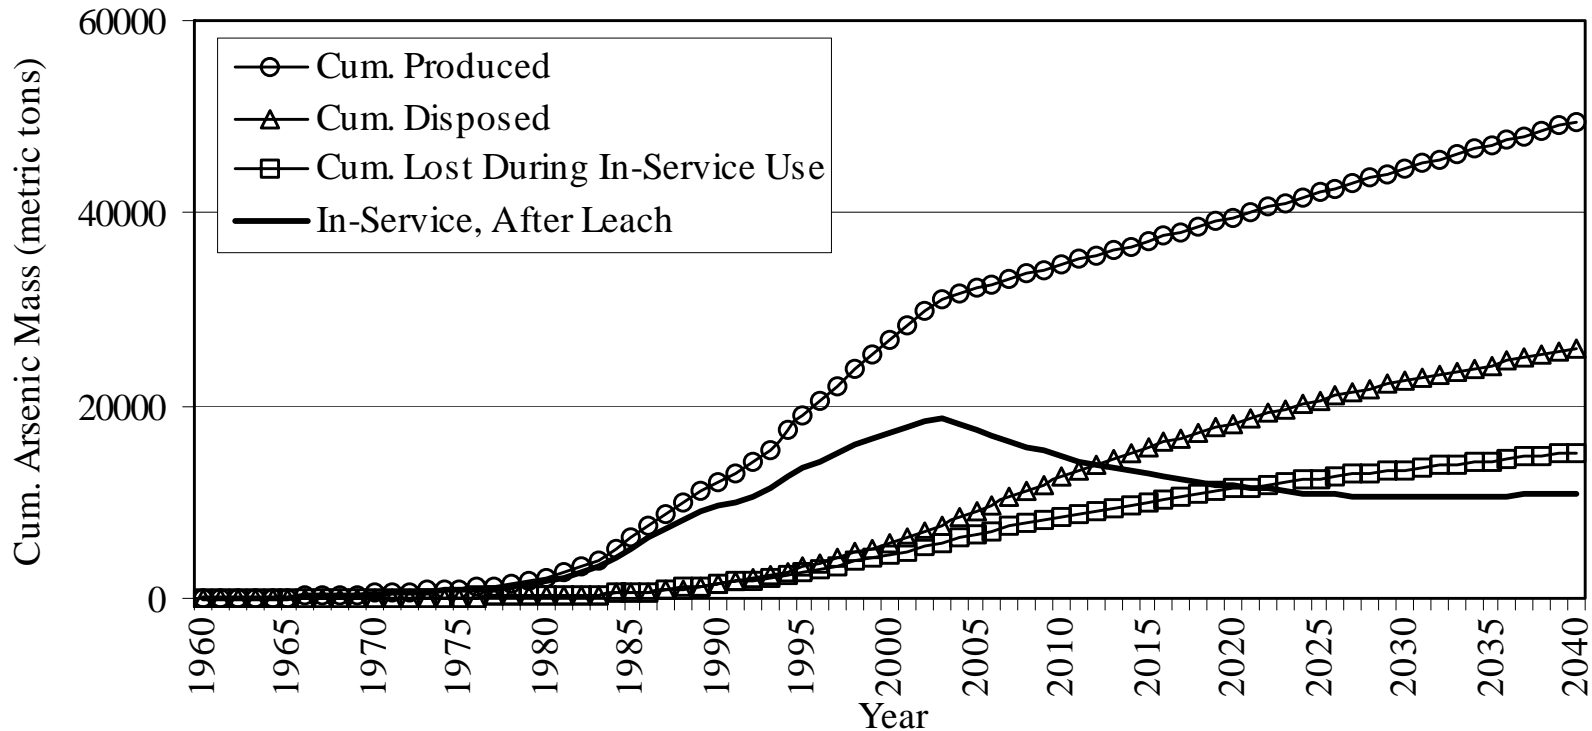

Cumulative mass of arsenic associated with CCA-treated wood production, disposal, and in-service leaching. The estimated amounts of arsenic associated with structures in-service also shown for reference.

