



Sample Collection Procedures for Radiochemical Analytes in Environmental Matrices

Office of Research and Development

National Homeland Security
Research Center



Sample Collection Procedures for Radiochemical Analytes in Environmental Matrices

U.S. Environmental Protection Agency
Office of Research and Development
National Homeland Security Research Center
26 West Martin Luther King Drive
Cincinnati, Ohio 45268

December 2006



Recycled/Recyclable
Printed with vegetable-based ink on
paper that contains a minimum of
50% post-consumer fiber content
processed chlorine free

Disclaimer

This document has been reviewed by the U.S. Environmental Protection Agency's (EPA) National Homeland Security Research Center, National Decontamination Team, Radiation and Indoor Environmental National Laboratory, and Regions 2 and 7. Neither the U.S. Government, nor any of its employees, contractors, or their employees make any warranty, expressed or implied, or assume any legal liability or responsibility for any third party's use of any information, apparatus, products, or process described. Mention of company names, trade names, or commercial products in this document does not constitute endorsement or recommendation for use.

Table of Contents

| | |
|---|---------------|
| MODULE I – GENERAL INFORMATION | I – 1 |
| 1.0 Introduction..... | I – 1 |
| 1.1. SCOPE AND APPLICATION | I – 1 |
| 1.2. SAMPLE COLLECTION PLAN (SCP)..... | I – 1 |
| 1.3. PREPARATION | I – 2 |
| 1.4. SAMPLING PHASES | I – 3 |
| 1.5. SAMPLING LOCATIONS | I – 3 |
| 1.6. SAFETY CONSIDERATIONS, PERSONNEL PROTECTIVE EQUIPMENT (PPE), AND FIRST AID | I – 3 |
| 2.0 Equipment and Materials | I – 5 |
| 2.1. GENERAL REQUIREMENTS | I – 5 |
| 2.2. SAMPLING EQUIPMENT | I – 5 |
| 2.3. CLOSURES AND SEALS | I – 12 |
| 2.4. SAMPLING EQUIPMENT DECONTAMINATION | I – 13 |
| 2.5. COMMUNICATIONS | I – 14 |
| 3.0 Quality Control | I – 14 |
| 3.1. FIELD BLANKS | I – 14 |
| 3.2. RINSATE BLANKS | I – 14 |
| 3.3. FIELD REPLICATES | I – 15 |
| 3.4. BACKGROUND SAMPLES | I – 15 |
| 3.5. EQUIPMENT | I – 15 |
| 3.6. SAMPLE CONTROL | I – 16 |
| 4.0 Documentation..... | I – 17 |
| 4.1. GENERAL CONSIDERATIONS | I – 17 |
| 4.2. SAMPLE LABELS | I – 17 |
| 4.3. SAMPLE IDENTIFICATION CODES (SICs) | I – 18 |
| 4.4. FIELD LOGBOOKS | I – 18 |
| 4.5. FIELD SAMPLE TRACKING FORM..... | I – 18 |
| 4.6. CHAIN OF CUSTODY | I – 19 |
| 4.7. VERBAL DISCUSSIONS..... | I – 20 |
| 4.8. TRANSPORT DOCUMENTS | I – 20 |
| 5.0 Personnel/Equipment Decontamination | I – 21 |
| 5.1. SURFACE CONTAMINATION | I – 21 |
| 5.2. PERSONNEL AND EQUIPMENT DECONTAMINATION | I – 21 |
| 5.3. DRY, WET AND CHEMICAL WIPING | I – 21 |
| 5.4. DECONTAMINATION OF PUMPS AND HOSES | I – 21 |
| 5.5. WASHING AND RINSING | I – 22 |
| 6.0 Waste Control..... | I – 22 |
| 6.1. GENERAL | I – 22 |
| 6.2. SOLIDS | I – 23 |
| 6.3. LIQUIDS..... | I – 23 |
| 6.4. SEGREGATION..... | I – 23 |
| 6.5. DISPOSAL | I – 23 |

| | | |
|------------|--|---------------|
| 7.0 | Sample Packaging and Transport | I – 24 |
| 7.1. | REGULATIONS AND REQUIREMENTS | I – 24 |
| 7.2. | TRANSPORT MATERIALS | I – 25 |
| 7.3. | PREPARING SAMPLES FOR TRANSPORT | I – 27 |
| 7.4. | PACKING THE TRANSPORT PACKAGING | I – 28 |
| 7.5. | TRANSFER OF CUSTODY TO AN AUTHORIZED CARRIER | I – 29 |

MODULE II - SAMPLING PROCEDURES – SITE CHARACTERIZATION AND REMEDIATION PHASES..... **II – 1**

| | | |
|------------|------------------------------------|---------------|
| 1.0 | Collection of Samples | II – 1 |
| 1.1. | OVERVIEW | II – 1 |
| 1.2. | PRECAUTIONS AND LIMITATIONS | II – 2 |

2.0 Equipment and Materials..... **II – 6**

| | | |
|------------|---|---------------|
| 3.0 | Collection of Soil Samples | II – 6 |
| 3.1. | GROUND DEPOSITION | II – 6 |
| 3.2. | WET SOIL | II – 7 |
| 3.3. | DRY AND SANDY SOIL OR SAMPLING A MIXTURE OF FINES AND GRAVEL..... | II – 8 |
| 3.4. | SUBSURFACE SOIL | II – 8 |
| 3.5. | SOIL WITH VEGETATION | II – 9 |
| 3.6. | WASTE PILES (EXCAVATED PILED MATERIAL) | II – 10 |
| 3.7. | SEDIMENT | II – 10 |
| 3.8. | SEDIMENT – DEEP WATER BODY GRAB SAMPLES | II – 10 |
| 3.9. | SEDIMENT – CORE SAMPLES..... | II – 11 |
| 3.10. | SOIL SAMPLE HANDLING | II – 12 |

| | | |
|------------|---|----------------|
| 4.0 | Collection of Air Samples | II – 14 |
| 4.1. | AIR SAMPLE PRE-STAGING REQUIREMENTS..... | II – 14 |
| 4.2. | COLLECTION OF PARTICULATE AND VAPOR SAMPLES | II – 14 |
| 4.3. | VACUUM FLASKS AND GAS COLLECTION VESSEL SAMPLES | II – 16 |
| 4.4. | LAPEL SAMPLES | II – 17 |
| 4.5. | BUBBLER SAMPLES | II – 17 |

| | | |
|------------|---|----------------|
| 5.0 | Collection of Water Samples | II – 18 |
| 5.1. | SURFACE WATER..... | II – 18 |
| 5.2. | SUBSURFACE WATER AT SHORELINES | II – 18 |
| 5.3. | STREAM OR RIVER WATER | II – 19 |
| 5.4. | SHALLOW WELL WATER OR PUBLIC DRINKING WATER | II – 19 |
| 5.5. | STORAGE TANKS, CISTERNS, WELLS, AND UNDERGROUND STORM DRAINS OR SEWER LINES | II – 19 |
| 5.6. | LAGOON, POND, AND LAKE WATER | II – 21 |
| 5.7. | WATER SAMPLE HANDLING | II – 21 |

| | | |
|------------|---|----------------|
| 6.0 | Collection of Vegetation Samples | II – 22 |
| 6.1. | GENERAL CONSIDERATIONS | II – 22 |
| 6.2. | VEGETATION SAMPLE COLLECTION | II – 23 |

| | | |
|------------|--|----------------|
| 7.0 | Collection of Surface Area Samples Using Swipes | II – 24 |
| 7.1. | DRY SWIPES..... | II – 24 |
| 7.2. | WET SWIPES | II – 24 |
| 7.3. | TAPE SWIPES..... | II – 24 |
| 7.4. | SWIPE HANDLING | II – 25 |

| | |
|--|----------------|
| MODULE III - SAMPLING PROCEDURES – FINAL STATUS PHASE | III – 1 |
| 1.0 Collection of Samples | III – 1 |
| 1.1. OVERVIEW | III – 1 |
| 1.2. PRECAUTIONS AND LIMITATIONS | III – 2 |
| 2.0 Equipment and Materials | III – 3 |
| 3.0 Collection of Soil Samples | III – 3 |
| 3.1. SURFACE SOIL PRE-STAGING REQUIREMENTS | III – 3 |
| 3.2. SURFACE SOIL COLLECTION | III – 4 |
| 3.3. SUBSURFACE SOIL PRE-STAGING REQUIREMENTS | III – 6 |
| 3.4. SUBSURFACE SOIL COLLECTION..... | III – 6 |
| 3.5. SEDIMENT | III – 8 |
| 4.0 Collection of Water Samples | III – 9 |
| 4.1. WATER SAMPLING PRE-STAGING REQUIREMENTS | III – 9 |
| 4.2. WATER SAMPLE COLLECTION PROCEDURES | III – 9 |
| 5.0 Collection of Swipe Samples | III – 9 |
| 6.0 Collection of Air Samples | III – 9 |

APPENDICES

| | |
|---|--------------|
| APPENDIX A List of Sampling Equipment and Materials | A – 1 |
| APPENDIX – A1 SAMPLING EQUIPMENT | A – 1 |
| APPENDIX – A2 SAMPLING EQUIPMENT APPLICATION ADVANTAGES AND DISADVANTAGES | A – 2 |
| APPENDIX – A3 SAMPLING CONTAINERS | A – 11 |
| APPENDIX – A4 SHIPPING MATERIALS AND PACKAGING | A – 12 |
| APPENDIX – A5 ADDITIONAL EQUIPMENT TO CONSIDER FOR SAMPLING OPERATIONS | A – 13 |
| APPENDIX – A6 PERSONAL PROTECTIVE EQUIPMENT | A – 15 |
| APPENDIX B Forms | B – 1 |
| APPENDIX – B1 FIELD SAMPLE LOGBOOK ENTRY | B – 1 |
| APPENDIX – B2 FIELD SAMPLE TRACKING FORM..... | B – 2 |
| APPENDIX – B3 CHAIN OF CUSTODY | B – 3 |
| APPENDIX – B4 AIR SAMPLE TRACKING FORM | B – 4 |
| APPENDIX – B5 EXAMPLE WASTE CONTROL FORM | B – 5 |
| APPENDIX – C SAMPLE FILTRATION AND PRESERVATION..... | C – 1 |
| APPENDIX – D REFERENCES | D – 1 |

MODULE I – GENERAL INFORMATION

1.0 Introduction

1.1. Scope and Application

The procedures described in this document are intended to provide instructions regarding the collection of environmental samples to be analyzed for radiological contaminants following a contamination event or emergency. This document focuses on the site Characterization, Remediation, and Final Status phases of a contamination event and is not intended to address the sample collection needs during Initial Response. The procedures are intended for collection of environmental samples in response to a contamination event or an emergency at the point where Federal Radiological Monitoring and Assessment Center (FRMAC) activities are turned over to the U.S. Environmental Protection Agency (EPA).

The procedures describe sample collection only and are intended for use by sampling personnel who have been sufficiently trained in radiological sampling techniques and corresponding radiation safety. It is also assumed that an initial site assessment has been performed prior to implementation of these procedures. Specifically, the document provides information and instructions regarding the following:

- Procedures for sample collection during site Characterization, Remediation, and Final Status phases
- General sampling equipment and materials
- Description of quality control samples
- Sampling documentation
- Decontamination of sample containers and equipment
- Packaging of samples for transport

The procedures do not include information that is typically included in a site-specific Sample Collection Plan (e.g., sample locations, expected contaminants and concentration levels or methods for determination of the number and type of samples required). The document also does not include tasks or activities that will be performed by site management, Radiation Protection Personnel, safety and hygiene individuals, and transportation certification personnel. Specifically, this document *does not* provide information and instructions that are included in the following documents:

- Sample Collection Plan
- Radiological Protection Guidance Plan and associated procedures
- Health and Safety Plan and associated procedures

1.2. Sample Collection Plan (SCP)

A Sample Collection Plan (SCP) that is specific for the site being evaluated should be in place prior to initiating the sampling procedures described in this document. The SCP should be based on available historical data and recent site assessment information. The SCP will specify: Derived Concentration Guidance Levels (DCGLs); Measurement Quality Objectives (MQOs); matrices, volumes, and number of samples to be collected; sample locations; sample container types and sizes; quality control requirements; specific sample collection equipment to be used; and requirements for field sample filtration and preservation. The information included in the SCP provides detailed site-specific instructions and requirements that are to be used in conjunction with the sample collection procedures that are described in this document.

1.3. Preparation

- 1.3.1. A laboratory should be identified and informed of the analytical requirements expected (sample filtration and/or preservation, QC samples, MQOs, sample volumes), turn around time, and data reporting requirements corresponding to the sampling event. The laboratory should review and be aware of the quality control requirements included in the SCP. The SCP and the sample collection procedures should also be reviewed by the laboratory for additional insight into the analysis needed.
- 1.3.2. Prior to sample collection, samplers should review the SCP. The samplers' understanding of the requirements will greatly increase the success of the sampling event.
- 1.3.3. Off-site evaluation of any historical data and site assessment prior to entering the contamination area should be performed, and information regarding pertinent issues should be provided to the field sampling team. Information may include an evaluation of the general geology and potential transportation of contamination outside of the designated area, into ground water, surface water, geological layers, or air.
- 1.3.4. The sample collection team should also evaluate and prepare sampling equipment and personal protective equipment (PPE) needs prior to entry. A site map should be provided with details regarding the sample locations (if known) and other geological or topographical information to assist in locating the sample points.
- 1.3.5. Prior to initiation of sample collection activities and laboratory procurement, the decision maker and the sample collection planning team should identify the data needs and purpose for the sample collection being performed, including:
 - Types of samples to be collected or measurements to be performed
 - Radionuclide(s) of interest
 - Potential interfering radionuclides and chemical contaminants
 - DCGL for each radionuclide of interest
 - MQOs for each radionuclide (e.g., required method uncertainty, required Minimum Detectable Concentration (MDC), etc.)
 - Analytical or screening methods that will be used in the field and laboratory to assay samples
 - Analytical bias and precision (e.g., quantitative or qualitative)
 - Number of samples to be collected
 - Type and frequency of field quality control (QC) samples to be collected
 - Amount of material to be collected for each sample
 - Sample collection locations and frequencies
 - Sample tracking requirements
 - Sample preservation, filtration, and shipping requirements
 - Additional standard operating procedures (SOPs) to be followed or developed
 - Cost of the methods being used (cost per analysis as well as total cost)
 - Specific background for the radionuclide(s) of interest, if applicable

- Turnaround time required for sample results
- Analytical measurement documentation requirements

1.4. Sampling Phases

WARNING: The sampling of special nuclear material (plutonium-239, plutonium-241, uranium-233, uranium enriched in the isotope 233 or 235) requires special considerations not covered in the procedures included in this document.

- 1.4.1. There are three phases in the life span of a contamination event that require sampling: Characterization, Remediation, and Final Status.
- 1.4.2. Characterization Phase sampling takes place after the incident occurrence and prior to initiation of site remediation activities. The levels of exposure may be the highest encountered at any time during the process of sampling a site. Personnel should be constantly aware of existing conditions and radiation levels to ensure personnel are not unnecessarily exposed. This phase will be used to determine the extent and magnitude of the problem. The samples taken will be used to determine the scope and range of activities needed to remediate the site.
- 1.4.3. Remediation Phase sampling takes place during remediation. During this phase, sample collection can occur with deliberate planning and preparation. However, conditions are still considered to be hazardous.
- 1.4.4. Final Status Phase sampling takes place after remediation of the affected site. This phase has specific requirements to ensure that the sampling procedures support the expected low concentration levels in the samples collected. Conditions are expected to be non-hazardous and clear of the presence of contamination levels that are in excess of DCGLs.

1.5. Sampling Locations

Sampling locations may be identified by the use of an alpha/numeric grid, Global Positioning System (GPS) coordinates (with ± 1 meter accuracy), or distances from landmarks. Sample collection during the Characterization Phase often uses landmarks, with the actual sample point “fine tuned” using portable radiation survey instrumentation. The survey team then flags or places another marker at the sample location. Sample collection points are surveyed, and GPS coordinates recorded, at the time of collection. Maps developed for the site are dependent on the requirements of the SCP. Subsequent sample locations will be identified by the Field Team Leader per the requirements of the SCP.

1.6. Safety Considerations, Personnel Protective Equipment (PPE), and First Aid

- 1.6.1. Safety is a prime consideration in any sampling event. Personnel safety requirements and considerations for a particular site may extend beyond radiological concerns. Additional concerns include physical hazards and chemicals that are toxic, corrosive, emit harmful or explosive vapors, or that are incompatible when mixed.
- 1.6.2. All radiation and industrial safety requirements and procedures associated with the site are to be followed.
 - a. Radiation protection requirements are developed and instituted by the site Radiation Protection Group (RPG). The RPG is responsible for:
 - Taking measurements of the radiation levels of all sampling sites and associated activities

- Dictating the radiation protection requirements for entering and working in a radioactively contaminated sampling area
 - Stopping any activity to protect personnel from overexposure to radiation or from radioactive material contamination
 - Developing and implementing a Radiation Safety Plan (RSP) and Radiation Work Plans (RWP) for individuals working in the area to read and follow
- b. Industrial safety requirements are developed and instituted by a designated safety individual (e.g., Safety and Health Officer, SHO). The SHO is responsible for:
- Assessing all site activities for potential safety concerns
 - Ensuring that personnel are informed as to the potential hazards in a sampling area and dictating the requirements for safely working in the area
 - Stopping any job or activity to protect personnel from a dangerous situation
 - Developing and implementing a Health and Safety Plan (HASP) for individuals working in the area to read and follow
- 1.6.3. Personal Protective Equipment (PPE) is to be worn as designated by Radiation Protection Personnel and the designated site safety individual.

NOTE: PPE should be used during all sample collection and equipment decontamination activities. The results of a site assessment or incident evaluation should be used to determine the type and amount of PPE used by sample collectors. The Sample Collection Plan should include a written HASP and/or Hazard Evaluation of the area to be sampled.

- a. Typical types of PPE are listed in Appendix A6 (Personal Protective Equipment).
- b. The amount of PPE used should be designed and designated to provide the maximum personal protection and mobility for the task being performed. The minimal amount of PPE typically used includes:
- Gloves (nitrile or latex over cotton liners)
 - Coveralls
 - Water proof or water resistant shoe covers or boots
- c. Care should be taken to ensure that PPE is not damaged. If PPE damage is suspected, work must be stopped. Uncontrolled damage can result in contamination of personnel.
- d. Care should be taken to ensure that the PPE is sufficient to protect against contamination exposure that can result from wicking when working in a wet environment.
- e. The level of respiratory PPE needed should be directed by and stated in a Work Control Permit (Attachment B4). Appendix A6 (Personal Protective Equipment) lists the various types of respirators that may be required.

NOTE: As required by site HASPs, all injuries must be reported and, if required, examined by medical

personnel. Any open cut, sore, or wound provides a path for contamination to enter the body.

- 1.6.4. First Aid kits are to be available at all times during the sampling event. At least one kit should be carried in any vehicle transporting the sampling team. At least one kit also should be located at the primary sampling site office.

2.0 Equipment and Materials

2.1. General Requirements

- 2.1.1. Only equipment that has been certified (clearly identified) for use by the Field Team Leader should be used to perform the procedures described in this document. Substitution of materials or equipment must be approved and documented prior to use. All instruments should have current calibrations or inspections clearly identified on the instrument. Any corresponding certification documentation should be copied and available to the sampling personnel, as appropriate.

NOTE: It is highly recommended that sampling equipment be properly and routinely maintained and organized before responding to an event. This will allow the sampling team to enter and exit the suspected contaminated area in the shortest and most effective amount of time. Sample materials should be contained in a controlled area or vehicle with shelving/space sufficient to contain all PPE, sample bottles, materials, supplies, and forms needed to perform sample collection, documentation, and packaging activities.

2.1.2. Pre-staging

- a. Pre-staging allows for a minimized time in the contamination zone and maximized sample collection and processing efficiency.
- b. As practical, all equipment, containers, PPE, and documentation should be placed into a plastic bag. The common practice is to place the materials (bowls, bottles, jars, trowels, etc.) for an individual sampling event (soil sample or water sample) into a separate plastic bag. Each of these bags (up to a maximum number that can be physically handled) is contained in a larger bag that holds additional PPE (boots, gloves) and tape or other items needed. Carrying the larger bag into the field, an individual can control contamination and sample materials with minimal concern for cross contamination and exposure.
- c. Each sampling team should be aware of the SCP for their designated assignment. This includes being informed of the location and conditions for the specific sampling point(s) prior to entry.

2.2. Sampling Equipment

- 2.2.1. Refer to Appendices A1 – A6 (tables of sampling equipment and materials) for a more extensive list of equipment necessary for sampling events. The Appendices are supplied for reference. The actual sampling tools, materials, and equipment used will be dependent on availability and the actual conditions at the site.
- 2.2.2. Sampling frames are used to mark areas for collection of soil and dirt samples during Final Status Phase sampling.
- a. Sampling frames are used to provide specific control of the sample location and size. Frames must be large enough to cover an area larger than the area to be sampled and act to prevent intrusion of surrounding material into the sample.

- They must be controlled to prevent movement during sample collection and may be disposed of after the sampling event.
- b. Frames are constructed of plastic sheeting that is labeled to clearly indicate the presence of radioactive material (for example, a large yellow plastic bag labeled as "radioactive material" in magenta lettering) and contain an opening to designate a given surface area from which a sample is to be taken. Plastic frames are used to reduce the volume and weight of material taken into the field.
 - c. Frames can be approximately 0.5 to 1 m (2 to 3 feet²), with an opening for sampling of approximately 100 cm² (16 inches²).
- 2.2.3. Trowels, spoons, scoops, and spatulas are used to collect or remove accessible soils, dirt, and other solid materials from subsurfaces.
- a. Working surfaces are made of stainless steel or high density polypropylene (HDPP) or polyethylene (HDPE), with little ornamentation or exposed fasteners to assist in decontamination. Wooden handles may be used, but should be covered to minimize contamination.
 - b. The differences in design between these tools allow for variations in the composition of the material being sampled.
 - Trowels aid in digging into surface dirt.
 - Scoops and spoons are used in loose or shifting sandy soil or sediments.
 - Spatulas aid in homogenization and removal of unwanted materials.
- 2.2.4. Bore Hole Tools (Augers, Drill Rigs, Post Hole Diggers, Split Spoon, Thieves, Triers and Core Samplers) used to collect or remove soils, dirt, and other solid materials from sub-surface areas
- a. Bore hole tools are used to gain access and, in some cases, collect samples. Augers, split spoon samplers, thieves, and triers can be used to collect the actual sample as well as dig to access the sample location beneath a surface.
 - b. Caution should be taken when using these tools to avoid mixing sample layers or causing release of volatile contaminants. Augers and drills scrape the sides of the hole when inserted or removed, causing unwanted upper layer material to fall into the hole where possible collection can occur. Each hole should be cleared of all debris prior to sample collection.
 - c. Augers are used to collect samples of soils primarily during site Characterization Phase sampling. These tools will bite into each section of soil that is being collected and are typically used to collect samples in parts.
 - Can be manually or machine power driven.
 - Typically limited to 1.5 m (5 feet) of depth, but extensions to the handle can increase the depth of the hole.
 - d. Post Hole Diggers and Drill Rigs can be used to excavate to lower levels than can be reached when using an auger. When used with a hollow stem auger, a drill rig can retrieve reasonably undisturbed samples.
 - e. Split spoon samplers are used to collect core samples of undisturbed soils from a wide range of depths.

- Consist of two halves of a pipe, each from 15 to 45 cm (6 to 18 inches) long, and threaded at both ends. The halves are held together with a conical ring at one end and a driving bar at the other.
 - A core catcher is positioned in the sampler to prevent loss of sample material upon extraction from the bore hole.
 - Often used with a drill rig or other power equipment and sometimes forced into the ground with a sledgehammer.
- f. Trier samplers are used for sampling material with a particle diameter less than one-half the diameter of the trier. Trier samplers are best used horizontally and cannot be used to obtain a vertical sample from loose or sandy material. These samplers are made of stainless steel, and consist of a tube cut in half with a sharpened tip that allows the sampler to cut into soils, or moist or sticky solids.
- g. A thief is used primarily to sample dry granular or powdered material with particle diameters of less than one-third the width of the thief's slot. Thieves used for collection of sediment samples are different than thieves used for collection of liquid samples.
- Soil and sediment thieves consist of a set of slotted tubes (i.e., an inner and outer tube). The outer tube has a conical pointed tip that permits penetration of the materials being sampled. The inner tube is rotated to open and close the sampler.
 - Liquid thieves consist of a single tube, opened at both ends, that is inserted into the liquid matrix and then stoppered at the upper end to retain the liquid sample.
- h. Core samplers are driven into the ground, typically by machine power, and used to collect samples of soils or sediment primarily during site Characterization and Remediation Phases.
- Consist of a hollow tube or pipe that varies in diameter (generally 3.75 to 10 cm or 1.5 to 4 inches).
 - The number and length of core samplers can be varied to obtain samples at different depths.
 - Once the core piping is removed from the ground, it is separated into sectional lengths and sections are opened length-wise to allow a solid cross-sectional piece of material to be exposed.
- 2.2.5. Bottles and jars are used to collect liquid samples and to contain soil, solid and liquid samples.
- a. Bottles or jars may be attached to reach rod rigs, tethered to a line, or used to collect a sample directly.
 - b. Bottle and jar types and materials are chosen in accordance with intended use. HDPP, HDPE, or glass bottles and jars are used for dipping, drawing surface samples, or sample containment. Stainless steel bottles are typically used to collect samples from the bottom of a body of liquid.
 - c. Lid design is based on use. Typical designs include: pour lip, screw seal, large or small mouth opening. Polytetrafluoroethylene (PTFE, Teflon®)-lined lids are used for sample collection, storage, and transport. Container lids should not

- be composed of materials that can absorb water and should not contain glue or adhesives.
- d. Refer to Appendix A3 (Sampling Containers) for typical sizes and dimensions.
 - e. Kemmerer bottle samplers are messenger-activated water sampling devices that are dropped into deep water bodies or tanks.
 - These samplers consist of a lower stopper, an upper stopper with a tip head, a bottle, a messenger, and a cable that runs through the components.
 - The components are separated, lowered to a given sample level and tripped with the messenger to collect the sample.
 - Sampler components are primarily composed of brass, plastic, or stainless steel.
 - f. Wheaton bottle samplers are messenger-activated water sampling devices used in relatively deep waters no more than 2 to 3 m (6 to 10 feet).
 - Bottles are lowered to a given sample depth, then opened and closed with a control rod to collect the sample. The sampler's reach and control rods are limiting factors in determining the depth of sample collection.
 - Sampler components are primarily composed of plastic and stainless steel.
- 2.2.6. Thieves, Bailers, Bacon "Bomb" (Bacon Collection Vessel) Samplers, Dippers, and Coliwasa Samplers used for collection of liquid samples
- a. Thieves are used in shallow waters or for sampling from drums and other containers, and are designed to fill once they are placed into a liquid.
 - Thieves vary in lengths of up to 2.1 m (7 feet) and in diameters of up to 2.5 cm (1 inch).
 - The top of the thief must be plugged or capped prior to removal from the sample source to prevent sample from escaping out the bottom.
 - b. Bailers are tubes used in shallow water depths of up to approximately 1 meter (3 to 4 feet).
 - Bailers are opened at the top and have a check valve or valves in the bottom.
 - These devices are constructed of stainless steel to allow them to sink, and begin filling with sample upon entry into a liquid.
 - The check valves prevent or minimize drainage and, retain the sample volume as the bailer is removed from the sample source.
 - c. Bacon Collection Vessel Samplers are used to take composite samples from a liquid source (usually a tank, vat, pond, lagoon, or lake) at a given depth determined by the length of the line used, up to approximately 60 m (200 feet).
 - d. These collection vessels are constructed of stainless steel and begin filling when a sampling line is pulled to open valves at the top and bottom of the collection vessel.
 - e. Release of the sampling line will close the valves on retrieving the collection vessel from the sample source.

-
- f. Dippers are bottles or cups that can be attached to an extension rod and used to collect a sample as they are dipped below the surface of a liquid. The depth of sample collection is determined by the length of the extension rod.
- These devices are generally constructed of HDPE or HDPP and begin filling upon entry into the liquid.
 - The extension rods are usually retractable allowing for extended reaches of up to 20 feet.
- g. Coliwasa samplers are hollow tubes with a stopper at one end and are used in collecting samples from shallow water or liquids in drums.
- The stopper is attached to an internal rod that runs the length of the tube to a locking mechanism at the other end of the tube.
 - Samplers begin filling with liquid upon the turning action of a handle at the opposite end of the stopper.
 - These samplers are typically constructed of HDPE or HDPP but may also be constructed of stainless steel or polyvinylchloride (PVC).
 - Decontamination of these samplers is difficult and costly. For this reason, use is typically limited to collection of multi-phase samples that are otherwise difficult to collect.
- 2.2.7. Sediment samples may be collected using grab samplers, core samplers, or dredges.
- a. Grab samplers are similar to scoops or open dipping jars used in collecting water samples.
- Grab samplers, such as the Birge–Ekman sampler, are attached to long poles.
 - The sampler is dragged across the sediment to collect the sample.
 - Depth is limited by the length of the reach rod attached to the sampler.
- b. Dredges are buckets designed to retain soils and sediments collected from the bottom of a pond, lagoon, or other body of water.
- Typically constructed of stainless steel with either an open front end or a swivel closure designed such that the majority of liquid collected will drain away from the sample as the dredge is retrieved.
 - Some dredges have plastic liners that assist in decontamination and prevent cross contamination of the sampler.
 - Dredges are activated by either gravity, a tug-line, or a messenger, to allow the open jaws to close for sample collection.
 - Many dredges are extremely heavy and require the use of a winch to retrieve samples.
 - Several types of dredges are named based on the designer including: Petersen, Ponar, Shipek, and Van Veen.
- c. Sediment core samplers are hollow rods or tubes that are inserted into the sediment to extract a sample.
- The sampler may or may not have a closure device to prevent sample loss.

- Either gravity or mechanical action is used to push the core sampler into the sediment.
 - The type of sampler is dependent on the depth required and the type of water body.
- 2.2.8. Air samplers, gas collection vessels, and gas bubblers are used to collect samples to be measured for air contaminants.
- a. The size and type of air sampler and type of collection format is dependent on the type of air parameter sampled (e.g., media, analyte) and the corresponding analytical MQOs. Collection filters should be selected to avoid potential interferences (for example, radionuclides that may be present in filter materials, such as potassium-40 and decay products of uranium that are naturally present in glass-fiber air filters).
 - Glass fiber filters or plastic membranes are used to capture particulates.
 - Cyclone or cascade impactors are used to determine particle sizing.
 - Activated charcoal or silver zeolite cartridges are used for absorbance of iodine and certain noble gases.
 - Bubblers or vacuum sample collection vessels are used for other air samples.
 - b. Air sampling pumps are based on the sample location and volume of air required to meet analytical MQOs. Air flow rates are typically low for personnel lapel monitors and high for high volume air samplers. Air flow rates for large volume or long collection durations are generally at medium rates of flow. Typical flow rates include:
 - Lapel samplers: 2 L/minute (0.01 feet³/minute)
 - General area samplers: 28 to 56 L/minute (feet³/minute)
 - High volume samplers: 140 to 2800 L/minute (5 to 100+ feet³/minute)
 - Bubblers – flow rate varies from unit to unit
 - Vacuum collection vessels – instantaneous
 - Pressurized flasks – 2 to 3 atm (30 to 45 psi)
 - c. Filter sizes are typically 25 mm (1 inch) for personnel lapel monitors, 47 or 50 mm (1.9 or 2 inches) for general area monitors, and 100 mm (4 inches) for long-term, high volume, general area monitors.

| |
|---|
| <p>NOTE: While use of 100 mm (4 inch) filters has increased due to available analytical instrumentation, 200 mm x 250 mm (8 inch x 10 inch) filters are still being used by EPA (e.g., RadNet). Use of these larger filters is discouraged in cases where the laboratory uses alpha/beta counters that are capable of analyzing the smaller filters, as the practice of folding or cutting a filter to achieve an appropriate size can impact the accuracy and precision of the associated counting results.</p> |
|---|

- d. Air samplers that capture particulates or vapors are normally electrically powered pumps that provide a consistent flow rate. However, personnel lapel samplers are typically battery powered, which results in air flows that vary from the start to the finish of the sampling event as the battery is drained.

- Availability of electric power limits the placement of air samplers to the distance away from a power source.
- DC to AC power converters allow for use of an air sampler from a vehicle.
- Use of portable generators is limited to the supply of gasoline.
- Power converters and portable generators have health and safety considerations for handling; sample collectors should consult the site HASP before use.
- Use of lapel samplers is limited by the capacity of the charge on the battery.

NOTE: If it is possible that a power source may be depleted during sample collection, the sampler should be equipped with a flow volume totalizer.

2.2.9. Water pumps are used when samples are required from depth or are taken over a defined time period.

NOTE: Water pumps have depth limitations; therefore, other types of pumps or submersibles may be required for collecting samples of well water or water from depths greater than 10.7 m (32 feet).

- a. Pump features are dependent on the application.
 - Depth capabilities
 - Diaphragm, venturi, peristaltic, or piston-type pumping action
 - Manual or power driven operation
 - Flow regulators
 - Stroke counter or volume totalizer to measure flow rate or volume collected
 - Timing mechanisms
 - Collection basins or bottles
 - b. Construction materials are dependent on use and mode of operation. Plastic and PTFE parts provide the greatest chemical resistance to materials sampled but may not be sufficiently durable for long term sampling.
 - c. Flow volumes are dependent on mode of operation and pumping action.
 - Low flow pumps (50–200 cm³/minute)
 - High flow pumps (500–3000 cm³/minute)
 - d. Pump flow volumes must be monitored and documented. Volume totalizers and timers should be used when possible. Calculation of the volume collected, from flow rate and collection duration, may be used if a volume totalizer is not available.
- 2.2.10. Filters and swipes are used to collect samples from surface areas. These collection materials are composed of cotton fiber, plastic, glass fiber, or paper. Sizes depend on the surface area to be sampled and include:
- Large surface area – use, or example, 10 cm² (4 inch²)

- Small surface area – use, for example, 2.5 cm² (1 inch²) or 5-cm (2-inch) diameter circle

NOTE: The use of large filters or swipes is discouraged in cases where the sample is to be analyzed at an off-site laboratory. Some laboratories have instrumentation that is not capable of directly analyzing larger samples and must fold or cut these samples to achieve an appropriate size. This sample manipulation can impact the accuracy and precision of associated counting results. Also see Note regarding air filters in Section 2.2.8(c).

- 2.2.11. Plastic Bags can be used to contain samples, sample containers, equipment and materials, or waste.
- a. Plastic bags in a variety of sizes and types (e.g., zip lock, open bag with twist ties) are used as needed to accommodate sample collection, double bag storage and equipment storage.
 - Bags containing samples are sealed with tape and double bagged.
 - Bags without zip-lock capabilities can be used for sample shipment or waste containment.
 - b. If elevated levels of radioactivity are suspected, use of a plastic container is recommended to prevent sample loss and cross-contamination that could occur if a bag becomes damaged.
 - c. Refer to Appendix A3 (Sampling Containers) for typical sizes and dimensions required.
- 2.2.12. Envelopes made of paper or glassine (transparent paper coated with a glaze), with and without sealing capabilities (either gummed or self-adhesive), are used to contain swipes and documentation. Typical sizes and types are noted in Appendix A3 (Sampling Containers).

NOTE: Glassine envelopes are resistant to humidity and small amounts of water and are recommended for storing and shipping air filters and swipes. These envelopes also are better at ensuring that sample material remains on the filter or swipe and is not transferred to the envelope.

- 2.2.13. Other materials – Based on the nature of the incident and the area affected, other materials or equipment may be needed for sample collection. These materials include items such as tape, solvents, alcohol, paint scrapers, sanders, saws, and vacuum cleaners. The requirements and procedures for these or other items should be reviewed and discussed prior to use. A list of some of the additional equipment that may be needed is included in Appendix A5.
- 2.3. Closures and Seals
- 2.3.1. Masking or other adhesive tape is used for sealing containers during sample shipment.
 - 2.3.2. Security seals are attached over the cap of each sample container to provide an indication of sample tampering and to ensure sample integrity. Security seals also can be used for sample shipping or transport containers, to ensure package integrity is not compromised during transport. Typically, one seal is placed on each sample container and multiple seals (e.g., two seals placed on opposite ends) are used on shipping containers.

- a. Security seals may be commercially made or tape seals that contain the signature or initial of the sample collector, and date and time of sample collection.
- b. The seal must break or tear if it is removed.
- c. Metal seals are usually crimped into place and require cutting or breakage for removal.

2.4. Sampling Equipment Decontamination

NOTE: Materials that have been used for decontamination or for carrying samples should be segregated until they have been decontaminated and surveyed as clean and free of contamination. Unless determined to be free of contamination, water and other materials used for decontamination must be retained and removed from the sampling site for proper disposal. Rinsate water may be required to be collected and analyzed for quality control purposes. Additional stages for washing should be used when elevated radiological contamination is suspected.

- 2.4.1. Buckets and pails serve as tote containers and portable sinks.
 - a. Buckets and pails should be constructed of plastic.
 - b. Lids are needed for containment, but are generally not taken into the field.
 - c. Typically, 5-gallon and 20-gallon buckets are used.
 - d. Several buckets or pails are used in decontamination.
 - The number used is dependent on the degree of cleanliness required. At a minimum, one is used for the initial wash and one is used for the final rinse.
 - Rinse water may be required to be collected as a quality control sample (rinsate sample).
- 2.4.2. Drums or large garbage cans are used to contain contaminated PPE, accumulated wastes, clean bags, containers, or equipment.
- 2.4.3. Brushes are used to remove deposits of solids from sampling equipment. Both bottle brushes and flat brushes are used. Brush handles should be sufficient to prevent direct contact with the brush during use.
- 2.4.4. Cloths are used to remove solids from or dry sampling equipment. Cloths should be certified as clean for use in drying equipment, and may be pretreated to contain a cleaning agent, if approved for the sampling event. Paper towels may be used, but lint-free cloths are preferred.
- 2.4.5. Water is used to wash and rinse contamination from equipment, materials, and sampling personnel. At least 16 L (4.2 gallons) is recommended for every 20 samples collected.
- 2.4.6. Soap and other non-ionic detergents are used for decontamination and washing. Soap can be in either powder or liquid form, and must be non-reactive, anionic, phosphate-free, and low-foaming. Stainless steel polishers or cleaners may be used, provided they contain no petroleum distillates and leave no residue.
- 2.4.7. Step-off Pads (STOPs) are used to designate the point for exiting a contaminated area. Personnel are required to perform a given level of personal monitoring and decontamination at the STOPs to ensure contamination is not spread outside the

contaminated area. STOPs may be pre-established prior to site entry by the sampling team. These pads should:

- Be clearly designated
- Allow for the easy egress out of the area
- Have sufficient containers for the disposal or control of contaminated equipment and clothing

2.4.8. Tote containers should not be used as final rinsate containers, as the materials carried may contaminate the rinsate.

2.4.9. Other materials – Based on the nature of the incident, the area affected, and the extent of contamination, other materials may also be needed in equipment decontamination. Additional materials may include items such as chemical abrasive cloths, sand paper, grinders, solvents, alcohol, and acids. The requirements for and use of these items should be reviewed and discussed prior to use.

2.5. Communications

2.5.1. Radios or any two-way communication device capable of transmitting the sampling team's concerns or requests to the standby person or Field Team Leader shall be employed.

2.5.2. A Standby Person (individual stationed outside the zone) is required to observe and respond to the sampling team if problems arise. This person may be involved indirectly or directly with sample collection activities.

3.0 Quality Control

NOTE: Sample collectors should refer to the SCP to determine the kind and number of QC samples and procedures that should be collected or performed. In some cases, additional samples or sample volume will be needed to support laboratory QC sample analysis (e.g., matrix spikes). Because QC samples may be shipped to the laboratory as either known QC or blind samples, sample collectors should refer to the SCP to determine how QC samples are to be labeled for transport to the laboratory.

3.1. Field Blanks

3.1.1. Field blanks are used to monitor contamination that may be introduced into samples during sample collection, filtration, or preservation.

- a. If required, the field blank is prepared in the field at the same location, using the same procedures that are used to collect and process the sample. Field blanks are typically prepared prior to sample collection.
- b. The field blank is submitted to the laboratory for analysis with the collected samples.

3.1.2. Field blanks are prepared by filling a sample container with blank matrix material (e.g., certified analyte-free water) and preservative (if necessary) using the same collection and processing procedures and equipment that are used to collect the samples.

3.2. Rinsate Blanks

3.2.1. Rinsate blanks are samples collected from rinse water running off decontaminated piece(s) of equipment.

-
- a. The rinsate blank may or may not be preserved in the field, as described in the SCP.
 - b. If the rinsate blank is preserved, a field blank is required.
 - 3.2.2. Rinsate blanks are submitted to the analytical laboratory to evaluate equipment decontamination.
 - 3.3. Field Replicates
 - 3.3.1. Field replicates are samples collected in the same manner, location, and time as an initial sample. Sample collectors must ensure that sample replicates are as equivalent in mass or volume as possible. Variations can affect representative QC evaluations.
 - 3.3.2. In the case of a solid sample, the location from which a replicate sample is collected should be the space adjacent to the initial sample or the space of the initial sample enlarged to allow for a greater volume of sample to be taken.
 - 3.3.3. The replicate sample and initial sample are contained in the same sampling container, homogenized, and then separated into individual containers. A field replicate is used to measure sample heterogeneity, sample collection methodology, and analytical procedures.
 - 3.3.4. The replicate sample is handled and documented in the same manner as the initial sample.
 - 3.4. Background samples
 - 3.4.1. Background samples are collected from a known uncontaminated area to allow for the determination of natural or “background” composition and variability of radionuclide concentrations.
 - 3.4.2. Background samples are collected under the same control requirements as Final Status Phase samples (see Module III).
 - 3.5. Equipment
 - 3.5.1. All equipment that is used to measure or analyze samples in the field requires calibration, routine maintenance, and at least annual standardization. This equipment is calibrated following procedures included in the manufacturer’s users manual or performed in the laboratory. Equipment used to obtain volumetric sample measurements must be certified to appropriate volume specifications.
 - a. Instruments that are routinely used in the field and require calibration and standardization or certification to ensure measured sample weights and volumes are accurate include:
 - Balances or scales
 - Volumetric pipettes, beakers, graduated cylinders
 - Air sampler flow rate meters and totalizers
 - Lapel air samplers
 - Water pumps
 - b. Analytical equipment that may be used in the field that require calibration to ensure sample analyses are accurate include:
 - pH meters

- Turbidimeters
- Dissolved oxygen and/or conductivity meters

3.6. Sample Control

- 3.6.1. Once samples are collected, they must be maintained under controlled conditions through shipment to an analytical laboratory. This control is required to ensure that samples are not compromised and that analytical data generated are representative of site conditions.
- 3.6.2. Sample custody requirements
- a. Keep samples in an area where they can be observed or are under lock and key to prevent tampering.
 - b. Maintain samples in the same configuration or condition in which the sample arrived from the sampling site (e.g., cores intact in their casings, containers sealed) until additional procedures are required.
- 3.6.3. Sample tracking
- a. As samples are transferred from collection through processing, packaging, and shipment, record sample progress.
 - b. The person(s) performing each step is required to record their initials or signature on the label, sample tracking log, Chain of Custody, and any other document associated with the sample to qualify the condition of the sample at that point of sample progression. See Module I, Section 4.0 (Documentation) regarding documentation requirements.
- 3.6.4. All sampling personnel are required to perform sample collection, processing, and packaging activities in a manner that does not compromise the integrity of the samples or the requirements associated with the sampling event.
- a. Follow documented procedures and adhere to requirements.
 - b. Notify supervision of problems or concerns.
 - c. Adhere to all requirements regarding documentation of activities, conditions, observations, and measurements.
- 3.6.5. All equipment that is used to measure or analyze samples in the field requires calibration, routine maintenance, and at least annual standardization. This equipment is calibrated following procedures included in the manufacturer's users manual or performed in the laboratory. Equipment used to obtain volumetric sample measurements must be certified to appropriate volume specifications.
- a. Instruments that are routinely used in the field and require calibration and standardization or certification to ensure measured sample weights and volumes are accurate include:
 - Balances or scales
 - Volumetric pipettes, beakers, graduated cylinders
 - Air sampler flow rate meters and totalizers
 - Lapel air samplers
 - Water pumps

- b. Analytical equipment that may be used in the field that require calibration to ensure sample analyses are accurate include:
 - pH meters
 - Turbidimeters
 - Dissolved oxygen and/or conductivity meters
- 3.6.6. Unused sample collection materials, such as air filters and swipes are to be sent to the laboratory with each batch of samples to be analyzed for radioactive analytes. These materials provide the analytical laboratory with information that will determine if any activity measured is the result of inherent radioactivity of the filters or swipes used, and the results may be used in assessment of the final field sample results.

4.0 Documentation

NOTE: ALL documentation produced in collecting and processing samples is considered a legal record and is to be treated as such. Legibility and permanence are to be maintained. If errors are made, either the document error is struck out using a single line and initialed and dated, or it is re-written, checked for accuracy, initialed and dated, and attached to the original for record keeping.

4.1. General Considerations

- 4.1.1. Pens and markers should be of black indelible ink capable of writing on damp labels and containers. Pens and markers taken inside the contamination zone should be discarded with waste or used disposable PPE.
- 4.1.2. Logbooks, Forms and Reports should be assembled and maintained as permanent records.
 - a. If taken to the sampling area, they should be controlled outside of the contaminated zone to prevent contamination. If required to be taken into the zone, take only a blank copy of the form or page of the logbook. Once out of the contaminated area, they are to be rewritten into the original permanent records and verified as transcribed correctly once outside of the zone.
 - b. Required records include:
 - Sample Identification Codes (SICs)
 - Field Log Book
 - Field Report Forms
 - Chain of Custody (COC) Forms
 - Photographs, when practical
 - Make, model, and accuracy information for any electronic equipment used
 - c. Written documents are generated and maintained as the primary records of the sampling event. However, information also may be entered into an electronic record during or, as soon as practical, following sample collection.
- 4.1.3. Control of written and electronic records is detailed in the SCP.

4.2. Sample Labels

- 4.2.1. Sample labels must be applied to each sample container (including any container that holds a blank or quality control sample), with information that identifies and describes the sample. Sample labels are to include the following information at a minimum:
- SIC
 - Time and date sample collected
 - Sample volume and matrix
 - Sample collection location (GPS coordinates or brief description)
 - Signature or initials of the sampler
- 4.2.2. If samples are placed in two containers (e.g., double bagged), a duplicate label may be placed on the outside of the first bag or container, but inside the second bag or container, for legibility. If a duplicate label is used, it must be identified as a duplicate label or copy. If samples are triple-bagged, the duplicate label should be placed on the outside of the second bag or container, and inside the third.
- 4.3. Sample Identification Codes (SICs)
- 4.3.1. SICs are required for all samples collected, with the exception of equipment blanks.
- 4.3.2. Each sample must have a unique SIC.
- a. SICs typically consist of an alpha-numeric sequence code that includes a coded date and location marker.
 - b. All assigned SICs are used to track the sample location, type of sample, date and time of sample collection, and sample collector.
- 4.3.3. The SIC is recorded on all field documentation, sample container labels, Chain of Custody forms, and any other documents pertaining to the sample.
- 4.4. Field Logbooks
- 4.4.1. Field personnel, including samplers, are responsible for recording data and maintaining Field Logbooks with adequate information to identify a specific sample and to provide information that may be necessary for interpreting analytical results.
- 4.4.2. Information that should be recorded in a Field Logbook entry includes: number of samples collected, method of sample collection, date and time of collection, any pertinent observations, names of samplers and/or observers, a description of sample location, GPS coordinates, and field screening data, if available. A Field Sample Logbook Entry is provided in Attachment B1. Electronic data recording devices may also be used as a means of recording information in the field. If electronic recording devices are to be used, however, they should be selected based on durability, accuracy, and ease of decontamination.
- 4.4.3. If photographs are included as part of the sampling documentation, the name of the photographer, date, time, site location, and site description are to be recorded sequentially in a logbook as each photograph is taken. After the photographs are developed, the associated information included in the logbook entries is to be written on the back of the photograph.
- 4.5. Field Sample Tracking Form

- 4.5.1. Field personnel, including samplers, are responsible for recording data and maintaining Field Sampling Tracking Forms with adequate information to identify a specific sample.
 - 4.5.2. Copies of these forms accompany samples during shipment.
 - 4.5.3. Information recorded on these forms includes: SIC, sample matrix, sample description and location, sample volume or mass, sample depth, sample type, and number of containers. A Field Sample Tracking Form is provided in Attachment B2.
- 4.6. Chain of Custody
- 4.6.1. Tracking samples from collection to receipt at the analytical laboratory is documented on a Chain of Custody (COC) form. A COC form is provided in Attachment B3 (Chain of Custody Form).

CAUTION: Documentation of changes in the custody of a sample(s) is important. This is especially true for samples that may be used as evidence of intentional contamination or to establish compliance with a release criterion. In such cases, there should be sufficient evidence to demonstrate that the integrity of the sample is not compromised from the time it is collected to the time it is analyzed. During this time, the sample must either be under the physical custody of a responsible individual who is currently listed on the COC or be secured and protected, under lock and key, from any activity that would change the true value of the results or the nature of the sample. Each individual responsible for sample custody is required to provide signatory documentation each time a sample(s) is received or relinquished.

- 4.6.2. Information contained on the COC form is to include:
 - Site information – Address of the site, contact person, telephone number, and emergency contact number
 - SIC for each sample
 - Date and time of sample collection
 - Sample volume or mass
 - Sample matrix
 - Contact gamma reading or any additional radiological screening results of the sample, if available, and as provided by Radiation Protection Personnel
 - Analyses requested – general analyses or specific isotopic tests
 - Printed names and signatures of all persons accepting and relinquishing sample custody, and the date and time of transfer
 - The printed name of the certified courier, courier company, and the name and signature of person(s) relinquishing and accepting custody of the samples
- 4.6.3. If deemed necessary, the following information also should be contained in the COC form:
 - A brief description of the sample(s)
 - Initials of the sampler(s)
 - Method of shipment (ground, air, or both)
 - Any other pertinent information or comments regarding the sample(s)

- 4.6.4. At the time of transport, the individual relinquishing the sample(s) must sign and date the COC form. The receiver also must sign and date the form.
- 4.6.5. The COC is copied and usually has carbonless copies attached to the original that are specified as to use.
- A copy of the COC is to be retained by the individual or organization relinquishing the samples.
 - A copy of the COC is to be placed into a sealed plastic bag. The sealed bag is placed inside of the sample transport packaging prior to sealing for transport.
 - The original COC is sent to the analytical laboratory in a separate envelope.
- 4.6.6. The receiving laboratory is required to submit a signed copy of the completed COC to the Field Team Leader after receipt of the samples, and the original is to be returned with the data package. The laboratory should include the following information with or on the completed COC:
- Time and date received and signature of the person receiving the samples (appears on the COC)
 - Condition of the packaging and the security seal, and condition of security seals, where applicable
 - Condition of and any problems with the individual samples, such as a broken container, missing samples, illegible information
- 4.7. Verbal Discussions
- 4.7.1. All verbal discussions pertinent to the sampling event, samples, or transport and receipt of the samples by the analytical laboratory are to be documented in the Field Sampling Logbook.
- 4.7.2. If sample collectors are contacted by the laboratory, the following information is to be documented:
- Name of the person who called
 - Name of the person who received the call and answered the questions
 - Content of the conversation, including any specific data or information discussed or provided
 - Time and date of the call
- 4.8. Transport Documents
- 4.8.1. Common Carrier documents should be included with each shipment and completed as required by the individual carrier.
- 4.8.2. All packages must securely display the following:
- Sampling contact information, mailing address, and phone number
 - Laboratory name(s), mailing address, and phone number
 - Quantity and description of contents
 - Date of shipment
 - Appropriate U.S. Department of Transportation (DOT) radioactive/radiation labels and/or Nuclear Regulatory Commission (NRC) labeling

5.0 Personnel/Equipment Decontamination

NOTE: The instructions provided in this section are intended to provide general information and guidelines. Requirements set forth by site Radiation Protection Personnel also must be consulted and followed for site-specific requirements and procedures.

5.1. Surface Contamination

Surface contamination can usually be detected by Radiation Protection Personnel, using direct monitoring equipment and methods. In areas of high background radiation levels, however, surface swipes should be taken and provided to Radiation Protection Personnel for assessment of contamination prior to exiting the site. Alternatively, suspected contaminated equipment should be controlled in an area of lower background levels for direct reading.

5.2. Personnel and Equipment Decontamination

- 5.2.1. All personnel, equipment, materials, tools, or other objects exiting a controlled area will be surveyed by Radiation Protection Personnel to determine the presence of contamination, and if necessary, will be decontaminated prior to leaving the controlled area.
- 5.2.2. Any material or personnel that exceeds the site's release limits, as detailed by Radiation Protection (e.g., 2x background levels), are to be controlled to prevent the spread of contamination.
- 5.2.3. Any personnel decontamination is to be handled by Radiation Protection Personnel.
- 5.2.4. Contaminated sampling materials are to be decontaminated per procedures described in Sections 5.3 and 5.4, and subsequently surveyed by Radiation Protection Personnel for controlled release.
- 5.2.5. Equipment that is considered complex (e.g., has recessed areas or crevices, air flowing through it for cooling, or water pumps) are to be fully surveyed by Radiation Protection personnel to determine if and how decontamination is to be performed.

NOTE: All wastes produced from wiping off a contaminated surface are to be considered contaminated until proven otherwise.

5.3. Dry, Wet and Chemical Wiping

- 5.3.1. Surfaces of used sampling equipment and sampling containers are to be cleaned with single wiping motions, starting with equipment handles or outer edges and moving to the most contaminated areas.
- 5.3.2. Dry wiping with clean cloths or paper towels should be used to remove all visible solids contamination.
- 5.3.3. Swiping with cloths or paper towels dampened with deionized water should be used to remove additional contamination. Additional swipes can be used as necessary.
- 5.3.4. Chemically treated swipes (soap swipes, alcohol prep pads, or other approved cleanser) may be used to remove heavy grime.

5.4. Decontamination of Pumps and Hoses

- 5.4.1. Pre-rinse the pump and associated piping/tubing/hose by operating the pump in a deep basin containing approximately 30 to 40 L (8 to 10 gallons) of potable water for approximately 5 minutes.

- 5.4.2. Wash the pump and associated piping/tubing/hose by operating the pump in a deep basin containing approximately 30 to 40 L (8 to 10 gallons) of potable water containing a non-phosphate detergent (e.g., Alconox) for 5 minutes.
 - 5.4.3. Repeat the wash with a fresh solution of detergent.
 - 5.4.4. Rinse the pump and associated piping/tubing/hose by operating the pump in a deep basin containing approximately 30 to 40 L (8 to 10 gallons) of potable water for 5 minutes.
 - 5.4.5. If practical, take a sample of the rinse water (1L, or 0.25 gallons) and have the sample evaluated by the Radiation Protection Team for gross alpha and beta radiation. If gross alpha and beta screening is impractical, disassemble the major pump components and allow to dry. Take a swipe of the internal openings of the pump suction and discharge and the associated piping/tubing/hose and have the swipes counted for alpha and beta contamination.
- 5.5. Washing and Rinsing
- 5.5.1. Place a small amount of water in a container with sufficient room for washing the equipment.
 - 5.5.2. Using a cloth, wash the piece of equipment.
 - 5.5.3. Rinse the equipment with a minimal amount of water, collecting the rinsate into a wash container.
 - 5.5.4. Wipe off the equipment with a clean paper towel or cloth.

| |
|---|
| NOTE: Deionized or distilled water should be used for all final rinsing. |
|---|

- 5.5.5. Give the equipment a final rinse with a minimum of rinse water, collecting the rinse water in a separate clean sample container. The final rinsate is to be submitted as a sample.
- 5.5.6. Dry off the equipment with a clean paper towel.
- 5.5.7. Take a swipe of the equipment and submit the swipe to Radiation Protection Personnel for analysis to ensure the equipment is properly decontaminated. If radiation is detected and is not removed by additional rinsing (e.g., additional rinsing with rinse water or with 1% nitric or hydrochloric acid), bag and seal the equipment for delivery to a decontamination station or laboratory.

6.0 Waste Control

6.1. General

- 6.1.1. All waste containers are to be clearly labeled or identifiable as waste. Waste containers may be bottles, drums, plastic bags, or garbage cans dependent on the type of waste.
- 6.1.2. Clean trash is to be clearly segregated from potentially contaminated or contaminated waste.
- 6.1.3. Waste material should not penetrate or be capable of chemically reacting with the containment used. To prevent leakage or loss of sample, use waste containers that are durable, can be sealed, and are composed of materials that will not be affected or compromised by the sample.

-
- 6.1.4. After each addition, the waste container should be closed. After final insertion of material, the container should be sealed.
- 6.2. Solids
- 6.2.1. Dry Wastes
- a. Place dry material in a labeled plastic bag or container that is appropriate for containing the waste material.
 - b. Material should not cut through or penetrate the containment. If necessary, sharp edges should be taped or otherwise wrapped.
 - c. After each addition, the container should be closed. After final insertion of material, the container should be sealed.
- 6.2.2. Wet or Damp Wastes
- a. Place wet or damp material in a labeled plastic bag or container that is appropriate for containing the waste material.
 - b. Material that emits fumes or odors should be evaluated by the authorized safety individual regarding the need to control vapors, as some vapors may cause explosions of the container.
- 6.3. Liquids
- 6.3.1. Liquids should be segregated based on material (e.g., water should be contained with water, oils with oils, etc.). Wastes should be evaluated by the authorized safety individual for compatibility to ensure that hazards are not produced from mixing.
- 6.3.2. Liquid wastes that emit fumes or odors should be examined for possible vapor control problems as some vapors may cause explosions of the container.
- 6.4. Segregation
- 6.4.1. As waste material is produced and collected, segregation must be used to prevent and control additional contamination and radiation exposure levels.
- 6.4.2. Radiation and radioactivity levels in the materials used for decontamination will normally be insignificant.
- 6.4.3. Storing samples in a single location may result in radiation levels that could potentially affect background radiation levels, or result in personnel exposure. Care should be taken to monitor radiation levels according to applicable regulatory or radiation protection requirements. If necessary, move or shield the samples. If radiation levels from unshielded samples exceed applicable limits, the samples should be placed in shielded containers. If radiation levels in an area where samples are being stored exceed manageable levels, refer to the appropriate radiation protection guidelines.
- a. The potential for decontamination materials to spread contamination is often higher than the potential of contamination from the actual samples taken. Materials used for decontamination should be handled in a manner such that its accumulation and movement will not result in the potential for release.
 - b. Waste containers can release loose material, vapors, or liquids if the containers are breached.
- 6.5. Disposal

- 6.5.1. Prior to creation of any waste, the procedures or mechanism for control or disposal of the waste must be determined.
 - a. The Field Team Leader is to instruct the sampling team regarding the actions to take to control or remove the waste generated.
 - b. Waste compiled for disposal is to be documented. Appendix B4 (Example Waste Control Form) presents a typical format for documenting wastes for disposal.
- 6.5.2. A sample of each waste stream may be required to be packaged and shipped to a laboratory for characterization.
- 6.5.3. Wastes may be required to be left on site for disposal during the remediation process.

7.0 Sample Packaging and Transport

WARNING: Samples should be considered contaminated, and the appropriate PPE worn, during the sample packaging and loading process. All samples being shipped for radiochemical analysis are to be properly packaged and labeled before transport off site or within the site. U.S. DOT shipping regulations must be consulted and are summarized in Sections 7.1 through 7.5 below. The primary concerns are incidents that can occur during sample transport (e.g., bumping, jarring, stacking, wetting, and falling) and can result in the breakage of the sample containers or increase the possibility of spills and leaks. In addition to resulting in loss of samples and cross contamination, the possible release of hazardous material poses a threat to the safety of persons handling and transporting the package and to laboratory personnel opening the package.

NOTE: Ice chests, constructed of metal or hard plastic, make excellent packaging for low-level radioactive environmental samples. Drums (30- or 55-gallon) meeting the requirements of Type A packaging (identified by markings on the drum) are required for samples meeting U.S. DOT placard requirements for Radioactive White I, Radioactive Yellow II, or Radioactive Yellow III.

- 7.1. Regulations and Requirements
 - 7.1.1. Various agencies have controls over the transport and shipment of radioactive material, including the DOT and the NRC.
 - 7.1.2. All requirements for transport and shipment included in this document reflect the requirements of these agencies.
 - 7.1.3. Definitions of terms pertinent to transportation of materials are stated in 49 CFR Parts 171 through 173.
 - a. Class – Class refers to the hazard classification of the material for transport purposes. Radioactive material is defined as Class 7.
 - b. Labels – Indication and signs on a packaging or on material contained in a packaging that designate a hazard or hazardous condition or handling requirements inherent to the packaging or package.
 - c. Markings – Indication signs pertaining to design or specifications of a package, irrespective of its use.
 - d. Overpack – An enclosure that is used by a single consignor (the site) to provide protection or convenience in handling of a package or to consolidate two or more packages for shipping purposes.

-
- e. Package – The packaging with its radioactive contents as presented for transport. For example, a sample cooler used to transport a single sample or multiple samples.
 - f. Packaging – The assembly of components necessary to enclose completely the radioactive contents. It may, in particular, consist of one or more sample containers, absorbent materials, spacing structures, radiation shielding, service equipment for filling, emptying, and venting and pressure relief devices integral to the package. The packaging may be a box, drum, or similar receptacle or may also be a freight container consistent with the required performance standards for transport.
 - g. Transport index (TI) -The dimensionless number (rounded to the next tenth) placed on the label of the radiation level measured in mSv/hour times 100 or the level in mrem/hour at 1 m (3.3 feet).
- 7.1.4. The NRC provides regulations governing packaging, preparation, and shipment of licensed and special nuclear materials at 10 CFR Part 71.
- a. Samples containing low levels of radioactivity are exempted as set forth in 10 CFR Part 71.10.
 - b. Low Specific Activity (LSA) material is defined and discussed in 10 CFR Parts 71.4 and 71.88.
 - c. Samples classified as LSA need to meet the requirements of the NRC and the requirements of the DOT.
- 7.1.5. DOT provides regulations governing the transport of hazardous materials at 49 CFR Parts 170 through 189.
- a. Requirements of Marking and Labeling Packages and Placarding Transport Vehicles for Shipment requirements are detailed in 49 CFR Part 172.
 - b. Accident Reporting is discussed in 49 CFR Part 171.
 - c. Packaging definitions and requirements are in 49 CFR Part 173.
 - d. Requirements for training shippers; what is to be included in the shipping papers; and what emergency information is necessary for the shipment are detailed in 49 CFR Part 172.
- 7.2. Transport Materials
- 7.2.1. Alert and Hazard Labels
- a. Color-coded alert labels can be used to assist in processing a sample by identifying a sample emitting elevated radiation levels and/or designating sample analysis priority in order to facilitate compliance with sample-segregation requirements specified in the Manual for the Certification of Laboratories Analyzing Drinking Water (EPA 815-R-05-004).
 - Red denotes radiation levels are equal to or greater than 0.005 mSv/hour (0.5 mrem/hour) and the highest analysis priority.
 - Yellow denotes radiation five times above background but below 0.005 mSv/hour (0.5 mrem/hour) secondary analysis priority.
 - Blue denotes the lowest analysis priority.

- Labels are typically circular with a diameter of 2.5 cm (1 inch).
- b. Hazard labels are required by DOT for shipment and transport purposes. They are specified as to appearance, wording, dimensions, and coloring to be recognizable to handlers during their transport from the site to the analytical laboratory. These labels include:
- Radioactive Material
 - Surface Contaminated Object (SCO) – SCO-I and SCO-II
 - LSA (Low Specific Activity) – LSA-I, LSA-II, and LSA III
 - Radioactive White I, Radioactive Yellow II, and Radioactive Yellow III
 - Special Nuclear Material (SNM)
 - Corrosive
 - Red or black arrows (“This Way Up”) indicating either direction the package is to be maintained to prevent damage or spillage.
- c. All shipments of radioactive material, with the exception of those containing excepted quantities (typical in the Final Status Phase of sampling), are to bear two identifying hazard labels affixed to opposite sides of the outer package.
- d. A single hazard or alert label, or a combination of these labels, may be required to be placed on a sample container or package based on the hazards identified or considered to be contained in the sample container or package.
- e. DOT regulations at 49 CFR Parts 171 - 173 should be consulted for specific packaging and labeling requirements. Several vendors and government agencies, including DOT, offer specific training on these regulations.
- 7.2.2. Strong tight containers (packaging) should be used to transport samples.
- a. Packages are to meet DOT design requirements; Type IP-I, II, or III, Type A, or Type B.
 - b. Packages should survive incidents that can occur during transport, without a release of the contents.
 - c. Packages should be easy to handle and properly secured.
 - d. Each lifting attachment, if contained on the packaging, should have a minimum safety factor of triple (3x) strength and provide non-structural damage if failure occurs.
 - e. The external surface of the container should be smooth, free of unnecessary protrusions, dents, or gouges, and easy to clean.
 - f. All construction materials should be compatible and able to withstand radiation.
 - g. Any valve on the container should be protected against leakage or inadvertent opening.
- 7.2.3. Absorbent Material
- a. The transport container must contain triple (3x) the amount of absorbent material required to absorb the entire amount of liquid being shipped.

- b. Absorbent material should not degrade when exposed to the liquid being absorbed or from conditions incident to transport.

7.2.4. Cushioning Material

- a. The material must be able to absorb impact placed on samples during transport.
- b. It must be sufficient to prevent damage from occurring to samples.
- c. Absorbent material may also be used as a cushioning material.

7.2.5. Shielding

- a. Shielding materials range from plywood to tin or lead sheets. Shielding also may be accomplished by placing low-level samples around high-level samples. However, combined shipment of samples containing disparate levels of contamination should be avoided, or extra precautions should be taken to prevent cross-contamination.
- b. Amount of shielding used is dependent on radiation levels, packaging strength, and weight limits of the package.

7.3. Preparing Samples for Transport

7.3.1. Field and Sample Data Compilation

- a. Original Field Sample Logbooks and Field Sample Tracking Forms are to be maintained in a secure location.
- b. Copies of the appropriate pages of the Field Sample Logbooks and Field Sample Tracking Forms are to be sent to the laboratory with the samples. Appropriate pages include information regarding sample volume or weight, screening results, and potential hazards.
- c. Ensure Sample Identification Code labels are on each sample container.

7.3.2. Wipe individual sample containers with a damp cloth or paper towel to remove any exterior contamination.

- a. If the original sample container has been placed in a bag, it is recommended that the bagged sample container be placed in a second, clean bag. The practice of double bagging is more efficient than wiping containers with absorbent material, and is a more effective method for preventing the spread of contamination and the generation of additional waste.
- b. If the sample container was not wiped off and checked for contamination, it is to be noted in the Field Sampling Logbook and on the COC.

7.3.3. Ensure contamination and radiation levels of the outer container are measured.

| |
|---|
| <p>NOTE: Sample radiation and contamination readings are performed by Radiation Protection Personnel. The following information is provided as guidance for steps to be performed prior to sample transport.</p> |
|---|

- a. Perform a surface gamma exposure rate measurement and a surface alpha and beta contamination survey of sample containers. Record the results on the Field Sample Tracking Form.
 - If surface contamination exceeds allowed limits, decontaminate the container and repeat the survey.

- If surface gamma exposure is greater than background levels, record the reading on the sample container and the Field Tracking Form.
- Place Alert labels on containers that exceed 5x background radiation levels.

NOTE: When determining loading of packaging (i.e., arrangement, weight, and stabilization), allow for the addition of packing materials.

- b. Based on gamma levels and types of samples, pre-stage samples for loading into the sample transport packaging. Samples with higher radiation levels are to be in the center of the packaging.
- c. The final package cannot exceed:
 - 2 mSv/hour (200 mrem/hour) at any point on the outside of the package
 - A TI of 10
 - 0.4 Bq/cm² (22 dpm/cm²) beta – gamma loose surface activity
 - 0.04 Bq/cm² (2.2 dpm/cm²) alpha loose surface activity
- d. Once the samples have been screened and selected for transport, create a list of the samples and SICs that will be placed in the packaging container and record the order of their arrangement in the packaging.

7.4. Packing the Transport Packaging

7.4.1. Avoid cross contamination of samples and sample containers during packing.

7.4.2. Ensure the sample containers are controlled and sealed to prevent spillage during shipment.

- a. Double bagging of sample containers is required prior to packing the samples. Heavy plastic bags, with or without zip-lock seals, can be used.
- b. Heavy plastic lawn bags can be used to contain vegetation samples.
- c. Bags should be large enough to allow the upper ends to be twisted to seal the top closed. Tape is applied to the area of the twist, and the top is folded over and sealed with tape. One continuous piece of tape can be used, tabbing the end to allow for removal.
- d. Caps on containers holding liquid samples should be secured with tape, placed into plastic bags containing sufficient liquid absorbing material (i.e., must be able to absorb 3x the volume of the sample), and the bags sealed.

7.4.3. Pack the samples in the sample transport packaging.

NOTE: DOT has design specifications for each type of packaging; however, the construction of the packaging, as certified by the manufacturer, limits the total weight of the package and the capability to retain shielding. The shipping transporter will also have limitations as to the maximum weight of any one package that they will transport. These considerations will be pre-determined prior to sample shipment, but the sampling team needs to be aware of any restrictions that apply.

- a. Use the packing list and pre-determined packing order (see Step 7.3.3.d) as guidance in loading the packaging, noting that changes may be required based upon actual radiation levels and weight considerations.

- b. If necessary, add shielding to the outer sides of the inside of the packaging.
 - c. Place shock absorbing material (bubble wrap, packing peanuts, vermiculite) or liquid absorbing material (e.g., vermiculite) around the samples, as appropriate, including the bottom of the transport packaging and the area above the samples. Samples should be in contact with the shock or absorbent materials, and should not be in contact with each other.
 - d. Ensure that heavier materials are placed on or near the bottom of the packaging.
 - e. DO NOT jam or overload packaging.
 - f. DO NOT pack the packaging to an overweight condition.
- 7.4.4. Assign the package an identification number. Record the package number, samples contained within, and conditions of the contents in the Field Sample Logbook. Record the sample package number on the package.
- 7.4.5. Obtain results of a surface contamination and radiation survey of the exterior of the filled transport package from the site Radiation Protection Personnel.
- a. If surface contamination exceeds allowed limits, decontaminate the package and repeat the survey. Record the results of the survey in the Field Sample Logbook.
 - b. Record the highest and lowest gamma readings on contact, the highest reading at 1 m (3.3 feet), and the location where the reading was noted on the Field Sample Tracking Form.
- 7.4.6. Complete the COC form with all necessary information, per Section 4.6, and place a copy of the COC in a zip-lock bag taped to the top of the inside lid of the packaging.
- 7.4.7. Close and seal the transport package.
- a. Apply a security seal in such a manner that it will be torn (broken) if the package is opened. The tape should include the signature of the sender, and the date and time the seal was applied, so that it cannot be removed and replaced.
 - b. Place a completed custody seal on the package.
 - c. The container is to be secured with a locking mechanism or a method of securing closure.
 - If a White I, Yellow II, or Yellow III label is required, the package is to have a locking mechanism and a security seal.
 - Industrial Type I packaging, such as a cooler, may be secured with clear packing tape or duct tape.
 - d. Write the following information on the outside of the package.
 - Weight of the package
 - Sender's name and address
 - e. Attach "This Way Up" labels and any other required labels, 180° apart from each other (opposite sides) on the package.
- 7.5. Transfer of Custody to an Authorized Carrier
- 7.5.1. Samples, by federal law, may be transported only by authorized carriers.

- a. Authorized carriers must be identified prior to sample shipment. Authorized carriers of hazardous materials must be certified by DOT and, as of September 2005, these carriers must also be certified by the U.S. Department of Homeland Security (DHS) according to DOT's Hazardous Materials Regulation Unit.
 - b. Transport by an individual or sample collector is not authorized by federal regulations.
 - c. The U.S. Postal Service will not ship radiological samples.
 - d. Government-specified carriers may be used. FedEx and United Parcel Service are typical authorized carriers. There are other carriers that specifically transport high level radioactive materials.
 - e. Shipment of high-level radioactivity samples should be coordinated in advance to avoid delays that could impact response.
- 7.5.2. Transfer custody of the samples to the carrier, obtaining a signature from the authorized agent on the COC form.
- a. It is the responsibility of the carrier and the shipper to ensure packages are properly loaded for transport prior to departure from the site.
 - b. Packages loaded into a vehicle are to be secured from movement during transport.
 - c. Packages of varying contamination levels are segregated. Packages containing samples that are above background ($\geq 5x$ background) are stored in a shielded area of transport vehicles as far away from transport personnel and meters (e.g., dosimeters) as possible.
 - d. A loading plan may be required to be determined prior to loading samples into transport vehicles.
 - e. The vehicle is surveyed prior to transport to ensure that the limits for radiation levels outside the vehicle are met.
 - Not to exceed 2 mSv/hour (200 mrem/hour) on the external surface of the vehicle
 - Not to exceed 0.1 mSv/hour (10 mrem/hour) at any point 2 m (6.6 feet) from the outer lateral surfaces of the transport vehicle
 - Not to exceed 0.02 mSv/hour (2 mrem/hour) in any normally occupied space on the transport vehicle
 - f. The vehicle should remain locked at all times during transport.
- 7.5.3. The original COC form (after custody transfer signature), copies of corresponding Field Sample Logbook entries and Field Sample Tracking Form(s), and a copy of the shipment paperwork should be sealed in a plastic bag and sent overnight to the analytical laboratory.

MODULE II - SAMPLING PROCEDURES – SITE CHARACTERIZATION AND REMEDIATION PHASES

1.0 Collection of Samples

1.1. Overview

- 1.1.1. This module outlines procedures, equipment, and other considerations specific to the collection of representative environmental samples for the measurement of radiological contaminants during the Characterization and Remediation Phases of a contamination incident.
- 1.1.2. The intent of any sampling event is to maintain sample integrity by preserving physical form and chemical composition to as great an extent as possible. Samplers should rely on training, experience, and supervisory guidance to ensure the sampling event provides the best samples possible to determine the extent and nature of the hazards encountered.
- 1.1.3. Materials exposed to a release of radioactive contamination can contain three types of contamination: (1) loose surface contamination from the deposition (fallout) of airborne material, (2) fixed surface contamination from deposited material that has been absorbed or physically impregnated into a surface, (3) contamination that is being transported by a liquid or solvent, and (4) activated material. The latter is a result of the release of neutron radiation, which transforms the material from non-radioactive radionuclides into radioactive radionuclides. Generally, activated materials generally will be found only at ground zero of a nuclear detonation.
- 1.1.4. The following issues should be considered by the sample collection team and the Field Team Leader during implementation of the procedures described in this document and the requirements of the Sample Collection Plan (SCP).

NOTE: Surveys of the ground surface are performed by the Radiation Protection Personnel. The sampling team is required to review survey results for contamination and radiation prior to taking a sample.

- a. In general, large volumes or numerous samples are more representative than small volumes. In addition, large sample volumes provide sufficient sample to ensure that required detection limits can be achieved across a broad array of radionuclides, and that sample reanalysis can be performed if there is a problem. The amount of sample collected may be larger, but should never be less than the required volume or mass.
 - b. During the Remediation Phase, the sample volume may increase, decrease, or both. The variations will be dependent on the results found during Characterization Phase sampling, specifically the radionuclides and activities/concentrations found.
 - c. Large samples may cause problems with shipping, storage, and disposal, as larger volumes can contain higher radiation levels and require shielding or more numerous smaller sample shipments.
- 1.1.5. During the Characterization Phase of sample collection, measurement quality objectives (MQOs) corresponding to the specific event are based on unknown contaminants or on-site assessment and screening. The MQOs set during the Remediation Phase will be based on the knowledge obtained from samples taken during the Characterization Phase.

- 1.1.6. The following volumes have been determined to be necessary to meet MQOs in the Characterization and Remediation Phases of sampling and are to be the volumes/masses taken unless otherwise specified by the SCP.

NOTE: The sample volumes and masses in this document are provided as guidance with respect to typical laboratory requirements for current analytical methods. Sample volumes/masses will be site- or event-specific, and sample collectors should consult the SCP regarding requirements for the number and volume/mass of samples to collect. These sample volumes/masses should be considered to be minimum sample sizes; additional sample volume/mass may be necessary to satisfy laboratory quality control (QC) sample requirements.

- a. The required volume for soil and sediment samples is 1 L (0.26 gallons) or approximately 1.6 kg (3.5 pounds). Because 1 L of dry, debris-free sample is required for analysis, it is recommended that at least 1.5 L (0.4 gallons) of sample be collected.
 - Collect samples that are free of debris, vegetation, rocks, stones, etc., to the greatest extent practical.
 - Collect samples that do not contain a significant amount of liquid.
 - Consult with the SCP regarding area and depth dimensions needed for collection of an appropriate sample amount.
- b. The volume for water is 4 L (1.1 gallons).
 - Samples are to be relatively free of sediment or debris.
 - Samples are to be free of oil and sludge.
- c. Air sample volumes are highly dependent on the sample collection device and site-specific MQOs. Sample collectors should consult the SCP for requirements regarding the air sample collection device to use, collection flow rate, duration, and sample amounts needed.
- d. The area required to be covered by swipe samples is dependent on the surface sampled and is to be reported in cm².
 - Smaller surfaces should be at least 100 cm² (16 inches²) per swipe
 - Larger surfaces should be 300 cm² (48 inches²) per swipe
 - Large surfaces (greater than 300 cm²) should be swiped in various, random locations using multiple swipes to cover approximately 1% of the surface area.
- e. The required amount for samples of vegetation is 1 kg (2.2 pounds) or approximately 6.5 L (1.7 gallons) of solid packed, low density (0.6 m/v) vegetation (leafy material such as grass).
- f. All other material volumes are dependent on the material sampled and ability to obtain the sample, and are to be reported in kilograms or liters.

1.2. Precautions and Limitations

1.2.1. General Precautions and Limitations

- a. ALL Personal Protective Equipment (PPE) is to be donned, worn, and properly disposed of during the sampling event.

- Improper use of the PPE can result in contamination of or injury to the individual.
 - Improper use of the PPE may result in the spread of contamination beyond the incident sampling site.
- b. To collect a representative sample, collect from a relatively open area. If possible, and unless otherwise instructed in the SCP, samples should not be taken from areas located under trees or in areas containing numerous rocks, or large growths of vegetation. These features can prevent surface deposition, and can act as absorbers of deposited material.
 - c. Avoid contacting equipment and materials with any contaminated or potentially contaminated surface. Use a plastic bag to cover the surface and place materials onto the plastic bag or sheeting. This reduces carryover, contamination, and exposure.
 - d. Note road locations and landmarks in the Field Sample Logbook. Any information that can be used to clearly ascertain the position of a sample location is important. Global Positioning System (GPS) coordinates are used to specify an exact sampling point.
 - e. Always refer to the instructions provided in the SCP or by the Field Team Leader prior to taking any samples.

1.2.2. Collection of Soil Samples

- a. Soil samples require minimal field preparation and are not preserved. Homogenization is of greater importance, except in cases when samples of true surface contamination are requested.
- b. Simple field techniques, such as coning and quartering, are used to homogenize soil or sediment samples. If required, homogenized samples are divided for the creation of replicate samples.
- c. During Site Characterization, if a sample contains significant amounts of residual water (e.g., forms clumps of soil or has standing water), homogenization and separation into sample aliquots must be performed in a laboratory. This will minimize the contamination of personnel and equipment. The sample should be examined to determine the potential volume of liquid and to ensure sufficient soil or sediment sample is collected for all required analyses.
- d. During Site Characterization, the SCP must be reviewed for specific instructions for retaining or shipping excess materials such as rocks, stones, and vegetation. If required, these materials are separated and placed into separate bags containing the same Sample Identification Code (SIC) of the sample. This is especially true for surface soil samples. Refer to the SCP for the proper disposition of these materials (i.e., sent to the laboratory, retained on site in storage, or disposed).
- e. During Site Remediation, rocks, stones, and vegetation are typically segregated and left at the sampling site.

1.2.3. Collection of Sediment Samples

- a. When sampling sediment, a wide variety of materials may be encountered. The matrix may include fine-grained material, a mixture of coarse and fine-

grained material, and dead vegetative material (leaves, sticks, etc.) or peat moss.

- b. Bulk sediment samples can be collected by grab sample, dredge, or core sampler. The equipment used to collect discrete samples will depend upon the type of material encountered. Therefore, various sampling tools should be available to ensure the collection of representative samples. Refer to Module I, Section 2.0 (Equipment and Materials) and Appendix A1 (Sampling Equipment).
- c. One of the problems encountered when sampling sediments is the amount of water in the sample. A high level of water content will increase the analytical detection limits of the sample, as the concentration calculation is determined on a dry weight basis.

1.2.4. Collection of Water Samples

- a. Water samples must be representative of the body of water from which the samples are collected. If the sampling event is conducted in heavy rain, rain water and sediments might be present in the sample, causing bias.
- b. If possible, samples should be collected from a point of lesser turbidity and limited vegetation.
- c. During Site Characterization, sample volumes should be consistent over the sampling events.
- d. During the Characterization Phase, all material collected during the sampling event should be included in the sample. Unless sample filtration is required and performed in the field (see Appendix C), any sediment present in the sample is required to be shipped with the sample and not separated. If the sample contains significant amounts of residue or sediment, the sample is allowed to sit until the majority of the sediment has settled, and the volume of water is evaluated to ensure that sample volume requirements are met.
- e. During the Remediation Phase of sample collection, specific volumes or weights may be requested. The SCP should specify whether a water sample is to be taken based on the sample volume or weight.
- f. During Site Remediation, samples containing significant amounts of residue or sediment should be allowed to settle and the liquid decanted. The body of water is resampled to ensure the proper volume is obtained, and the sediment is discarded at the site.
- g. Replicate samples are collected by pouring aliquots of a bulk sample into separate containers. Each container should include the required sample volume.
- h. Further water sample preparation and handling requirements, including preservation, are to be performed as required by the SCP, and should be performed in a controlled area outside of the sampling zone. Procedures for filtration and preservation of samples in the field are provided in Appendix C as guidance in cases when an SCP requires that these procedures are to be performed in the field. In these cases, samples to be analyzed for dissolved constituents must be filtered prior to preservation.

1.2.5. Collection of Air Particulate, Vapors, and Gas Samples

- a. Weather conditions such as heavy snow, rain, dust and wind, can have a major impact on whether an air sample is representative of the actual environmental contamination levels. Air filters can become completely clogged with snow, dust, ice, or particulates. If fires are in the area, particulate loading of filters can become a significant problem.
 - After reviewing the direction of the wind to determine the spread of the plume, air samples should be taken at a location that is downwind of locations at which high depositions are expected. The direction of the prevalent wind also must be used to determine where long term air samplers should be located.
 - If the weather is inclement, a covering or housing should be placed either underneath or inside of a covering or housing to minimize debris, rain, or snow from being impinged on the sample filter or cartridge.
 - If air samples are taken in the vicinity of an automotive vehicle, the sampler should be positioned upwind of the vehicle's exhaust.
- b. Power supplies are required to take particulate and vapor air samples.
 - When using a generator, place the generator downwind and far enough away to reduce exhaust capture.
 - When using power from a vehicle, such as a power inverter plugged into the cigarette lighter outlet, place the sampler on the hood of the vehicle to reduce exhaust capture.
 - Make sure to have fire suppression equipment readily available.
- c. Gas samples are often taken using vacuum flasks, collection vessels, or bubblers. Care must be taken to ensure the valves on the vacuum flasks and sample collection vessels are prevented from being inadvertently opened prior to and after sampling.
- d. Sampler units (filter and cartridge units) can be assembled outside the plume zone, but should be sealed in plastic bags until the sampler is positioned and placed in a plastic bag upon retrieval.
- e. Air filter, gas, and cartridge samples are to be taken with care to minimize the collection of liquid, water, or water vapor. Air cartridges, particularly those using triethylenediamine (TEDA) impregnated charcoal, have a life expectancy of approximately 1 week at low volumes in high humidity.
- f. When retrieving a filter, it is imperative to collect notes on the condition of the filter, the flow rate of the sampler, and the general environmental conditions.
- g. During Site Remediation, air samples are taken as determined by the SCP and, at a minimum, weekly around the site perimeter, daily at job locations, and per task on workers assigned in the field. The actual locations of perimeter samplers and the number of worker lapel samplers should be dictated in the SCP.

1.2.6. Collection of Surface Swipes

- a. Swipes are to be collected with care to minimize damage to the swipe material or introduction of airborne contamination during the sampling event.
- b. Collection of a swipe sample involves a physical motion that, in areas of high-level surface activity, can cause the material to become airborne. The extent of the airborne problem will be local, but may influence the activity found in other areas as the material falls out from the air. Also, an increase in airborne activity may add a respiratory concern to the sampler.
- c. Wet swipes are used for collection of samples from non-porous surfaces or when the surface contains large amounts of particles that are considered to be part of the sample.
- d. Dry swipes are used when the sample surface is porous and moisture could “push” the contamination deeper into the material.

2.0 Equipment and Materials

The equipment and materials used for sample collection are dependent on the sampling activity. Refer to Module I, Section 2.0 and Appendices A1 through A6.

NOTE: All PPE (Personal Protective Equipment) and sampling equipment is to be pre-staged and available prior to entering a sampling area. The sampling team is to set up a STOP (Step Off Pad) at the entrance to the survey point, and to don appropriate PPE prior to entering the area. Personnel outside of the area may hand material over to, and retrieve material from, personnel in the area using appropriate contamination control techniques. All steps that will reduce the time in the area, such as pre-writing of labels or sample containers, are to be used to minimize exposure.

3.0 Collection of Soil Samples

NOTE: Removal of large stones, rocks, twigs, vegetation and other debris may result in a less than required volume of soil. It is recommended that at least 1.5 L (0.4 gallons) is collected to support analytical method requirements for a 1 L dry sample that is free of debris.

3.1. Ground Deposition

- 3.1.1. Record the location, time, date and other pertinent observation information on the Field Sample Tracking Form.
- 3.1.2. Sample the soil as instructed using either Method A (Maintaining a True Surface Sample) or Method B (Shallow Surface Sample).

NOTE: Care should be taken to minimize contact of gloves with portions of the sample.

NOTE: Do not disturb the sample collection area around a sample point. Stake out and put up boundary lines around the sample point as necessary to ensure that the area is not disturbed.

3.1.3. Method A – Maintaining a True Surface Sample

- a. Using a trowel, mark the edges around the sample collection area specified in the SCP.
- b. Dig a cut line around the edges of the sampling point as wide as the trowel and to the depth specified in the SCP.

- c. Wipe the trowel with a clean paper towel, removing all visible signs of dirt.
- d. Slide the trowel or a flat spatula under the sample point to cut away at the 15 deep point. This will likely require a series of cuts.
- e. Using the trowel or spatula, pick up the sample.
- f. Slowly place the material into a large zip lock bag. If elevated levels of radioactivity are suspected, use of a plastic container is recommended to prevent cross-contamination that could occur if a bag becomes damaged.
- g. Proceed to Section 3.10 (Soil Sample Handling). DO NOT homogenize the sample.

3.1.4. Method B – Collecting a shallow surface sample

- a. Using a trowel, mark the edges of the sample collection area specified in the SCP.
- b. Cut down to the depth specified in the SCP, picking up the sample, and slowly place the material into a clean stainless steel bowl large enough to hold more than the required sample volume.
- c. Prior to homogenization, remove twigs, roots, leaves, rocks and miscellaneous debris (glass, bricks, etc.) from the sample using a clean stainless steel spoon or spatula and return the removed material to the sample location. Consult the SCP for specific instructions for retaining or shipping excess materials such as rocks, stones, and vegetation. If required, these materials are separated and placed into separate bags containing the same Sample Identification Code (SIC) of the sample.
- d. If the volume collected does not meet the sample volume requirements, cut additional material from the outer edges of the hole as needed. Record the amount of additional material in the Field Sample Logbook and Field Sample Tracking Form.
- e. Wipe the trowel with a clean paper towel to decontaminate it, removing all visible signs of soil.
- f. Proceed to Step 3.10 (Soil Sample Handling).

3.2. Wet Soil

WARNING: Sample collection activities performed in wet soil or standing water are to be reviewed and approved by Radiation Protection Personnel and the designated Site Safety individual. These conditions can pose a personnel hazard. Individuals may sink into the surface resulting in twisted ankles or knees, or broken limbs. The sampling of severely soaked soils is to be evaluated for personnel safety prior to the sampling event. As necessary, and under the direction of the Site Safety individual, the soil may be stabilized using a platform, such as $\frac{3}{4}$ -inch plywood or $\frac{1}{2}$ -inch plank boards. Additional concern is required for the penetration or wicking of radioactive materials through non-waterproof clothing. In these conditions, Radiation Protection Personnel shall assess the need for upgraded PPE.

- 3.2.1. If rain and water saturation make the collection area impossible to dig, attempt to remove the surface layer of the collection area with a scoop or sample cup on a reach rod.

- 3.2.2. If snow has fallen or is present, gently remove as much snow as practical prior to collecting the sample. The SCP or the Field Team Leader should be consulted to determine if and how snow samples should be collected as a sample.
- 3.2.3. Record information on the wet soil in the Field Sample Logbook and Field Sample Tracking Form.
- 3.2.4. Proceed to Step 3.10.4 (Soil Sample Handling).

3.3. Dry and Sandy Soil or Sampling a Mixture of Fines and Gravel

NOTE: Samples of unconsolidated or sandy soil, that is extremely dry and falling apart, should be sampled carefully. Material from the area surrounding the sample point should be left as undisturbed as possible. If needed, use a retaining form to prevent side-wall debris from entering the area sampled.

NOTE: Sampling of poorly sorted material consisting of large aggregate and fines may not allow a core sampler to be used.

- 3.3.1. Using a core sampler, split spoon, thief, or grain sampling tool, make a straight plunge into the soil. The SCP or the Field Team Leader should be consulted regarding the depth the sample.
- 3.3.2. Give the sampling tool a twist to create a coring action.
- 3.3.3. Remove the sampling tool carefully from the soil.
- 3.3.4. Empty the sample into a clean stainless steel bowl.
 - a. With a thief, twist the sample handle to open the sampler and lightly shake the sampler.
 - b. With a corer or split spoon, place the sampling tool over a clean stainless steel bowl and carefully disassemble the sampler.

NOTE: Separation of coarse and fine-grained material will be inherent to the process, and may bias the data due to non-representation of all particle sizes present. As a result, data generated from samples of this matrix must be used with caution. As much as possible, samples that are collected should be representative of the particle size distribution present in the material being sampled.

- 3.3.5. Transfer the sample to the sample container. A small funnel can be used to channel the sample into the container, provided the funnel does not restrict the passage of the larger pieces of sample aggregate.
- 3.3.6. Proceed with Step 3.10.4.

3.4. Subsurface Soil

NOTE: At-depth samples are not normally collected during Site Characterization. At-depth samples are generally required if the ground transport mechanisms (water, soil conditions, ground faults) transport the contamination after the contamination incident. The duration of time from incident to cleanup will determine the extent of transport and the need to sample at depth.

- 3.4.1. Consult the SCP to determine depth of sample collection. If the depth is not noted in the SCP, consult the Field Team Leader for instruction.

- 3.4.2. Record the depth, time, date, sample collector, and other information on the Field Sample Logbook and Field Sample Tracking Form.
- 3.4.3. For samples less than 2 m (6.6 feet) deep, advance the hole to the desired sampling depth with a hand auger or a hand operated hammer. An extension rod with a split spoon may also be used.
- 3.4.4. For samples greater than 2 m (6.6 feet) deep, advance the hole to the desired sampling depth with a back hoe bucket, power auger or other drilling rig.
- 3.4.5. Cover a designated spot next to the sample location but sufficiently clear to allow work (within 1 m or 3.3 feet) with a plastic sheet large enough to retain the soil excavated.

NOTE: A 2 x 2 m (6.6 x 6.6 feet) sheet of plastic is typically sufficient for a shallow dig. For a deep dig, the size will be dependent on the depth of the hole and the tool used to excavate the sample point.

NOTE: Plastic sheeting may be placed after the majority of the digging is completed, prior to excavation of the sample volume.

- 3.4.6. Using the sampling tool, deposit the excavated soil onto the designated spot.
 - 3.4.7. Upon reaching the prescribed depth (see Section 3.4.1), collect the sample and move the auger or split spoon to a clean designated area of the plastic sheeting. **DO NOT** mix sample with excavated soil.
 - 3.4.8. Obtain the sample directly from the auger or split spoon, or place the contents onto the designated plastic sheeting and collect the sample from the plastic.
 - 3.4.9. Proceed to Section 3.10 (Soil Sample Handling).
- 3.5. Soil with Vegetation
- 3.5.1. When necessary to collect a sample from an area that is covered with grass, weeds or other organic material, clip the organic material closely to the sample area surface and treat the clippings as a vegetation sample following procedures described in Section 6.0 (Collection of Vegetation Samples).
 - 3.5.2. If the vegetation has stalks greater than 0.6 cm (0.25 inch) in diameter, note the presence of the stalk and take the sample by digging around the stalk. If the stalks are numerous, dig up the stalks and remove the soil from around the roots. **DO NOT** shake soil free. Hold the stalks over a clean stainless steel bowl, and lightly tap or scrape the roots with the trowel or scoop.
 - 3.5.3. Bag any vegetation taken separately from the soil. Label the bags with the SIC for the soil samples.
 - 3.5.4. Record the sample location; the type(s) of vegetation encountered and removed; the area (dimensions) of vegetation sampled; time and date of sample collection; name of the sample collector; and other information in the Field Sample Logbook and on the Field Sample Tracking Form.
 - 3.5.5. Collect a soil sample as described in Section 3.1.
 - 3.5.6. Proceed to Section 3.10 (Soil Sample Handling).

3.6. Waste Piles (Excavated piled material)

NOTE: Waste piles are best sampled as they are made (i.e., as the material is dumped). Radiation Protection Personnel can perform a walkover of the pile with a survey instrument to aid in determining the potential activity in the pile and allowing samples to be taken that are representative of pile activity.

- 3.6.1. Using a trowel, spoon, or scoop, collect a full scoop from each individual dumping and place it into a stainless steel bowl.
- 3.6.2. Cut through the sample to remove rocks, stones, foreign material, and vegetation. Save this material in a separate sample container for possible evaluation.
- 3.6.3. After ten samples have been collected, record the location, time, date and other information on the Field Sample Logbook and Field Sample Tracking Form.
- 3.6.4. Proceed to Section 3.10 (Soil Sample Handling).

3.7. Sediment

- 3.7.1. Drag a cup, dredge, or scoop through the sediment at the bottom of the body of water to collect the sample. If possible, the sampler should not exceed a depth of 6 cm (2.4 inches) when removing a sediment sample.
- 3.7.2. Retrieve the sediment sampling device and lower it into a stainless steel bowl large enough to retain the contents.
- 3.7.3. Deposit the sediment into the bowl.
 - a. Allow the water to rise and sediment to settle.
 - b. Decant the water carefully into a sample container using a funnel. Consult the SCP or Field Team Leader regarding disposal of decanted water.
- 3.7.4. Using a scoop or spoon, remove the sediment and place it into the sample container.
- 3.7.5. Repeat the procedure as necessary to collect the required amount of sample.
- 3.7.6. Proceed to Section 3.10 (Soil Sample Handling).

3.8. Sediment – Deep Water Body Grab Samples

NOTE: Grab samplers used to collect sediment from deep water bodies (lakes, reservoir, rivers, marine basin) normally increase in weight based upon the depth and type of water body and the volume of sample they extract. Many grab samplers are gravity activated and use their weight to penetrate the sediment. Mechanical winches may be required for retrieval. The size and weight of the sampler and the need for a winch will dictate the type of boat or barge that is needed.

- 3.8.1. Drop a sediment grab sampler down into the body of water until the sampler hits the sediment. Allow or trigger the sampler to scoop a sample.
- 3.8.2. Retrieve the grab sampler, using the winch, if required.
- 3.8.3. Inspect the sample retrieved.

NOTE: DO NOT discard any unused sample into the body of water during the sampling event.

- a. If the sample does not meet the criteria set in the SCP for filling the grab sampler bucket, drop the sample into a separate container, decontaminate the sampler if required, or replace the bucket sleeving and take another sample. Potential reasons for rejection include:
 - Sampler jaws not closed and major portion of sample lost
 - Sample appears to be washed out of bucket
 - Sample leveled at a slope in the bucket (higher at one side than the other)
 - b. If the sample meets the criteria set in the SCP, continue to the next step.
- 3.8.4. Subsample the sediment as required by the SCP.
- 3.8.5. Decontaminate or re-sleeve the grab sampler as required.
- 3.8.6. Place the sediment sample or subsample into a stainless steel bowl large enough to retain the contents.
- a. Allow the sediment to settle.
 - b. Decant the water carefully into a sample container using a funnel. **DO NOT** collect more than 4 L (1.1 gallon) of water.
 - c. Mix the sediment sample or subsample to create a homogenous composite sample.
- 3.8.7. Using a scoop or spoon, remove the sediment and place it into the sample container.
- 3.8.8. Upon completion of the sampling event, discard the unused sample material back into the body of water unless instructed otherwise by the SCP.
- 3.8.9. Proceed to Section 3.10 (Soil Sample Handling).

3.9. Sediment – Core Samples

NOTE: Core sediment samplers normally increase in weight based upon the depth and type of water body and the volume of sample they extract. Many core samplers are gravity activated and use their weight to penetrate the sediment. Mechanical winches may be required for retrieval. The size and weight of the corer, the type of penetration device used (hand operated, weights, mechanical vibration, or gas piston driven) and the need for a winch will dictate the type of boat or barge that is needed, as well as the number of people required to safely perform the operation.

- 3.9.1. Drop a sediment core sampler into the body of water until it reaches the sediment layer.
- 3.9.2. Push the manual core sampler into the sediment, or start the core vibration or mechanical penetration device to push the core sampler into the sediment.
- 3.9.3. Stop the vibration or mechanical penetration device after the prescribed time frame identified in the SCP.
- 3.9.4. Retrieve the core sampler, using the winch, if required.
- 3.9.5. Remove the corer sleeve and open the core sample.

NOTE: **DO NOT** discard any unused sample into the body of water during the sampling event.

- 3.9.6. Inspect the sample retrieved.
- If the sample does not meet the criteria set in the SCP for filling of the grab sampler bucket, drop the sample into a separate container on board, decontaminate the sampler if required, or replace the bucket sleeving and take another sample.
 - Potential reasons for rejection include:
 - Core not filled
 - Core catcher or water valve failed to close
 - Sample leveled at a slope in the core (higher at one side than the other)
 - If the sample meets the criteria set in the SCP continue to the next step.
- 3.9.7. Subsample the sediment as required by the SCP.
- 3.9.8. Place the sediment sample or subsample into a stainless steel bowl large enough to retain the contents.
- Allow the water to rise and sediment to settle.
 - Decant the water carefully into a sample container using a funnel. **DO NOT** collect more than 4 L (1.1 gallon) of water.
 - Mix the sample or subsample to create a homogenous composite sample.
- 3.9.9. Using a scoop or spoon, remove the sediment and place it into the sample container.
- 3.9.10. Upon completion of the sampling event, discard the unused sample material back into the body of water unless instructed otherwise by the SCP.
- 3.9.11. Proceed to Section 3.10 (Soil Sample Handling).

3.10. Soil Sample Handling

| |
|---|
| <p>NOTE: Homogenization of the soil includes a series of mixing and quartering steps. It is important that mixing of soil be as thorough as possible, while taking necessary precautions to avoid exposure to radioactive materials.</p> |
|---|

- 3.10.1. Using the trowel, homogenize or mix the soil.
- Use a mixing technique dependent on the physical characteristics of the soil (including observed moisture content, particle size, and particle size distribution) to achieve a consistent physical appearance over the entire soil sample.
 - Soil should be scraped from the sides, corners and bottom, rolled into the middle of a clean stainless steel bowl or tray (or *in situ* hole) and mixed.
 - Quarter (i.e., divide into 4) the soil and move it to the sides of the bowl or hole.
 - Mix each quarter individually, and then roll them to the center of the bowl.
 - Mix the quarters together as an entire sample again.
- 3.10.2. Repeat the quartering and remixing at least three times to ensure homogenization.
- 3.10.3. Once a consistent physical appearance over the homogenized sample has been obtained, transfer the sample into an appropriate sample container using a clean stainless steel spoon or spatula.

NOTE: A 1-L HPDE or HDPP wide mouth bottle is the preferred container for soil samples, as it requires less disturbance of the sample transferred into the bottle and reduces the risk of cross-contamination. A zip lock bag may be used, but requires double bagging to ensure retention of contents during shipment.

NOTE: The presence of soil particles can compromise a container's seal and may result in a loss of soil moisture, cross contamination, or sample spillage during transport. Always make sure the container lid is firmly secure.

- 3.10.4. Once the sample containers are full, use a clean paper towel to remove any sample particles from the threads or sealing surface of the sample container.
- 3.10.5. Place a sample label on the container.
- 3.10.6. Weigh the sample, or determine the volume based on the container size.
- 3.10.7. Sample containers should be placed in separate zip-lock bags to protect other containers in case of spillage during transport.
- 3.10.8. Record the required information on the Field Sample Logbook, Field Sample Tracking Form, and the sample label(s). The following information is to be included at a minimum:
 - SIC
 - Time and date sampled
 - Sample location
 - Depth and area of sample collection
 - Type of sample
 - Sample volume or weight collected
 - Sampler's initials
- 3.10.9. Decontaminate the sampling equipment or place it into a bag for decontamination outside of the sampling area per the requirements of Module I, Section 5.0 (Personnel/Equipment Decontamination).
- 3.10.10. After sample collection, place the container into a transport container in a secure position for transport out of the sampling area.
- 3.10.11. Recover all wastes, placing them in appropriate waste containers for transport out of the sampling area. Handle wastes per the requirements of Module I, Section 6.0 (Waste Control).
- 3.10.12. Exit the sampling area using proper techniques to minimize the spread of contamination.
- 3.10.13. Once outside of the area, prepare the sample(s) for transportation per the requirements of Module I, Section 7.0 (Sample Packaging and Transport).

4.0 Collection of Air Samples

4.1. Air Sample Pre-Staging Requirements

- 4.1.1. An appropriate air filter or cartridge must be selected based on requirements included in SCP, target analytes, laboratory capabilities, and potential interferences with the analytical methods that will be performed.
- 4.1.2. Sample collection equipment must be assembled outside the contamination zone, prior to sample collection.
- 4.1.3. Install the particulate filter (membrane) into the sampler head.
 - a. Remove the particulate filter retaining ring.
 - b. Use disposable examination gloves to handle a new filter for each sample collection.
 - c. Center the filter into the ring.
 - d. Reinstall the ring and tighten to finger tightness.
- 4.1.4. If collecting a vapor sample, install a vapor cartridge (silver zeolite or charcoal) into the sampler head.

| |
|---|
| <p>NOTE: When cartridges are used in sampling, ONLY low volume samplers are to be used due to the retention factors of gaseous vapors on the charcoal or silver zeolite bed.</p> |
|---|

- a. Remove the retaining ring.
 - b. Use disposable examination gloves to handle a new cartridge for each sample collection.
 - c. Note the flow direction of the cartridge and align it with the sampler flow direction.
 - d. Reinstall the ring and tighten to finger tightness.
- 4.1.5. If collecting a gas sample with a vacuum flask or collection vessel, ensure the flask or collection vessel is vacuumed and the valves are shut.
 - 4.1.6. Place a Sample Label on the sampler unit head, flask, or collection vessel.
 - 4.1.7. Place the sampler unit into a clean plastic bag for transport into the area.
- ##### 4.2. Collection of Particulate and Vapor Samples
- 4.2.1. Make sure the pump is on the OFF position.
 - 4.2.2. Secure the air sampler to a tripod, table, platform, vehicle hood or tailgate, or other sturdy non-moving surface.
 - a. Position the sampling unit with the air intake facing the source of the suspected contamination, making sure the face of the sampler is in the breathing zone, approximately 1.25 to 2 m (4 to 6 feet) above the ground surface.
 - b. Position the sampling unit to avoid interferences from structures, by placing the unit at a distance twice as far as the height of the tallest immediate building.
 - c. Care should be taken to control exhaust gases that can damage, overwhelm, or block the filter when using a gasoline generator or battery to power air

- samplers. If air samples are taken in the vicinity of an automotive vehicle, the sampler should be positioned upwind of the vehicle's exhaust.
- 4.2.3. Attach the correct sampling head to the pump.
 - 4.2.4. Record the required sample information onto the Field Sample Logbook, Field Sample Tracking Form, and sample label on the sampler unit head. The following information is to be included at a minimum:
 - Sampler unit ID
 - Sampler unit location (GPS coordinates or description)
 - Date and time started
 - Sampler's initials
 - 4.2.5. Turn on the unit and observe the flow rate, adjusting as necessary to reach the required flow rate per the SCP. Record the flow rate (m^3/minute or $\text{feet}^3/\text{minute}$) onto the Field Sample Logbook and the label on the sampler unit head.
 - 4.2.6. Routinely monitor the sampler throughout the sample collection as specified by the SCP.
 - a. Samplers are typically checked once every 2 hours during an 8-hour shift.
 - b. Samplers that are located in work zones may require more frequent monitoring due to the potential for increased particulates resulting from associated work activities.
 - 4.2.7. If any of the following conditions exist, turn off the sampler, and remove the sample head. Record if and why sampling heads were prematurely removed, along with the time or flow volume. Reasons may include:
 - Unit air flow has significantly decreased (greater than 50%)
 - Filter is clogged
 - Filter is wet or covered with snow
 - Filter is torn or otherwise compromised
 - 4.2.8. If the filter unit was turned off prematurely, replace the sampler head unit with a new unit and re-start the sampler.
 - Record the time and date or approximate time the unit was turned off.
 - Record the time and date of the installation of the new unit or head and the restart time and date.
 - 4.2.9. At the end of the sampling period, turn off the unit power. If the sample head is replaced or the sample unit fails, treat the filter and/or cartridge as a sample and proceed with the following steps.
 - 4.2.10. Record the sample information onto the Field Sampling Logbook and the label on the sampler unit head.
 - Flow rate (m^3/minute or $\text{ft}^3/\text{minute}$)
 - Total flow volume (if volume totalizer is attached)
 - Date and time initiated and stopped

- Sampler's initials

4.2.11. Remove the sampler unit head.

4.2.12. Place the sampler unit head into a plastic bag and seal the bag.

CAUTION: Air samplers will be warm, and may be hot, after a sampling event. Used units should be placed into a plastic bag or other containment to control contamination. A hot air sampler must be allowed to cool prior to placing it into a plastic bag, and bags should remain loosely closed around any warm air sampler until cooling is complete.

4.2.13. Recover all wastes, and place them in appropriate waste containers for transport out of the sampling area. Handle wastes per the requirements of Module I, Section 6.0 (Waste Control).

4.2.14. Exit the sampling area using proper techniques to minimize the spread of contamination.

4.2.15. After sample collection, immediately place the bag containing the sample head into a sample transport container in a secure position.

4.2.16. Disassemble the sampler head unit in an appropriately controlled area.

a. Open the filter ring.

b. Using forceps or tweezers, remove the filter. If necessary for large filters (200 x 250 mm or 8 x 10 inches), fold the filter in quarters with collection side inward. **DO NOT CUT or TEAR THE FILTER.** See Note in Module I, Section 2.2.8(c), regarding concerns associated with the use of large air sample collection filters.

c. Place the filter into a Petri dish or directly into a plastic bag and seal the Petri dish or bag.

d. Open the cartridge ring.

e. Remove the cartridge and place the cartridge into a plastic bag.

f. Place the filter and cartridge bags together into a second plastic bag.

4.2.17. Perform an equipment radiation survey or swipe and, when necessary, decontaminate the sampling equipment per the requirements of Module I, Section 5.0 (Decontamination).

4.2.18. Prepare the sample(s) for transportation per the requirements of Module I, Section 7.0 (Sample Packaging and Transport).

4.3. Vacuum Flasks and Gas Collection Vessel Samples

4.3.1. At the sample point, open the valve of the evacuated flask or collection vessel at the breathing zone.

4.3.2. Shut the valve once the flask reaches atmospheric pressure, as indicated by the absence of the sound of the flow of air into the container.

4.3.3. After sample collection, immediately place the sample container into a sample transport container in a secure position.

4.3.4. Exit the sampling area using proper techniques to minimize the spread of contamination.

-
- 4.3.5. Record the sample information onto the Field Sampling Logbook and the label on the sampler flask or collection vessel.
- Date and time sampled
 - Location sampled
 - Flask or collection vessel volume
 - Sampler's initials
- 4.3.6. Obtain results of an equipment radiation survey or swipe from the site Radiation Protection Personnel. If necessary, decontaminate the sampling equipment per the requirements of Module I, Section 5.0 (Personnel/Equipment Decontamination).
- 4.3.7. Place gas collection vessels or vacuum flasks into an appropriate container to protect the valves.
- 4.3.8. Prepare the sample(s) for transportation per the requirements of Module I, Section 7.0 (Sample Packaging and Transport).
- 4.4. Lapel Samples
- 4.4.1. Lapel samplers are set up and prepared according to manufacturer's instructions.
- a. Flow rates are required to be verified.
 - b. Sampler heads are assembled per manufacturer's requirements.
- 4.4.2. Samplers are worn with the sample pump strapped to the waist under PPE and the unit head in the breathing zone.
- 4.4.3. Upon exit from the contaminated area of concern, record the sample information onto the Field Sampling Logbook and sample label.
- Flow rate at the start and stop (m^3/minute or $\text{ft}^3/\text{minute}$)
 - Total flow volume (if volume totalizer is attached)
 - Date and time started and stopped
 - Individual wearing the sampler
 - Sampler's initials
- 4.4.4. Place the filter and cartridge into a plastic bag. Place a sample label on the bag.
- 4.4.5. Obtain results of an equipment radiation survey or swipe from the site Radiation Protection Personnel. If necessary, decontaminate the sampling equipment per the requirements of Module I, Section 5.0 (Personnel/Equipment Decontamination).
- 4.4.6. Prepare the sample(s) for transportation per the requirements of Module I, Section 7.0 (Sample Packaging and Transport).
- 4.5. Bubbler Samples
- 4.5.1. Bubbler samplers are set up and prepared according to manufacturer's instructions.
- a. Flow rates are required to be verified.
 - b. Sampler bottles are filled and assembled per manufacturer's requirements.
- 4.5.2. Samplers are set at specified locations and operated for the time frame required by the SCP.

- 4.5.3. Upon exit from the contaminated area of concern, record the sample information onto the Field Sampling Logbook and sample label.
- Flow rate at the start and stop (m^3/minute or $\text{ft}^3/\text{minute}$)
 - Total flow volume (if volume totalizer is attached)
 - Date and time started and stopped
 - Sampler's initials
- 4.5.4. Remove the sample bottle. Cap the bottle and place the sample label on the bottle.
- 4.5.5. Obtain results of an equipment radiation survey or swipe from site Radiation Protection Personnel. If necessary, decontaminate the sampling equipment per the requirements of Module I, Section 5.0 (Personnel/Equipment Decontamination).
- 4.5.6. Prepare the sample(s) for transportation per the requirements of Module I, Section 7.0 (Sample Packaging and Transport).

5.0 Collection of Water Samples

NOTE: Water samples should generally be discreet (i.e., not composited) and sample locations should be located as necessary to detect contamination from the suspected sources under investigation (e.g., point source discharges, non-point/sheet flow runoff, discharge of contaminated ground water to surface water body, landfill leaches, etc.). Unless otherwise specified in the SCP, surface water samples should be collected directly above sediments, near banks/other depositional areas where water currents are slower and there is greater retention time for the surface water to accumulate contaminants.

5.1. Surface Water

CAUTION: Collection of samples from streams and rivers can pose a safety hazard. Samplers should not wade into deep water or fast moving currents, or enter water systems where the bottom surface is not clearly visible.

- 5.1.1. Choose an area that is not sheltered by trees or biased by land runoff.
- 5.1.2. Take a sample midstream, at least 0.5 to 1 m (20 inches to 3.3 feet) from the shoreline of the body of water (if possible) or most representative of the entire water body.
- 5.1.3. Dip a sampling cup or bottle at the surface of flow.
- 5.1.4. Avoid stirring up sediment.
- 5.1.5. Proceed to Section 5.7 (Water Sample Handling).
- 5.2. Subsurface Water at Shorelines
- 5.2.1. Choose an area that is not sheltered by trees or biased by land runoff.
- 5.2.2. Stand as close as practical to the body of water without causing shoreline material from entering into the water resulting in turbidity.
- 5.2.3. Dip a sample cup between 10 to 25 cm (4 to 10 inches) below the surface and at least 0.5 to 1 m (20 inches to 3.3 feet) from the shoreline of the body of water.
- 5.2.4. Raise the bottle above the waterline and return the sample to the shore.
- 5.2.5. Proceed to Section 5.7 (Water Sample Handling).

5.3. Stream or River Water

- 5.3.1. Wearing boots and other protective gear, wade into the water, facing upstream or against the current.
- 5.3.2. Avoid stirring up sediment. If needed, wait for any turbidity to subside prior to sampling.
- 5.3.3. Take a sample at least 50 cm to 1 m (20 inches to 3.3 feet) from the shoreline (if possible) or most representative of the entire water body.
- 5.3.4. Dip a bottle with a pull stopper or a sample collection vessel between 10 to 25 cm (4 to 10 inches) below the surface.
- 5.3.5. Remove the stopper from the bottle and allow the bottle to fill.
- 5.3.6. Proceed to Section 5.7 (Water Sample Handling).

5.4. Shallow Well Water or Public Drinking Water

NOTE: Sampling points from public water supplies should be identified in the SCP and will be based on areas of concern within the distribution system.

- 5.4.1. Locate the tap nearest to the discharge pump or the tap identified in the SCP.
- 5.4.2. Turn on the pump and/or open the tap. Allow the water to purge for 1 minute (40-foot well) or longer to allow for a representative sample collection. EPA requires a 3x displacement for purging.
- 5.4.3. Proceed to Section 5.7 (Water Sample Handling) to take the sample.
- 5.4.4. Upon completion of taking the sample, close the tap and turn off the pump.

5.5. Storage Tanks, Cisterns, Wells, and Underground Storm Drains or Sewer Lines

CAUTION: There are several safety concerns associated with collection of samples from underground storage tanks (USTs), wells, storm drains, or sewer lines. At least two sample collectors are needed and appropriate procedures for confined space entry must be in place to ensure safe conditions. Hatches or manholes are not to be left open or unmanned when sampling is not in progress unless Site Safety personnel are in control of the access point. Materials lowered into a tank, cistern or well are to be secured to retrieval lines to prevent loss inside of the tank. NEVER place loose materials around the opening of the tank.

- 5.5.1. Clearly identify any accessible area around the hatch, manhole or opening with a warning barrier line or tape. These warnings are typically used for side entrances, and are not applied to above ground tanks with access points at the top of the tank.
- 5.5.2. Open the access.
- 5.5.3. Use the sampling method identified in the SCP to collect the sample.
 - a. Method A: Dip cup on reach rod [not applicable to underground storage tanks (USTs) or wells]
 - Extend a dip cup to the required depth below the surface.
 - Allow the cup to fill, and retrieve the cup.
 - Drain the cup contents into an appropriate sample container.
 - Repeat as necessary to fill the sample container with the required volume.

- Proceed to Section 5.7 (Water Sample Handling).
- b. Method B: Stopper bottle on reach rod
- Extend the stopper bottle to the required depth below the surface.
 - Pull the rod to remove the stopper from the bottle and allow the bottle to fill.
 - Push the rod to close the bottle after a few minutes. The bottle is potentially full after the last bubble reaches the surface.
 - Retrieve the sample bottle.
 - Proceed to Section 5.7 (Water Sample Handling).
- c. Method C: Kemmerer sampler on a line
- Open up the Kemmerer sampler and set it for taking a sample.
 - Drop the sampler to the desired depth.
 - Send the messenger to close the sampler.
 - Hold the centerline, and retrieve the sampler.
 - Grasp the lower stopper and the body of the sampler in one hand.
 - Carefully open the top stopper, and pour the required volume of sample into a sample container.
 - Proceed to Section 5.7 (Water Sample Handling).
- d. Method D: External and submersible pumps
- A level probe may be required when collecting samples from a well casing to prevent drawdown of the well, which can result in biased sample results. If required, lower a level probe into the sample point and determine the level by stable reading of the probe.
 - Lower the pump suction head (external pump) or a submersible pump to the desired depth. If using a submersible pump, ensure the pump is properly assembled with a suction line that extends upward at least 30 to 45 cm (12 to 18 inches) from the bottom of the pump.

| |
|---|
| <p>NOTE: Submersible pumps are often needed when collecting samples from USTs, cisterns, wells or other bodies of contained water that have a limited depth of 10 m (33 feet).</p> |
|---|

- Secure the sample suction line to prevent it from moving during sample collection.
- Sampling pumps may require priming using water brought to the site or taken from the sampling location. Prime the pump per manufacturer's instructions.
- Limit the flow rate of the pump to prevent aeration or disruption of sediment.
- Throttle down the flow to 50 – 500 mL per minute as required in the SCP.
- Flush the sample line by pumping approximately 5 to 7 volumes through the line. Depending on the diameter and length of tubing, piping, or hose, the volume capacity of the pumping system will vary.

- Note any problems associated with pumping, such as (but not limited to) sputtering, excessive air bubbles, bursts of sediment.
- Once the line has been flushed, proceed to Section 5.7 (Water Sample Handling) to collect the required sample volume into a sample container.
- Upon completion of sample collection, stop the pump. Remove the suction head from the sampling point, and secure the sampling site.
- Decontaminate equipment and materials as appropriate, using procedures described in Module I, Section 5.0 (Personnel/Equipment Decontamination).

5.6. Lagoon, Pond, and Lake Water

CAUTION: Collection of samples from Lagoons, Ponds, and Lakes can constitute a safety hazard. Samplers are required to wear a life preserver at all times after leaving the shoreline, and should not be placed into a situation that requires leaning over the water or outside the safety of the boat or skiff that might result in falling into the water or unbalancing the boat or skiff. Samples collected from locations on top of a water body require at least two individuals.

- 5.6.1. Paddle or troll the boat or skiff out to the determined location, and use procedures from on of the following methods to collect water samples.
- 5.6.2. Method A – Stopper bottle on reach rod
 - a. Drop a bottle to the required depth below the surface.
 - b. Pull the rod to remove the stopper from the bottle and allow the bottle to fill.
 - c. Wait a few minutes, and push the rod to stop up the bottle.
 - d. Retrieve the sample bottle.
 - e. Proceed to Section 5.7 (Water Sample Handling).
- 5.6.3. Method B - Kemmerer sampler on a line
 - a. Open up the Kemmerer sampler and set it for taking a sample.
 - b. Drop the sampler to the desired depth.
 - c. Send the messenger down to the sampler.
 - d. Hold the centerline and retrieve the sampler.
 - e. Grasp the lower stopper and the body of the sampler in one hand.
 - f. Open the top stopper to pour the contents into a sample container following the procedures in Section 5.7.

5.7. Water Sample Handling

- 5.7.1. Using a funnel, if necessary, add a small amount of sample water to the container and rinse the container.
- 5.7.2. Discard the rinse water by pouring into a labeled waste bottle and wipe the outside of the container dry.
- 5.7.3. Fill the sample container to within 2 cm (0.75 inch) of the cap and close the container.
- 5.7.4. Wipe the outside of the sample container with a dry paper towel.

- 5.7.5. Record the required information on the Field Sample Logbook, Field Sample Tracking Form, and the sample container label(s). The following information is to be included at a minimum:
- SIC
 - Time and date of sampled
 - Sample location
 - Sample volume collected
 - Sampler's initials
- 5.7.6. Place a sample label on the container.
- 5.7.7. Obtain results of an equipment radiation survey or swipe from site Radiation Protection Personnel. If necessary, decontaminate the sampling equipment or place it into a bag for decontamination outside of the sampling area per the requirements of Module I, Section 5.0 (Personnel/Equipment Decontamination).
- 5.7.8. After sample collection, place the sample container into a sample transport container in a secure position for transport out of the sampling area.
- 5.7.9. Recover all wastes, placing them in appropriate waste containers for transport out of the sampling area. Handle wastes per the requirements of Module I, Section 6.0 (Waste Control).
- 5.7.10. Exit the sampling area using proper techniques to minimize the spread of contamination.
- 5.7.11. Once outside the area and back at an appropriate location, prepare the sample(s) for transportation per the requirements of Module I, Section 7.0 (Sample Packaging and Transport).

6.0 Collection of Vegetation Samples

NOTE: The required amount for samples of vegetation is 1 kg (2.2 pounds) or approximately 6.5 L (1.7 gal) of solid packed, low density (0.6 m/v) vegetation (leafy material such as grass). A 1 m² area should be staked out from which a sample of vegetation is collected. If a greater area is required to obtain the specified weight or volume of sample, the specific area is to be documented.

6.1. General Considerations

- 6.1.1. During Site Characterization, samples collected from bushes, small trees, tall grasses, grass or other vegetation should focus on the upper or outer surfaces of exposed vegetation. DO NOT sample plants that are found under large trees or the covering of buildings unless directed to do so.
- 6.1.2. Using care to minimize physical disturbance of the vegetation, carefully cut the upper exposed surfaces (any area not covered by the plant) of the vegetation away.
- Small Bushes – the outer leaves
 - Tall Grasses – the upper tips
 - Small Trees – the upper or outer leaves of branches

- Branches – Limited to those that are less than 1.5 cm (0.6 inches) in diameter.

CAUTION: Branches and other woody materials can pierce plastic bags. Bags may require double bagging or placement in a separate harder plastic container.

6.1.3. Gather leaves off a tree or bush if possible. If leaves are collected from the ground, collect leaves that are not covered.

6.1.4. Vegetative material should be cut to approximately 2.5 to 25.5 cm (1 to 10 inches) in length.

6.2. Vegetation Sample Collection

6.2.1. Roll over the opening of a plastic bag (sample container).

NOTE: Rolling over the top of the bag will provide a hand-hold for the bag (by allowing the bag to be grasped from under the rolled area), prevent the possible spread of contamination, and ease cleanup during final sample container closing.

6.2.2. Use scissors or cutters to cut the material making sample pieces no longer than approximately 25 cm (10 inches).

6.2.3. DO NOT cut by using exertion or “gnawing” away at the stalk.

6.2.4. Place the retrieved sample in the plastic bag.

6.2.5. Record the required information on the Field Sample Logbook, Field Sample Tracking Form, and the sample container label(s). The following information is to be included at a minimum:

- SIC
- Time and date sampled
- Sample location
- Area sampled
- Sample volume collected
- Sampler’s initials

6.2.6. Affix the sample label(s) to the container(s).

6.2.7. Obtain results of an equipment radiation survey or swipe from the site Radiation Protection Personnel. If necessary, decontaminate the sampling equipment or place it into a bag for decontamination outside of the sampling area per the requirements of Module I, Section 5.0 (Personnel/Equipment Decontamination).

6.2.8. After sample collection, place the sample container to a sample transport container in a secure position for transport out of the sampling area.

6.2.9. Recover all wastes, placing them in appropriate waste containers for transport out of the sampling area. Handle wastes per the requirements of Module I, Section 6.0 (Waste Control).

6.2.10. Exit the sampling area using proper techniques to minimize the spread of contamination.

- 6.2.11. Once outside of the area and back at an appropriate location, prepare the sample(s) for transportation per the requirements of Module I, Section 7.0 (Sample Packaging and Transport).

7.0 Collection of Surface Area Samples Using Swipes

NOTE: Appropriate swipe materials and sizes to be used for the collection of surface area samples, along with the number of swipes that should be taken, are selected based on requirements included in the SCP.

7.1. Dry Swipes

- 7.1.1. Measure or determine by observation the total surface area to be sampled and record the area on the Field Sample Logbook.
- 7.1.2. Using a large area swipe [e.g., at most 300 cm² (48 inches²)], wipe the surface area in parallel strokes. Place the swipe into a glassine envelope or bag, and place a sample label on the envelope or bag.
- 7.1.3. Using a small area swipe [e.g., 25 cm² (4 inches²) disc or square], wipe the surface in one continuous stroke of approximately 40 cm in length (16 inches), or a 10 x 10 cm (4 x 4 inches) square area, so that an area of approximately 100 cm² is sampled. An “S” pattern, or moving from one edge to the other without overlap, is the preferred method. Place the swipe into a glassine envelope or bag, and place a sample label on the envelope or bag.
- 7.1.4. Proceed with 7.4 (Swipe Handling).

7.2. Wet Swipes

- 7.2.1. Measure or determine by observation the total surface area to be sampled, and record the area on the Field Sample Logbook.
- 7.2.2. Dampen either a large area or small area swipe with the solvent fluid prescribed by the SCP. DO NOT soak the swipe. If necessary, allow the swipe to dry slightly before use.
- 7.2.3. If a volatile solvent is used, proceed with speed to prevent evaporation of the solvent.
- 7.2.4. Wipe the area per the procedures described in Section 7.1 (Dry Swipes) for either large area or small area swipes.
- 7.2.5. Proceed with 7.4 (Swipe Handling).

7.3. Tape Swipes

NOTE: Tape swipes are typically collected for field screening and are not intended for transport to and analysis in the laboratory. When analyzed for radioactivity, the glue side of the tape must face the detector, because the paper backing of the tape will attenuate any alpha particles.

- 7.3.1. Measure or determine by observation the total surface area to be sampled, and record the area on the Field Sample Logbook.
- 7.3.2. Create a tape swipe by laying successive strips of 5 cm (2 inches) duct tape sufficient to collect an area of 100 cm² (16 inches²) or less. The edges of the tape should be folded over or covered with tape to prevent them from sticking to the surface of the object. This will create a “picture frame” around the actual sample.
- 7.3.3. Lay the tape swipe onto the surface to be sampled and press down over the sample area.

- 7.3.4. Carefully remove the tape and cover the exposed area with a piece of plain paper.
- 7.3.5. Place the swipe in a plastic bag or envelope. A sample label is to be placed on the bag or envelope.
- 7.3.6. Proceed with Section 7.4 (Swipe Handling).
- 7.4. Swipe Handling
- 7.4.1. Exit the sampling area using proper techniques to minimize the spread of contamination.
- 7.4.2. Record the required information on the Field Sample Logbook, Field Sample Tracking Form, and the sample label(s). The following information is to be included at a minimum:
- SIC
 - Time and date sample collected
 - Sample location
 - Sample area collected
 - Percent of total area (calculated from surface area recorded in the Field Sample Logbook)
 - Sampler's initials
- 7.4.3. Place a sample label on the container.
- 7.4.4. Once outside of the area and back at an appropriate location, process the sample for direct reading by Radiation Protection Personnel or, if required in the SCP, for transport per the requirements of Module I, Section 7.0 (Sample Packaging and Transport).

MODULE III - SAMPLING PROCEDURES – FINAL STATUS PHASE**1.0 Collection of Samples**

1.1. Overview

- 1.1.1. This module outlines procedures, equipment, and other considerations specific to the collection of representative environmental samples during the Final Status Phase of sample collection following a radiological contamination incident. This Final Status Phase involves collecting samples to support the Final Status Survey (FSS) in determining site release.
- 1.1.2. Samples collected during the Final Status Phase can be assumed to contain zero to slightly above background levels of radioactive material. For this reason, specific precautions are needed during Final Status Phase sampling to ensure samples are not compromised or contaminated.
- 1.1.3. During the Final Status Phase, methods for collection of soil samples vary slightly from those used during site Characterization and Remediation. Air, water, and swipe samples are collected using the same procedures described in Module II, Sampling Procedures (Characterization and Remediation Phases). The measurement quality objectives (MQOs) are modified for all sample matrices.
- 1.1.4. An FSS is performed to demonstrate that residual radioactivity in each survey unit satisfies the predetermined criteria for site release. The survey provides data to demonstrate that radiological parameters do not exceed the established Derived Concentration Guidance Levels (DCGLs). For the FSS, survey units represent the fundamental elements for compliance demonstration.
- 1.1.5. Site surveys of the sampling units dictate the samples required.
 - a. A scale drawing of each survey unit is prepared and included in the Sample Collection Plan (SCP), along with the overlying planar reference coordinate system or grid system (normally the Global Positioning System (GPS) coordinates).
 - Any location within the survey unit is identified by a unique set of coordinates.
 - The maximum length (X) and width (Y) dimensions of each survey unit are determined and included in the SCP.
 - b. Identifying and documenting a specific location for each field measurement performed and each sample collected is an important part of an FSS to ensure that measurements can be reproduced if necessary.
 - Part of this identification is the measurement of radiation levels by hand-held survey instruments, which involves a “walk down” or “walk over” survey of the area, including surfaces of buildings or other structures.
 - Any vegetation that was deemed contaminated, or for which concern was raised over potential contamination, should have been removed as part of remediation.
- 1.1.6. The following sample weights, volumes, and requirements have been determined to be necessary to meet the MQOs in the Final Status Phase of sampling and are to be the volumes/masses taken unless otherwise specified in the SCP.
 - a. Soil and sediment samples are to meet the following requirements:

- 0.6 L (~1 kg) of soil is to be collected for gamma scans.
 - 60 mL (~100 g) of soil is to be collected for radiochemistry methods.
 - Discussions with the analytical laboratory will determine if separate additional sample volumes are needed, or if only one sample is required.
- b. Soil samples are collected only in the top 15 cm of soil.
- c. Subsurface samples are generally not taken unless ground water transport has been an issue.
- Subsurface samples are taken in areas where excavation has not occurred.
 - Derived Concentration Guidance Levels (DCGLs) will drive the decision to take subsurface samples.
- d. Based on known soil density, the area of sample collection will vary and must be noted for each sample location or area in the SCP.
- e. Water samples are to meet the following volume requirements.
- 4 L of water, or the volume, unless otherwise specified in the SCP
 - Sediments are to be filtered from the sample prior to shipment.
- f. Air sample volumes are highly dependent on the sample collection device and site-specific MQOs. Sample collectors should consult the SCP for requirements regarding the air sample collection device to use, collection flow rate, duration, and sample amounts needed.
- g. The area required to be covered by swipe samples is dependent on the size of the object to be checked for contamination, and is to be reported in cm².
- Small surfaces can be sampled to cover up to 100 cm² (16 inches²) per swipe
 - Large surfaces can be sampled to cover up to 300 cm² (48 inches²) per swipe,
 - Surface areas should be swiped in various random locations using multiple swipes to cover at least 1% of the total surface area

1.2. Precautions and Limitations

- 1.2.1. All sample collection activities during Final Status Phase sampling are to be observed for quality control purposes by an independent observer from the start of collection through sample container labeling.
- 1.2.2. Although FSS samples could be considered clean and radiation and contamination levels should be at background levels, personnel are to use radiation protection precautions. All equipment and materials, as well as areas where samples are handled, are to be surveyed by Radiation Protection Personnel for contamination and released prior to unrestricted use.
- 1.2.3. If, during a sampling event, levels of radiation and contamination are measured above levels that are allowed or expected in the SCP, **STOP** the sampling event and notify the Field Team Leader prior to continuing sample collection activities.
- 1.2.4. Survey points are located within a grid, and should be marked using flags, stakes, or paint markings. These markings are not to be disturbed during sample collection.
- 1.2.5. Soil samples

- a. Special cutting tools (e.g., bulb cutter) or simple hand held tools, such as a shovel or trowel, should be used for Final Status Phase soil sample collection.
- b. If the soil below a paved surface is to be sampled, the pavement should be cored out, extracting the soil below the pavement, rather than excavating the pavement and potentially losing soil in the process.
- c. Grass, rocks, and foreign debris are removed from soils to the extent possible.
- d. Subsurface samples (below 15 cm, or 6 inches) are to be taken by coring equipment only.
 - The core should be retained intact for monitoring and subsequent analysis.
 - Unless otherwise directed, core samples should be taken (separated) in 1-meter (3.3-foot) intervals, as measured from the surface.
 - Gamma logging of boreholes is to be performed immediately after core samples are taken.
 - If ground water is evident in holes remaining after core samples have been secured, ground water samples are to be taken using portable pumps.

2.0 Equipment and Materials

The equipment and materials used for sample collection are dependent on the sampling activity. Refer to Module I, Section 2.0 and Appendices A1 through A6.

NOTE: All PPE (Personal Protective Equipment) and sampling equipment are to be pre-staged and available prior to entering a sampling area. The sampling team is to set up a STOP (Step Off Pad) at the entrance to the survey point, and to don appropriate PPE prior to entering the area. Personnel outside of the area may hand material over to, and retrieve material from, personnel in the area using appropriate contamination control techniques. All steps that will reduce the time in the area, such as pre-writing of labels or sample containers, are to be used to minimize exposure.

3.0 Collection of Soil Samples

NOTE: Refer to Module III, Section 1.2.5, for precautions and limitations regarding collection of soil samples.

3.1. Surface Soil Pre-staging Requirements

- 3.1.1. Create sample frames for the sampling locations.
 - a. Each sampling event will require one sampling frame for each sample location.
 - b. Each frame should contain an opening equivalent to the determined sample area as described in the SCP for that area.
- 3.1.2. Ensure that sample collection equipment is clean or sufficiently decontaminated prior to initiation of sample collection activities.
 - a. Each sampling event will require one clean stainless steel bowl and trowel or spoon for each sample for homogenization.
 - b. All sampling equipment is to be wrapped in clean aluminum foil with the shiny side of the foil facing the equipment.

- c. Extra materials (approximately 15% more) should be prepared for use as potentially needed.

3.1.3. Ensure a copy of the sample collection procedure is provided to the QC observer.

3.2. Surface Soil Collection

NOTE: Surveys of the ground surface are performed by the Radiation Protection Personnel. However, the sampling team will be required to: (1) locate the sample location by GPS coordinates and posted sample point flags, (2) verify readings of the area prior to taking a sample, and (3) take a radiation reading of the subsurface at the sample point after the sample is taken.

If variations are noted from reported survey / sampling points, they are to be noted on the Field Sampling Log. If there is a significant difference over reported levels and the levels at the time of sampling or if the sampling point appears to be in error (e.g., radiation levels are actually noted at a point adjacent to the sampling point but not at the sampling point), contact the Field Team Leader for instructions.

3.2.1. Note the location of the sample point flag.

3.2.2. Survey, by scanning, the area around the flag using an appropriate survey meter.

- a. Radiation readings should be taken at 2.5 cm (1 inch) above the ground.
- b. The location of the sample point is to be clearly identified by GPS or other coordinate system, and the coordinates recorded in the Field Sample Logbook and Field Sampling Tracking Form.

NOTE: While surveying and sampling, do not disturb the sample collection area within a sample point. Stake out and put up boundary lines around the sample point as necessary to ensure that the area is not disturbed.

3.2.3. Collect the Soil Sample.

- a. Place the sampling frame over the sample point.
- b. Using a trowel, mark edges into the soil around the sample point per the sampling frame dimensions.
- c. Cut to a depth specified in the SCP and pick up the sample. Slowly place the material into a decontaminated stainless steel bowl large enough to hold more than the required sample volume.
- d. Prior to homogenization, remove twigs, roots, leaves, rocks and miscellaneous debris (glass, bricks, etc.) from the sample using a decontaminated stainless steel spoon or spatula. Return the debris to the sample location.

NOTE: Removal of large stones, rocks, twigs, vegetation and other debris may result in a less than required volume of soil. It is recommended that at least 1.5 L (0.4 gallons) is collected to support analytical method requirements for a 1 L dry sample that is free of debris.

3.2.4. If the amount of material collected does not appear to meet the amount required, cut additional material from the outer edges of the hole as needed. Record the approximate amount of additional material collected in the Field Sample Logbook and Field Sample Tracking Form.

3.2.5. Using a clean trowel, homogenize or mix the soil.

NOTE: Homogenization of soil includes a series of mixing and quartering steps. It is important that mixing be as thorough as possible.

- a. Use a mixing technique dependent on the observed physical characteristics of the soil (including moisture content, particle size distribution) to achieve a consistent physical appearance over the entire soil sample.
 - b. Soil should be scraped from the sides, corners and bottom, rolled into the middle of a clean stainless steel bowl and mixed.
 - c. Quarter (divide into 4) the soil and move it to the sides of the bowl/tray/hole.
 - d. Mix each quarter individually and then roll them to the center of the bowl.
 - e. Mix the quarters together as an entire sample again.
- 3.2.6. Repeat the steps of quartering and remixing several times to ensure homogenization.
- 3.2.7. Once a consistent physical appearance over the homogenized soil has been obtained, transfer the soil into the appropriate sample container using a clean stainless steel spoon or spatula.

NOTE: A 1-L HPDE or HDPP wide mouth bottle is the preferred container for soil samples, as it requires less disturbance of the sample transferred into the bottle. A zip-lock bag may be used, but requires double bagging to ensure retention of contents during shipment.

NOTE: Once the sample containers are full, use a clean paper towel to remove any particles from the threads or sealing surface of the sample container. The presence of soil particles can compromise the container's seal and may result in loss of soil moisture, cross contamination, or the lid opening in transit. Always make sure the container lid is firmly secure.

- 3.2.8. Label the sample container.
- 3.2.9. Weigh the sample(s) or determine the volume based on the container size.
- 3.2.10. Sample containers should be placed in separate zip-lock bags to protect other containers in case of spillage during transport.
- 3.2.11. Record the required information on the Field Sample Logbook, Field Sample Tracking Form, and the sample label(s). The following information is to be included at a minimum:
- SIC
 - Time and date sampled
 - Sample location
 - Area sampled
 - Sample volume or weight collected
 - Sampler's initials

- 3.2.12. Decontaminate the sampling equipment or place it into a bag for decontamination outside of the sampling area per the requirements of Module I, Section 5.0 (Personnel/Equipment Decontamination).
 - 3.2.13. After sample collection, place the sample container securely into a transport container for transport out of the sampling area.
 - 3.2.14. Recover all wastes, placing them in appropriate waste containers for transport out of the sampling area. Handle wastes per the requirements of Module I, Section 6.0 (Waste Control).
 - 3.2.15. Exit the sampling area using proper techniques to minimize the spread of contamination.
 - 3.2.16. Once outside of the area and back at an appropriate location, prepare the sample(s) for transportation per the requirements of Module I, Section 7.0 (Sample Packaging and Transport).
- 3.3. Subsurface Soil Pre-staging Requirements
- 3.3.1. Ensure the coring rig is not located at the edge of an excavated area.
 - 3.3.2. Obtain polyvinylchloride (PVC) tubing at a diameter slightly larger than the diameter of the core interior diameter and cut lengths of tubing of 32 cm (12.8 inches). One length is used for each sample collected.
 - 3.3.3. Obtain end caps for the PVC tubing. One round (or pointed) end and one flat end are needed for each cut tube.
 - a. The pointed or rounded cap will be placed on the upper or shallow end of the cut.
 - b. The flat cap will be placed on the lower or deeper end of the cut.
 - 3.3.4. If sample cores are NOT to be opened in the field, designate an area that is free of contamination and preferably out of the elements prior to sampling operations.
- 3.4. Subsurface Soil Collection
- 3.4.1. Determine the depth to be sampled as noted in the Sample Collection Plan.
 - 3.4.2. Record the depth, diameter of the core, time, date and other information on the Field Sample Logbook and Field Sample Tracking Form.
 - 3.4.3. Take the sample, with core boring equipment, by boring to 50 cm (20 inches) below the desired depth.
 - 3.4.4. Lay down a clean plastic sheet for the retention of the required sample.

| |
|--|
| <p>NOTE: A 2 m² (21.8 feet²) sheet is typically sufficient for a shallow dig. For a deep dig, the plastic size will be dependent on the depth of the hole and the tool used to excavate. The clean sheet may be placed after the majority of the digging is done, prior to excavation of the sample volume.</p> |
|--|

- 3.4.5. Upon reaching the prescribed depth, move the core to a clean designated area of the plastic sheet.
- 3.4.6. Obtain results of a gamma logging core hole radiation survey from Radiation Protection Personnel.

- a. Note radiation readings at 15-cm (6-inch) intervals and at the point of the sample.
 - b. Record the results on the Field Sample Logbook and Field Sample Tracking Form.
- 3.4.7. Per requirement of the SCP, either open the core *in situ* or wrap the core in plastic, taping the plastic closed, and transport the core to a designated area.
- 3.4.8. Upon opening the core, record observations as to the makeup of the core.
- a. Measure the core length compared with the depth of the coring. Note any voids in the Field Sample Logbook.
 - b. Allow Radiation Personnel to take radiation readings of the cores.
 - c. Note the depth of the highest reading and the reading at the point from which the sample will be collected.
- 3.4.9. Measure the core to the sample point determined by the Field Sample Coordinator. Measure a point 15 cm (6 inches) above the initial sample point and a point 15 cm (6 inches) below the initial sample point for a total sample depth of 30 cm (12 inches). Mark these two locations above and below the target core sample as the points at which the core is to be cut. Cut the core at the locations indicated.
- 3.4.10. Remove the sample material with minimal disturbance to the core.
- 3.4.11. Wrap the sample in plastic wrap and tape to seal.
- 3.4.12. Place the sample in a piece of PVC tubing and cap the ends, sealing the caps with duct tape and a custody seal if required.
- 3.4.13. Record the required information on the Field Sample Logbook, Field Sample Tracking Form, and the sample label(s). The following information is to be included at a minimum:
- SIC
 - Time and date sampled
 - Sample location
 - Core area
 - Sample volume or weight collected
 - Sampler's initials
- 3.4.14. Place a sample label on the tubing.
- 3.4.15. Decontaminate the sampling equipment or place it into a bag for decontamination outside of the sampling area per the requirements of Module I, Section 5.0 (Personnel/Equipment Decontamination).
- 3.4.16. After sample collection, place the sample tube into a sample transport container in a secure position for transport out of the sampling area.
- 3.4.17. Recover all wastes, placing them in appropriate waste containers for transport out of the sampling area. Handle wastes per the requirements of Module I, Section 6.0 (Waste Control).

- 3.4.18. Exit the sampling area using proper techniques to minimize the spread of contamination.
- 3.4.19. Once outside of the area and back at an appropriate location, prepare the sample(s) for transportation per the requirements of Module I, Section 7.0 (Sample Packaging and Transport).
- 3.5. Sediment
- 3.5.1. Drag a cup, dredge, or scoop to collect the sample of sediment from the bottom of the body of water.
- 3.5.2. Retrieve the sediment sampling device and lower it into a clean stainless steel bowl large enough to retain the contents of the sampling device.
- 3.5.3. Deposit the sediment into the bowl.
- Allow the water to rise and sediment to settle.
 - Decant the water carefully into a container using a funnel.
- 3.5.4. Using a scoop or spoon, remove the sediment and place it into the sample container.
- 3.5.5. Repeat the procedure as necessary to collect the required sample volume.
- 3.5.6. Discard the water into the sampled area.
- 3.5.7. Sample containers should be placed in separate zip-lock bags to protect other containers in case of spillage during transport.
- 3.5.8. Record the required information on the Field Sample Logbook, Field Sample Tracking Form, and the sample label(s). The following information is to be included at a minimum:
- SIC
 - Time and date sampled
 - Sample location
 - Sample volume or weight collected
 - Sampler's initials
- 3.5.9. Decontaminate the sampling equipment or place it into a bag for decontamination outside of the sampling area per the requirements of Module I, Section 5.0 (Personnel/Equipment Decontamination).
- 3.5.10. After sample collection, place the container to a sample transport container in a secure position for transport out of the sampling area.
- 3.5.11. Recover all wastes, placing them in appropriate waste containers for transport out of the sampling area. Handle wastes per the requirements of Module I, Section 6.0 (Waste Control).
- 3.5.12. Exit the sampling area using proper techniques to minimize the spread of contamination.
- 3.5.13. Once outside of the area and back at an appropriate location, prepare the sample(s) for transportation per the requirements of Module I, Section 7.0 (Sample Packaging and Transport).

4.0 Collection of Water Samples

4.1. Water Sampling Pre-staging Requirements

Ensure that sample collection equipment is clean or sufficiently decontaminated prior to initiation of sample collection activities.

- Each sampling event will require one funnel for each sample collected.
- Extra sampling materials (approximately 15% additional materials), including equipment and tools, should be prepared for use as potentially needed.

NOTE: Water sampling is dependent on the body of water to be sampled.

4.2. Water Sample Collection Procedures

- a. Perform the sampling steps per the requirements of Module II, Section 5.0 (Collection of Water Samples) for the body of water to be sampled.

NOTE: Instructions regarding filtration and preservation of samples in the field are included in Appendix C.

- b. Water that is not included in the sample volume is to be returned to the sampled body of water unless otherwise stipulated in the SCP.

5.0 Collection of Swipe Samples

Swipe sample collection is performed per the requirements of Module II, Section 7.0 (Collection of Surface Area Samples Using Swipes).

6.0 Collection of Air Samples

Air sample collection is performed per the requirements of Module II, Section 4.0 (Collection of Air Samples).

APPENDIX A

List of Sampling Equipment and Materials

APPENDIX – A1 Sampling Equipment

| Sample Matrix | Sampling Tools |
|-------------------------------|---|
| Powdered or Granular Solids | Trowel/Scoop/Spoon Waste Pile Sampler Thief Trier Sampler Funnels |
| Soil, Dirt, Waste Pile | Soil Auger Trowel/Scoop/Spoon/Spatula Posthole Digger/Shovel/Pickax/Spade Split Spoon Sampler Sampling Trier Dipper |
| Liquids, Slurries | Glass ,Tube, and Drum Pipettes Open Tube (thief) Bailer Coliwasa Sampler Dip Cup or Dip Bottle Sampler w/Reach Rod Pump (Manual or Powered) Weighted Bottle Sampler Bottle Sampler w/Reach Rod Bacon Collection Vessel Kemmerer Sampler Funnels |
| Sludges, Sediments | Open Tube and Pipe Thin Wall Corer Gravity Corer Ponar Dredge Trier Sampler Funnels |
| Ponds, Lagoons | Dip Sampler/Dipper Weighted Bottle Sampler Dip Cup or Dip Bottle Sampler w/Reach Rod Bailer Dredge Manual Pump Powered Pump Bottle Sampler w/Reach Rod Bacon Collection Vessel Kemmerer Sampler Funnels |
| Oily Materials, Other Liquids | ASTM Oil Sampler Bacon Collection Vessel Dipper Thief Funnels |
| Air Samples | Vacuum Collection Vessel Bubbler w/ air pump Filters Gas or Vapor Cartridge Air pump |

APPENDIX – A2 Sampling Equipment Application Advantages and Disadvantages

| TOOL | MATRIX | ADVANTAGE | DISADVANTAGE | STANDARDS |
|--------------------------------|---------------|--|--|--------------------------------|
| <i>Soil Sampling Equipment</i> | | | | |
| Auger, Screw Type | Soil | <ul style="list-style-type: none"> • Good for cohesive soils • Near surface sampling to depths up to 15 feet with extensions | <ul style="list-style-type: none"> • Will not retain dry, loose, or granular material • Hand manipulated • Accurate soil profiling is difficult • Not applicable for consolidated formations | ASTM D1452-80 ASTM D4700-91 |
| Auger, Dutch | Soil | <ul style="list-style-type: none"> • Good for wet clayey, fibrous, or rooted soils (marshes) • Near surface sampling to depths up to 15 feet with extensions | <ul style="list-style-type: none"> • Hand manipulated • Accurate soil profiling is difficult • Not applicable for consolidated formations | - |
| Auger, Eijkelcamp | Soil | <ul style="list-style-type: none"> • Good for stony soil or asphalt • Near surface sampling to depths up to 15 feet with extensions | <ul style="list-style-type: none"> • Hand manipulated • Accurate soil profiling is difficult • Not applicable for consolidated formations | - |
| Auger, Planar | Soil | <ul style="list-style-type: none"> • Cleans out and flattens bottom of pre-drilled holes • Near surface sampling to depths up to 15 feet with extensions | <ul style="list-style-type: none"> • Hand manipulated • Accurate soil profiling is difficult • Not applicable for consolidated formations | - |
| Auger, Iwan (Post Hole Digger) | Soil | <ul style="list-style-type: none"> • Good for cohesive, soft, or hard soils • Near surface sampling to depths up to 15 feet with extensions | <ul style="list-style-type: none"> • Will not retain dry, loose, or granular material • Hand manipulated • Accurate soil profiling is difficult • Not applicable for consolidated formations | - |
| Auger, Spiral | Soil | <ul style="list-style-type: none"> • Good for removal of rock from auger holes • Near surface sampling to depths up to 15 feet with extensions | <ul style="list-style-type: none"> • Hand manipulated • Accurate soil profiling is difficult • Not applicable for consolidated formations | - |
| Auger , Tip Type – Mud Tip | Soil | <ul style="list-style-type: none"> • Good for removal of heavy, wet soil and clay samples • Bit tips are farther apart than typical soil augers | - | - |
| Auger, Tip Type – Sand Head | Soil | <ul style="list-style-type: none"> • Good for extremely dry or sandy soils • Bit tips are closer together to retain loose or sandy samples | - | - |

| TOOL | MATRIX | ADVANTAGE | DISADVANTAGE | STANDARDS |
|-------------------|---------------|---|---|---|
| Bulb Planter | Soil | <ul style="list-style-type: none"> • Good for use in extremely dry or sandy soils • Near surface sampling to depths up to 0-15 cm • Easy to use • Uniform diameter and sample volume • Preserves soil core | <ul style="list-style-type: none"> • Limited depth capability • Can be difficult to decontaminate | - |
| Core Borer | Soil | <ul style="list-style-type: none"> • Rotating core allows for the penetration of heavy consolidated soils • Maximum depth dependent on number of sections and size of drilling rig | <ul style="list-style-type: none"> • Expensive | ASTM D6169 |
| Probe, soil | Soil | <ul style="list-style-type: none"> • Better than augers for retention of volatiles • Near surface sampling to depths up to 15 feet with extensions | <ul style="list-style-type: none"> • Good for cohesive, soft soils, and silts | ASTM D4700-91 |
| Scoops and Spoons | Soil | <ul style="list-style-type: none"> • Hand held • Easily manipulated • Low cost • Near surface sampling to depths up to 25 cm (10 in.) | <ul style="list-style-type: none"> • Limited to surface sampling • Hand manipulated • Limited durability, easily broken or bent in cohesive or hard packed soils | ASTM D5633-94 ASTM 4700-91 |
| Spoon, split | Soil | <ul style="list-style-type: none"> • Good for cohesive soils • Solid barrels for use in sands, silts, and clays • Can be power driven by weight through 30 in. to penetrate harder soil compositions • Provides core type sample for assessment • Can be used up to a maximum of 25 ft. beyond an existing access hole | <ul style="list-style-type: none"> • Not for use on consolidated formations • Less effective in non-cohesive sands • Questionable recovery if used to extract material below water table | ASTM D1586-84 ASTM D3550-84 ASTM D4700-91 ASTM D6169 |
| Shovels | Soil | <ul style="list-style-type: none"> • Hand held • Easily manipulated • Low cost • Near surface sampling to depths up to 2 m (7 ft.) | <ul style="list-style-type: none"> • Limited to surface sampling • Hand manipulated | ASTM D5633-94 ASTM 4700-91 |
| Trier | Soil | <ul style="list-style-type: none"> • Good for collection of undisturbed core samples in cohesive soils, moist sands, and silts • Inexpensive • Easy to use and decontaminate | <ul style="list-style-type: none"> • Difficult to use in stone or dry soil • If sample is overly moist or sticky, difficulty may be encountered retrieving sampler | - |

| TOOL | MATRIX | ADVANTAGE | DISADVANTAGE | STANDARDS |
|--|---------------------|---|---|--|
| Trowel | Soil | <ul style="list-style-type: none"> • Good for collection of surface soils • Can be used up to maximum of 25 cm (10 in.) beyond an existing access hole | <ul style="list-style-type: none"> • Not for use on consolidated formations • Painted surface trowels should be avoided | - |
| Tube, Shelby | Soil | <ul style="list-style-type: none"> • Excellent depth range • May be used in conjunction with drill rig for obtaining deep cores • Preserves soil core • Tube may be used for shipping core to lab | - | - |
| Tube, Thin wall Open | Soil | <ul style="list-style-type: none"> • Good for collection of undisturbed core samples in cohesive soils, sands, and silts • Can be used up to maximum of 25 ft. beyond an existing access hole | <ul style="list-style-type: none"> • Not for use below water table • Might not be strong enough to penetrate compact soil sediments • Ineffective in non-cohesive sands or stony material | ASTM D1587-94 ASTM D4700-91 ASTM D6169 |
| <i>Water Sampling Equipment</i> | | | | |
| Bailer | Water | <ul style="list-style-type: none"> • Use check valves, balls, or mechanically operated valves to open and close tube • Can be lowered prior to opening to collect an at-depth sample • Maximum recommended depth 60.6 m (200 ft.) • Inexpensive | <ul style="list-style-type: none"> • Sample coats exterior of bailer • Bailer and line can be difficult to decontaminate | - |
| Bottle (jar), swing | Water | <ul style="list-style-type: none"> • Easy to use • Adaptable to jars or bottles of various sizes | <ul style="list-style-type: none"> • Cannot collect samples at discrete depths | - |
| Pump, Bladder | Water, Ground-water | <ul style="list-style-type: none"> • Good for use on collecting samples from a single well • Good for sample containing trace inorganics • Maximum depth 100 ft. • Up to 3 gallons per minute | <ul style="list-style-type: none"> • Deep sampling requires large volumes of compressed gas and longer cycles • Water with high suspended solids affect operations • Requires compressed gas for operation • Difficult to decontaminate | ASTM D4448-85a |
| Pump, Gear | Water | <ul style="list-style-type: none"> • Gear set drives fluid resulting in positive displacement • Maximum depth 100 ft. • Up to 1.5 gallons per minute | <ul style="list-style-type: none"> • Requires electricity • Flow rates cannot be controlled • Sampling of water with suspended solids will clog gears • Pumping may stall at low flow rates | - |

| TOOL | MATRIX | ADVANTAGE | DISADVANTAGE | STANDARDS |
|---|---------------|---|--|------------------|
| Pump, Helical | Water | <ul style="list-style-type: none"> • Helical (worm gears) drive fluid resulting in positive displacement • Maximum depth 100 ft. • Up to 1.5 gallons per minute | <ul style="list-style-type: none"> • Requires electricity • Flow rates cannot be controlled • Sampling of water with suspended solids will clog gears • Pumping may alter chemistry due to sample turbulence introduced by pumping mechanism | - |
| Pump, Piston | Water | <ul style="list-style-type: none"> • Pump piston drives fluid, resulting in positive displacement with pulsing flow • Maximum depth 100 ft. • Up to 1.5 gallons per minute | <ul style="list-style-type: none"> • Requires electricity • Requires filtration to prevent damage to piston and valve mechanism • Expensive | ASTM D4448-85a |
| Pump, Peristaltic | Water | <ul style="list-style-type: none"> • Good for shallow water • Lift action of pump creates a suction resulting in a positive displacement • Maximum depth 25 ft. • Up to 8 gallons per minute variable | <ul style="list-style-type: none"> • Requires electricity • Small diameter lines | - |
| Pump, Centrifugal | Water | <ul style="list-style-type: none"> • Good for shallow water sampling • Lift action of pump requires constant volume of water to prevent loss of flow (cavitation) • Maximum depth 25 ft. • Up to 60 gallons per minute variable • May be purchased in submersible form | <ul style="list-style-type: none"> • Requires electricity • Small diameter lines • Loss of flow occurs frequently when ever air enters sampling line • Does not handle viscous water easily | - |
| Sampler, Bacon Collection Vessel | Water | <ul style="list-style-type: none"> • Mechanically operated by tug line to close valves • Can be lowered prior to opening to collect an at-depth sample • Maximum recommended depth 200 ft. • Sample volume ranges from 0.12 L (4 oz.) to 1 L (32 oz.) | <ul style="list-style-type: none"> • Sampler remains open until at depth • Can be difficult to decontaminate • Tends to aerate sample | - |
| Samplers, Cup, bottle, or jar swing sampler | Water | <ul style="list-style-type: none"> • Easy to use • Adaptable to jars or bottles of various sizes • Good for taking samples up to 6 ft. below surface | <ul style="list-style-type: none"> • Cannot collect samples at discrete depths • Easy to spill sample | - |

| TOOL | MATRIX | ADVANTAGE | DISADVANTAGE | STANDARDS |
|---|----------------|--|--|------------------|
| Samplers, Coliwasa, Kemmerer, Van Dorn | Water | <ul style="list-style-type: none"> • Coliwasa sampler is controlled by a rod that opens and closes the sampler • Kemmerer and Van Dorn samplers use a line to trigger the sampler to collect the sample at depth • Kemmerer and Van Dorn samplers good up to maximum depth 70 m (200 ft) | <ul style="list-style-type: none"> • Sample coats exterior of sampler • Sampler can be difficult to decontaminate • Difficult to ensure proper operation at depth • Coliwasa sampler limited to depths of 1.5 m (5 ft.) • Waterborne solids may prevent closures from sealing • Sample may be lost due to improper sealing | ASTM D5495-94 |
| <i>Sediment Sampling Equipment</i> | | | | |
| Birge – Ekman Sampler | Sediment, Grab | <ul style="list-style-type: none"> • Used on shallow lakes and basins • Adequate on soft sediments, silts, and sand • Handles easily without a winch • Allows subsampling • Sample depth up to 30 cm with volume up to 12L | <ul style="list-style-type: none"> • Restricted to low currents due to its light weight • Top flaps may not close completely resulting in sample loss | - |
| Corer – tube, hand operated | Sediment, Core | <ul style="list-style-type: none"> • Used for shallow, wadable or easily accessible water, • Can be made of stainless steel or plastic • Can have plastic or glass liners • Preserves layering of sediments • Minimal risk of contamination • Handles aids in penetration of sediment • Sample depth up to 10 cm with volume up to 0.5L | <ul style="list-style-type: none"> • Small sample size • Requires careful handling to prevent spillage • If liners are used, requires removal of liners prior to next sample • Glass liners may break | - |
| Corer – tube, gravity: Benthos | Sediment, Core | <ul style="list-style-type: none"> • Used on soft grained sediments • Core valve in liner retains complete sample in tube • Fins permit vertical penetration of substrate • Sample depth up to 3 m with volume up to 10 L | <ul style="list-style-type: none"> • Requires weights for penetration, resulting in need of winch with 1000 kg lifting capacity • Compacts sediments | - |

| TOOL | MATRIX | ADVANTAGE | DISADVANTAGE | STANDARDS |
|---|-------------------|--|---|------------------|
| Corer – tube, Gravity: Kajak – Brinkhurst | Sediment, Core | <ul style="list-style-type: none"> • Used for deep lakes and rivers • Collects greater volume than other samplers • Sample depth up to 70 cm with volume up to 1.25 L | <ul style="list-style-type: none"> • Requires careful handling to avoid loss of sample • Requires removal of liners prior to next sample | - |
| Corer – tube, Gravity: Alpine | Sediment, Core | <ul style="list-style-type: none"> • Used for soft fine grain semi-consolidated sediments • Allows different penetration depths due to interchangeable steel barrel • Sample depth up to 2 m with volume up to 2 L | <ul style="list-style-type: none"> • Lacks stabilizing fins for vertical penetration • May penetrate non-vertically and incompletely • Requires a lifting capability of 200 kg • Disturbs sediment strata and integrity • Compacts sediment | - |
| Corer – tube, Gravity: Phlenger cover | Sediment, Core | <ul style="list-style-type: none"> • Used for deep lakes and rivers • Good on semi-consolidated substrates • Sample depth up to 50 cm with volume up to 0.5L | <ul style="list-style-type: none"> • Requires careful handling to avoid loss of sample • Requires removal of liners prior to next sample • Small sample volume | - |
| Corer – box: gravity | Sediment, Core | <ul style="list-style-type: none"> • Used on shallow wadable water, but depth of sediment must be approximately 1 m • Collects large, undisturbed sample • Optimal for collecting intact subsamples • Sample depth up to 70 cm with volume up to 30L | <ul style="list-style-type: none"> • Difficult to handle • Relatively heavy, requiring a winch | - |
| Corer – tube piston | Sediment, Core | <ul style="list-style-type: none"> • Used on large deep lakes • Applicable for most substrates • Typically recovers an undisturbed sample • Sample depth up to 20 m with volume up to 40 L | <ul style="list-style-type: none"> • Requires lifting capacity of 200 kg • Piston and piston positioning at penetration may fail • Disturbs surface layer (0 to 0.5 m) | - |
| Sampler, Petersen | Sediment, Grab | <ul style="list-style-type: none"> • Used on deep lake, rivers, and estuaries • Adequate on most substrates • Sample depth up to 30 cm with volume up to 9.5L | <ul style="list-style-type: none"> • May not close completely, resulting in sample loss • Shock wave from descent may disturb upper fine grain layer of sediment • Restricted to low current conditions • Metal frame may contaminate sample • May exceed target penetration depth | - |

| TOOL | MATRIX | ADVANTAGE | DISADVANTAGE | STANDARDS |
|--------------------------------------|----------------|--|--|------------------|
| Sampler, Shipek | Sediment, Grab | <ul style="list-style-type: none"> • Used on basins, large inland lakes, and reservoirs • Allows subsampling • Retains fine grain sediments effectively • Sample depth up to 10 cm with volume up to 3L | <ul style="list-style-type: none"> • Not useful on compacted soils, silts, or clay • May not close completely, resulting in sample loss • Shock wave from descent may disturb upper fine grain layer of sediment • Restricted to low current conditions • Metal frame may contaminate sample • May exceed target penetration depth | - |
| Sampler, Van Veen | Sediment, Grab | <ul style="list-style-type: none"> • Used on deep lakes, rivers, and estuaries • Good for use on sandy, silted or clay sediment • Adequate on most non-compacted substrates • Available in stainless steel or can be lined with plastic • Large sample maintained intact for subsampling • Screened bucket covering prevents “wave” effects from removing or altering sample • Sample depth up to 30 cm with volume up to 75L | <ul style="list-style-type: none"> • May not close completely, resulting in sample loss • May close prematurely in rough water • May require winch • Relatively expensive | - |
| <i>Air Sampling Equipment</i> | | | | |
| Air pump, battery operated | Air | <ul style="list-style-type: none"> • Portable • Small units can be used to take breathing zone air samples | <ul style="list-style-type: none"> • Battery power declines with use, resulting in slower speeds as time passes • Low velocity • Failure during operation very probable, due to unknown battery life • Low pump head limits length of air line from filter or sample rig | - |

| TOOL | MATRIX | ADVANTAGE | DISADVANTAGE | STANDARDS |
|-----------------------------|---------------|---|--|------------------|
| Air pump, electric operated | Air | <ul style="list-style-type: none"> • Continuous air flow at preset levels • Used for taking large volume air samples • Cannot be used for personnel safety monitoring • Can have longer lines attached to filter or sample rig • Flow rates variable to low flow and high flow | <ul style="list-style-type: none"> • Require power source • Can overheat if air drawn through filter or canister compromises air flow • Pumps tend to be noisy | - |
| Cartridge, Charcoal | Air | <ul style="list-style-type: none"> • Good for the majority of radionuclides • Particularly good for iodine • Retains noble gases | - | - |
| Cartridge, Zeolite | Air | <ul style="list-style-type: none"> • Good for the majority of radionuclides • Retains noble gases (though fewer than charcoal cartridges) | <ul style="list-style-type: none"> • Relatively expensive compared with charcoal | - |
| Bubbler | Air | <ul style="list-style-type: none"> • Entrain gas in water or another liquid for later analysis | <ul style="list-style-type: none"> • Limit solubility of gases in water | - |
| Filters, single | Air | <ul style="list-style-type: none"> • Capture particulate matter down to 0.1 μm particle size | <ul style="list-style-type: none"> • Easily clogged • No differentiation in particle size • Excessive loading can attenuate results • No method of determining time frame of deposition • Material chosen may have inherent radioactivity from naturally occurring isotopes | - |
| Filter, chart spool type | Air | <ul style="list-style-type: none"> • Capture particulate matter down to 0.1 μm particle size • Allows method of determining time frame of deposition | <ul style="list-style-type: none"> • Easily clogged • No differentiation in particle size • Excessive loading can attenuate results • Material chosen may have inherent radioactivity from naturally occurring isotopes | - |

| TOOL | MATRIX | ADVANTAGE | DISADVANTAGE | STANDARDS |
|-------------|---------------|--|--|------------------|
| Vacuum bulb | Air | <ul style="list-style-type: none">• Grabs a volume of the ambient air for analysis• Provides a reasonably large sample volume (up to 4 L) | <ul style="list-style-type: none">• Vacuum can easily be lost• Loss of vacuum results in contaminated sample• No clear indication of state of vacuum or integrity of bulb valves | - |

APPENDIX – A3 Sampling Containers

| Sample Matrix | Containers |
|----------------------|--|
| Water, Liquids | Bottles – wide and small mouth 500 mL 1 L 4 L (1 gal.) Cubitainers® |
| Soils | Bottles – wide mouth 500 mL 1 L Plastic Jars – wide mouth w/ PTFE (Teflon®) lids 500 mL 1 L Plastic Bags (Zip Lock - Sealable) <i>Note:</i> durability must be considered to prevent punctures from solid materials – normally used to contain sample bottles or jars 1 quart 2 quart |
| Solids | Bottles – wide mouth 500 mL 1 L Plastic Jars – wide mouth w/ PTFE (Teflon®) lids 500 mL 1 L Plastic Bags (Zip Lock - Sealable) <i>Note:</i> durability must be considered to prevent punctures from solid materials – normally used to contain sample bottles or jars 1 quart 2 quart |
| Air Samples | Envelopes – Paper 2.5 in. x 5 in. 3 in. x 5 in. 9 in. x 12 in. Plastic Bags (Zip Lock - Sealable) 1 quart |
| Vegetation | Plastic Bags (Zip Lock - Sealable) 1 quart 2 quart Plastic Bags (Non-sealable) 15 gallon 30 gallon 55 gallon Plastic Jars – wide mouth w/ PTFE (Teflon®) lids 500 mL 1 L |

APPENDIX – A4 Shipping Materials and Packaging

| Type | Potential Materials |
|---------------------------|---|
| Cushioning and Packing | Styrofoam Peanuts and Pieces Bubble Wrap Vermiculite |
| Absorbents | Vermiculite Chem-sorb |
| Industrial Package Type 1 | Fiberboard Box or Drum Plywood or Natural Wood Box or Drum Plastic Drum or Jerrican Plastic Cooler |
| Industrial Package Type 2 | Steel Box or Drum Aluminum Box or Drum Any Industrial Package Type 2, Type A, or Type B container |
| Type A | Steel Box or Drum |
| Type B (U) or (M) | Specific Steel Container |

APPENDIX – A5 Additional Equipment to Consider for Sampling Operations

| ADDITIONAL SAMPLING EQUIPMENT | |
|--------------------------------------|---|
| <i>Item</i> | <i>Item Description</i> |
| AC Generator | Gasoline powered – 1500 W |
| Bottle | 16-oz. squeeze bottle with nozzle |
| Bowls | Stainless steel mixing – approximately 18-in. diameter, 6-in. depth (approximately 2 gal.) |
| Bucket | Plastic w/handle – 5 gal. For carrying tools and materials; can be used for carrying samples or for equipment decontamination |
| Chisel | _____ |
| Drill | 3/8 in. |
| Drum Hand Truck | Transport 30- and 55-gal. drums |
| First Aid Kit | _____ |
| Filter Paper | Quantitative-grade paper with greater than 8 μm particle retention; e.g., Whatman 40® 12.5 cm (5 in.) and 18.5 cm (7.4 in.), or equivalent |
| Flashlight | _____ |
| Forceps | 6 in. |
| Funnels | 240 mL; 960 mL; plastic |
| Gas Cartridges for air samplers | Silver Zeolite; Activated Carbon; Others as needed based on site conditions and target radionuclides |
| Gasoline containers | 5 gal. with spark arrest and safety cap closure |
| GPS Unit | Hand held; Preferably able to tie into the radiation detection equipment for logging sample radiation readings at location |
| Hammer | 12 oz., 20 oz., and small sledge |
| Labels | Labels and markings for required shipping and samples |
| Ladder | 6 ft. and 10 ft. |
| Mixing paddle | Attachable to drill with extension 2–3 ft. |
| Pens and Markers | Indelible; Water proof; Black and Red |
| Petri Dishes | 30 mm and 50 mm |
| Plastic Bags | (Non-sealable) 15, 30, and 55 gal. for general wastes |
| | (Non-sealable) 15, 30, and 55 gal. for contaminated wastes |
| Plastic Sheeting | Preferably in a large roll (20 ft. x 33.3 ft.) |
| Rope – Nylon | White – 3/8 in. and 1/2 in.; nylon or weatherproof cotton |
| Rope – Nylon | Yellow and Magenta; 3/8 in. |
| Salvage and Over Pack Drums | _____ |
| Saw | Electric Circular, Manual Hand, and Hack Saws |
| Screw drivers | Flat and Philips head; small and large |
| Shielding material | Sheet steel, plywood, lead blankets and bricks |
| Sieves | ATM stainless steel No. 4 (100 mm mesh) |
| Signs | Yellow and Magenta for radiation work |

| ADDITIONAL SAMPLING EQUIPMENT | |
|--------------------------------------|--|
| <i>Item</i> | <i>Item Description</i> |
| Signs | Red, White, and Black for safety concerns |
| Sign | Blue and White for entry and other instruction |
| Soap and Cleansers | _____ |
| Spill Kit | _____ |
| Stakes | Wooden construction |
| Stakes w/ flag | Wire with flag for marking |
| Step Off Pads (STOPs) | Yellow and Magenta for radiation work |
| Tape | Yellow and Magenta for radiation work |
| Tape | Duct tape; Packing Tape; 2 in. and 3 in. wide |
| Tape measure | 50–200 ft. preferably with metric scale as well |
| Tripod | For mounting air samplers |
| Tripod | For retrieving material from pits or excavations |
| Utility Carts | _____ |
| Weigh scale | Hanging pull type; kg with gram divisions capable of weighing up to 5 kg |

APPENDIX – A6 Personal Protective Equipment

| PERSONAL PROTECTIVE EQUIPMENT (PPE) | |
|--|---|
| <i>Item</i> | <i>Description</i> |
| Boot / Shoe Covers | Plastic |
| Boots | Rubber |
| Coveralls | Paper - Tyvek® |
| Coveralls - Cotton | _____ |
| Coveralls – Water-resistant/proof | _____ |
| Ear Protection | _____ |
| Eyewear | May require sunshades for outdoor work in bright conditions |
| Face Shields | _____ |
| Gloves – Exam | Latex or Nitrile; Powder Free |
| Gloves – Work | Heavy cotton |
| Hard Hats | _____ |
| Respirators | Full Face Air Purifying |
| | Full Face Powered Air |
| | Airline Full Face |
| | Self Contained Air Supplied |
| Monitoring Devices | Radiation Dosimeter |
| | Lapel Sampler |

APPENDIX B

Forms

APPENDIX – B1 Field Sample Logbook Entry


This logbook entry format is provided to demonstrate the minimum information to be recorded in a bound logbook. Illustrations or pictures of the site also should be included with annotations, and should accompany or be referenced in the entry. Pagination (Page X of Y) should correspond to each sample event. The logbook should also contain pagination to demonstrate logbook maintenance.

| Site Name | | | Page <u> X </u> of <u> Y </u> | |
|---|-----------------|---------------------|-----------------------------------|--------|
| Sample Collection: | Number Taken | Matrix | Date | Time : |
| Samplers Print Names | | | Observed By Initials | |
| Location of Sample Collection: | | | | |
| Landmark Description Compass Point | | | | |
| Sample Identification Code (SIC) | GPS Coordinates | Contact Gamma mR/hr | Remarks | |
| 1 - | | | | |
| 2 - | | | | |
| 3 - | | | | |
| 4 - | | | | |
| 5 - | | | | |
| 6 - | | | | |
| 7 - | | | | |
| 8 - | | | | |
| 9 - | | | | |
| 10 - | | | | |
| 11 - | | | | |
| 12 - | | | | |
| 13 - | | | | |
| 14 - | | | | |
| 15 - | | | | |
| 16 - | | | | |
| 17 - | | | | |
| 18 - | | | | |
| 19 - | | | | |
| 20 - | | | | |
| Comments: Note sample number and describe problem or information. Add pictures or illustrations on separate page. | | | | |

APPENDIX – B2 Field Sample Tracking Form

| Field Sample Tracking Form | | | | | | | | |
|--|----------------------------|---------------------|--|------------------------|---------------------------------|----------------------|---------------------------|----------------------|
| Site Name | | | | Date | | | Page <u>X</u> of <u>Y</u> | |
| No. | Sample Identification Code | Matrix ¹ | Sample Location / Description ² | Volume (mL) / Mass (g) | Area Sampled (cm ²) | Depth (m/ft.) | Sample Type ³ | Number of Containers |
| 1 | | | | | | | | |
| 2 | | | | | | | | |
| 3 | | | | | | | | |
| 4 | | | | | | | | |
| 5 | | | | | | | | |
| 6 | | | | | | | | |
| 7 | | | | | | | | |
| 8 | | | | | | | | |
| 9 | | | | | | | | |
| 10 | | | | | | | | |
| 11 | | | | | | | | |
| 12 | | | | | | | | |
| 13 | | | | | | | | |
| 14 | | | | | | | | |
| 15 | | | | | | | | |
| 16 | | | | | | | | |
| 17 | | | | | | | | |
| 18 | | | | | | | | |
| 19 | | | | | | | | |
| 20 | | | | | | | | |
| Remarks: | | | | | | | | |
| Notes: 1 – Matrix codes: SO – Soil; GW – Water; AF – Air Filter; GV – Gas/Vapor; SD – Solid; SW –Swipe 2 – Describe the sample location by compass point relative to landmark or GPS coordinates. 3 – Sample Type Code – REG – Regular; DUP – Duplicate; RIN – Sample Rinsate; BLK – Field Blank; BKG - Background | | | | | | Reviewed By Initials | | Date |

APPENDIX – B3 Chain of Custody

| | | | | | | | | | |
|---|---|------------------------------|---|---|---|----------------------------------|----------------------------------|-------------------------------|---|
|  | | EPA | | USEPA Radionuclide Analysis Traffic Report & Chain of Custody Record | | | | Case No.: | |
| | | | | | | | | DAS No.: | |
| | | | | | | | | SDG No.: | |
| | | | | | | | | Page _____ of _____ | |
| Date Shipped | | Chain of Custody Record: | | | Sample Signature: | | | For Lab Use Only | |
| Carrier Name | | Relinquished By: (Date/Time) | | | Received By: (Date / Time) | | | Lab Contract No.: | |
| Airbill: | | 1) | | | | | | Unit Price: | |
| Shipped To: | | 2) | | | | | | Transfer To: | |
| | | 3) | | | | | | Lab Contract No.: | |
| | | 4) | | | | | | Unit Price: | |
| Sample Identification Code | | Sampler | Matrix / Type | Volume / Mass | Analysis Required | Sampling Location / Sample Depth | Date /Time | Laboratory Sample No. | FOR LAB USE ONLY Sample Condition on Receipt |
| 1 | | | | | | | | | |
| 2 | | | | | | | | | |
| 3 | | | | | | | | | |
| 4 | | | | | | | | | |
| 5 | | | | | | | | | |
| 6 | | | | | | | | | |
| Additional Sampler Signature(s): | | | | | Sample(s) to be used for laboratory QC? | | Cooler temperature Upon Receipt: | Chain of Custody Seal Number: | |
| | | | | | | | | | |
| | | | | | | | Shipment Iced? (Yes/No) | Custody Seal Intact? (Yes/No) | |
| | | | | | | | | | |
| Analysis Key: | Type: Comp, Core, Grab | | Analysis Required: Gross Alpha, Gross Beta, Alpha Scan, Gamma Scan, Specific Isotopes or Radionuclides, Other | | | | | | |
| | Matrix: AF- Air Filter; GV – Gas or Vapor; DW – Drinking Water; GW – Groundwater; SD – Sediment; SO – Soil; S – Solid; SW – Swipe | | | | | | | | |

APPENDIX – B5 Example Waste Control Form

All material sent for disposal will need to be manifested with approved FULL analytical documentation. A full listing of all contaminants is required for Disposal Approval Codes.

| Waste Control Form | | | |
|---|--------------------------|-------------------------------------|---------------------------------|
| Site Name: | | | |
| Waste ID Number: | | | |
| Date Opened: | | Signature: | |
| Instructions: Cross out unused items with "X". If the term "Other" is used, indicate by name in blank space an item description appropriate for shipping information. Mixed wastes (i.e., radioactive material and chemical wastes), explosives, and gases are NOT allowed, unless specific permission is granted in writing. All material shall be made as inert as practical (e.g., liquids solidified, acids or bases neutralized) for shipment. | | | |
| Waste Container: | | | |
| Industrial Package 1 | Industrial Package 2 | Industrial Package 3 | |
| Type A | Type B (U) | Type B (M) | |
| Markings found on approved containers: | | | UN Code: |
| Volume: | | Cu. Ft. / gal. / L | |
| Container to have less than 5% void space after filling. | | | |
| Waste Type | | | |
| UN ID No. | Soil | Aqueous Liquid | Flammable |
| | Solids | Non-Aqueous Liquid | Other (identify below) |
| | PPE | Hazardous Material | |
| Hazard Level | | | |
| (state known internal levels or assumptions/calculated values) | | | |
| Chemical | % or ppm | Radioactive Material | dpm / 100cm ² |
| Chemical | % or ppm | LSA-I / LS-II / LSA-III | A ₁ / A ₂ |
| External Radiation and Contamination Levels | | | |
| Surface | dpm / 100cm ² | Attach Copy of Survey Map | |
| Radiation on Contact | mR / hr | At 1 meter (3.3 ft.) | mR / hr |
| Container Labels Required: | | | |
| (Package Orientation is mandatory for any package capable of being hand carried or trucked) | | | |
| Toxic Substance | Gas – Flammable | Radioactive LSA-I | Radioactive I |
| Corrosive | Gas – Non-Flammable | Radioactive LSA-II | Radioactive II |
| Solid – Flammable | Gas – Toxic | Radioactive LSA-II | Radioactive III |
| Liquid – Flammable | SCO-I | SCO-II | Fissile |
| Date Closed: | | Signature: | |
| Disposal Approval Code: | | Overpacking Required/Completed | |
| Transportation Company: <i>Name, Contact Name and information</i> | | | |
| Disposal Company: <i>Name, Contact Name and information</i> | | | |
| Date Disposed: | | Date Disposal Certificate Received: | |

APPENDIX C

Sample Filtration and Preservation

APPENDIX – C Sample Filtration and Preservation**1** **General**

- 1.1 It is recommended that aqueous samples containing larger amounts of sediment, or that will be analyzed for dissolved constituents, be filtered in the laboratory. If field filtration is required, the samples must be filtered in a controlled area. If these samples require preservation, the samples must be filtered prior to the addition of preservative.
- 1.2 Samples requiring filtration and/or preservation are identified in the Sample Collection Plan.
- 1.2.1 Section 2 of this Appendix describes procedures for sample filtration. Filtration of samples to be analyzed for dissolved constituents requires that the sample is passed through a 0.45 μm filter. The filter, filtrate, and the filtered sample are sent to the laboratory for analysis.
- 1.2.2 Section 3 of this Appendix describes procedures for sample preservation. Samples are preserved by the addition of acid to reduce the sample pH to less than or equal to 2.0.

2 **Sample Filtration**

NOTE: According to EPA's Manual for the Certification of Laboratories Analyzing Drinking Water (EPA 815-R-05-004), drinking water samples are measured for total activity, which represents the maximum potential exposure. For this reason, drinking water samples collected for measurement of radionuclides are not filtered.

- 2.1 Samples containing a large amount of settleable materials should be allowed to settle, and the water decanted from the settled materials prior to filtration. If, after decanting, the sample appears to contain suspended materials, it may require filtration to remove the suspended materials.
- 2.2 Only samples that are to be analyzed for dissolved constituents should be filtered through a 0.45 μm filter.
- 2.3 To prevent filter clogging and potential loss of target contaminants, allow all samples requiring filtration to settle as much as possible prior to filtration.
- 2.4 Set up a filtration funnel or filtration rig (see Figure C1).

NOTE: In cases when a sufficient volume of sample cannot be obtained using gravity filtration alone, it may be necessary to use a vacuum filtration assembly. If this is necessary, precautions should be taken to ensure that sample does not overflow into the vacuum system during filtration.

- 2.5 With a squeeze bottle of demineralized water (ASTM grade Type I or II), rinse the filter.
- 2.6 Slowly filter the sample until a sufficient amount of sample volume has been collected.
- 2.7 If the filter becomes clogged, carefully pour any sample remaining in the filter funnel back into the sample bottle, and allow the sample to settle further. Collect the filter as described in Section 2.18. Install and rinse a new filter, and continue sample filtration.

CAUTION: DO NOT add more sample than that to take the level in the rig to three quarters full.

- 2.8 When the remaining sample volume is near the level of any settled sediment in the sample bottle, stop and allow the filter to drain.
- 2.9 If practical attempt to decant additional water from the sample, without clogging the filter with sediment.

- 2.10 Cap the sample container containing the remaining sediment and refer to the Sample Collection Plan to determine whether it will be sent to the laboratory.
- 2.11 Remove the sealing film from the beaker and rinse the filter with half of the volume of the filtered sample.
- 2.12 Allow the filter to drain and then add the remaining portion to rinse the filter rig.
- 2.13 Allow the filter to drain.
- 2.14 Using tweezers, carefully remove the filter from the filter rig. Place the filter on a drying plate in a covered area and allow the filter to air dry. Place the dried filter in a Petri dish or other suitable container and seal with tape to prevent opening. Place a sample label on the Petri dish and ensure the label has the following information:
- Sample Identification Number
 - Date and Time of Sampling
 - Sample Location
 - Initials of Sampler
 - Date and Time of Filtration
 - Initials of Technician performing filtration
- 2.15 Place a sample label on the filtered sample bottle and ensure the label has the following information:
- Sample Identification Number
 - Date and Time of Sampling
 - Sample Location
 - Initials of Sampler
 - Date and Time of Filtration
 - Preservation Status of the sample at time of filtration (Preserved Yes/No)
 - Initials of Technician performing filtration

3 Sample Preservation

- 3.1 If a sample requires preservation, perform these steps in a controlled designated area.

CAUTION: Refer to the Sample Collection Plan for determination of the type of acid that should be used for sample preservation. There are several limitations to the type of acid used based upon the isotope of interest. Table C.1 lists acids that should be used for preservation of isotopes that are included in EPA's *Standardized Analytical Methods for Use During Homeland Security Events, Revision 2.0*.

WARNING: Concentrated and dilute acid solutions must be handled with caution. Nitric acid should not be allowed to dry on paper towel or absorbent materials at full strength. A fire may result. Ensure that any spills are properly cleaned up and that any spill area on absorbent materials is properly processed prior to disposal. Refer to the Site Safety Personnel for proper disposal requirements.


Table C.1: Acids for Preservation of Samples Collected for Measurement of Radioisotopes included in EPA's *Standardized Methods for Use During Homeland Security Events*, Revision 2.0

| <i>(Note: Preservation requirements taken from EPA's Manual for the Certification of Laboratories Analyzing Drinking Water (EPA 815-R-05-004).</i> | |
|--|--|
| Analyte | Preservative |
| Americium-241 | Conc. HCl or HNO ₃ to pH <2 |
| Californium-252 | Conc. HCl or HNO ₃ to pH <2 |
| Cesium-137 | Conc. HCl to pH <2 |
| Cobalt-60 | Conc. HCl or HNO ₃ to pH <2 |
| Europium-154 | Conc. HCl or HNO ₃ to pH <2 |
| Iridium-192 | Conc. HCl or HNO ₃ to pH <2 |
| Plutonium-238 | Conc. HCl or HNO ₃ to pH <2 |
| Radium-226 | Conc. HCl or HNO ₃ to pH <2 |
| Ruthenium-103 | Conc. HCl or HNO ₃ to pH <2 |
| Ruthenium-106 | Conc. HCl or HNO ₃ to pH <2 |
| Strontium-90 | Conc. HCl or HNO ₃ to pH <2 |
| Uranium-238 | Conc. HCl or HNO ₃ to pH <2 |
| Gross Alpha | Conc. HCl or HNO ₃ to pH <2 |
| Gross Beta | Conc. HCl or HNO ₃ to pH <2 |

- 3.1.1 Ensure the area is set-up for the addition of acid by performing the following:
 - 3.1.1.1 Clear the work area.
 - 3.1.1.2 Place a sufficient amount of absorbent material to cover the area, and secure it from moving with duct tape.
 - 3.1.1.3 Ensure another person knows you are working with acid.
- 3.1.2 Open the sample container and the acid bottle.
- 3.1.3 Using a pipette or dropper, transfer approximately 1 mL or 1 drop of concentrated acid to the sample.
- 3.1.4 Place the pipette or dropper in a secure location to prevent dripping, and close the acid and sample bottles.
- 3.1.5 Carefully agitate the sample, remove the lid, and check the pH with pH paper or a pH probe. Add additional acid as necessary to reach a sample pH of less than or equal to 2.
 - 3.1.5.1 DO NOT add more than 5 additional mL of concentrated acid.
 - 3.1.5.2 If the sample pH can not be lowered sufficiently after the addition of an extra 5 mL of acid, close the sample container and record the information in the Field Sample Logbook and on the Sample Label.

- 3.1.6 Once the sample pH is less than or equal to 2.0, close the sample container and note the following in the Field Sample Collection Logbook and on the Sample Label.
- Acid added – Type, concentration, and volume
 - pH of the sample
 - Date and time of preservation
 - Initials of the person who added the acid
- 3.1.7 Package the sample per the requirements of Module I, Section 7.0.
- 3.1.8 Clean the area of materials, ensuring any drips or spills of acid are contained and processed per the requirements of Site Safety.

Figure C1: Filter Rig Assembly

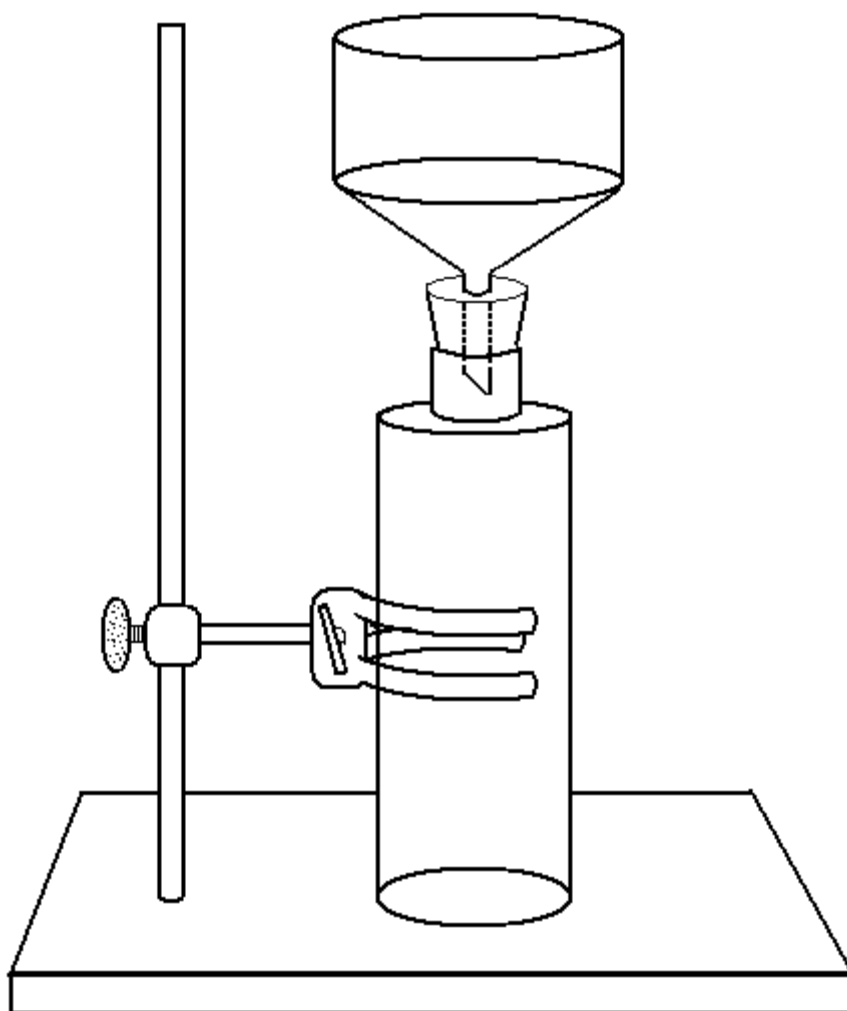

APPENDIX D

References

APPENDIX – D References

1. *FRMAC Monitoring and Analysis Manual Volumes 1 and 2 – Radiation Monitoring and Sampling*, DOE/NV/11718-181, U.S. Department of Energy, September 2002
2. *Multi-Agency Radiation Survey and Site Investigation Manual*, NUREG-1575, EPA 402-R-97-016, U.S. Environmental Protection Agency, U.S. Department of Energy, U.S. Department of Defense, and U.S. Nuclear Regulatory Commission, December 1997
3. *Multi-Agency Radiological Laboratory Protocols Manual Volumes 1, 2, and 3*, NUREG-1576, EPA 402-B-04-001, NTIS PB2004-105421, U.S. Environmental Protection Agency, U.S. Department of Energy, U.S. Department of Defense, U.S. Department of Homeland Security, U.S. Nuclear Regulatory Commission, U.S. Food and Drug Administration, U.S. Geological Survey, and National Institute of Standards and Technology, July 2004
4. *Superfund Representative Sampling Guidance, Volume 1: Soil* EPA 540 R-95 141, U.S. Environmental Protection Agency, December 1995
5. *Compendium of ERT Soil Sampling and Surface Geophysics Procedures*, EPA 540 P-91-006, U.S. Environmental Protection Agency, January 1991
6. *EML Procedures Manual, HASL-300, 28th Edition, Volume 1, Chapter 2, Sampling*, U.S. Department of Energy, February 1997
7. *Compendium of ERT Groundwater Sampling Procedures*, EPA 540 P-91-007, U.S. Environmental Protection Agency, January 1991
8. *Requirements for the Development of Sampling and Analysis Plans*, E200-1-3, U.S. Army Corps of Engineers, February 2001
9. *Chemical Quality Assurance for Hazardous, Toxic, and Radioactive Waste (HTRW) Projects*, EM 200-1-6, U.S. Army Corps of Engineers, October 1997
10. *USACE Kansas City And St. Louis District Radionuclide Data Quality Evaluation Guidance for Alpha And Gamma Spectroscopy*, U.S. Army Corps of Engineers, June 2001
11. *Standard Practice for Sampling Surface Soils for Radionuclides*, C 998-90 (Reapproved 2000), American Society for Testing and Materials (ASTM), 2000
12. *Standard Guide for Sampling Ground-Water Monitoring Wells*, D4448-01, ASTM-International Vol. 11.04-Environmental Assessment; Hazardous Substances and Oil Spill Responses; Waste Management; Environmental Risk Assessment, 2001
13. *Standard Practice for Sampling with a Scoop*, D5633-04, ASTM-International, 2004
14. *Ground Water Sampling Procedure Low Stress (Low Flow) Purging and Sampling*, U.S. EPA Region II; <http://www.epa.gov/swerust1/cat/monitor.htm>.
15. *Manual for the Certification of Laboratories Analyzing Drinking Water*, EPA 815-R-05-004, U.S. EPA, January 2005



PRESORTED STANDARD
POSTAGE & FEES PAID
EPA
PERMIT NO. G-35

Office of Research and Development
National Homeland Security Research Center
Cincinnati, OH 45268

Official Business
Penalty for Private Use
\$300

December 2006
EPA/600/S-07/001