Cut bindings, and peel down upper half of burlap


Topsoil thoroughly mixed with specified soil conditoner prior to placing around roots

Roughen subsoil in bottom of hole and scarify sides to prevent sealing

METHOD OF PLANTING CONTAINER OR BALLED AND **BURLAPPED TREES AND SHRUBS**

12" (min.

Topsoil-

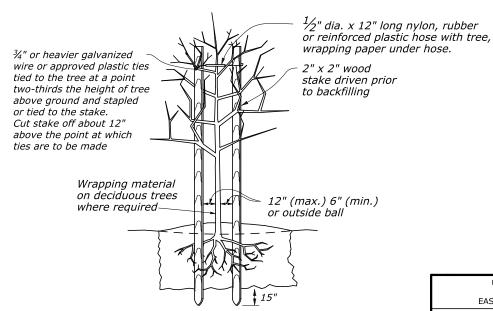


METHOD OF STAKING DECIDUOUS TREES UNDER 12'

U.S. DEPARTMENT OF TRANSPORTATION FEDERAL HIGHWAY ADMINISTRATION EASTERN FEDERAL LANDS HIGHWAY DIVISION

U.S. CUSTOMARY DETAIL

TREES AND SHRUBS PLANTING METHODS

DETAIL APPROVED FOR USE DETAIL E626-50

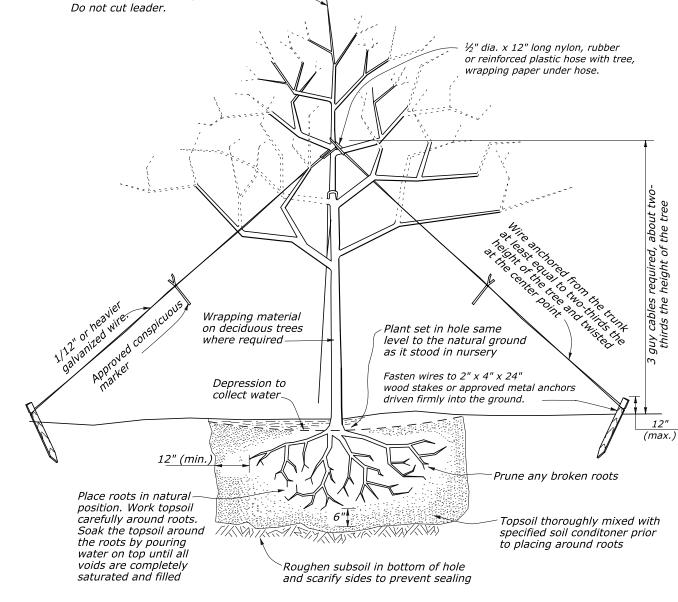

For bare root trees and shrubs -

stock and about $\frac{1}{2}$ for collected

prune branches about $\frac{1}{3}$ for nursery

material as indicated by dotted lines.

METHOD OF PLANTING BARE ROOT TREES AND SHRUBS AND METHOD OF GUYING DECIDUOUS TREES OVER 12' AND CONIFERS OVER 4'