STEEP TURNS

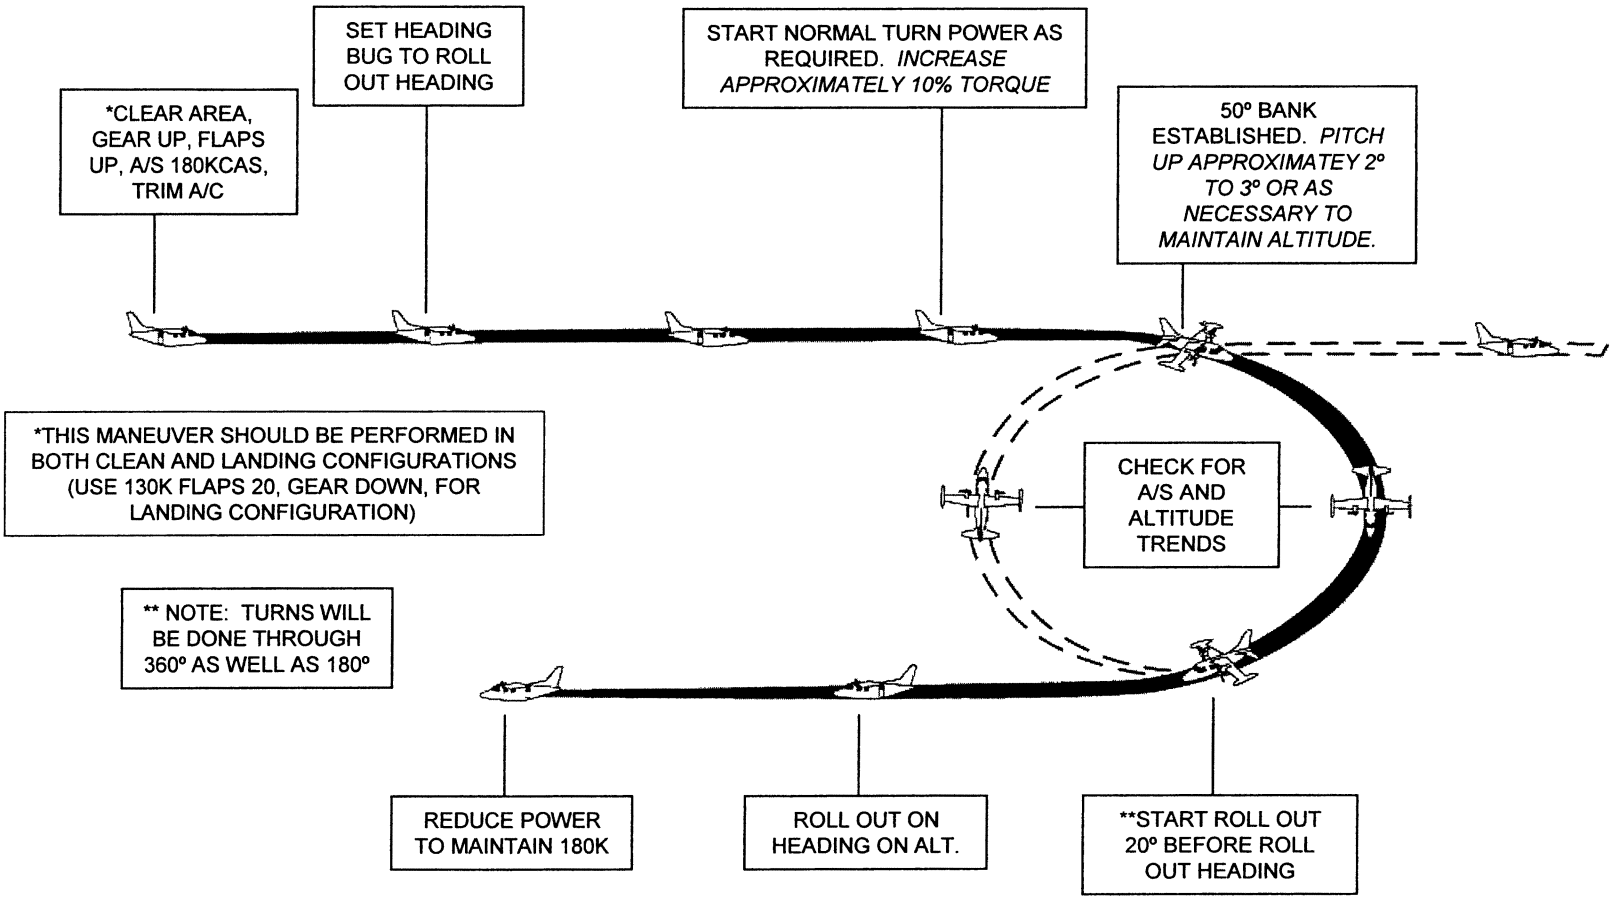
*CLEAR AREA, GEAR UP, FLAPS UP, A/S 180KCAS, TRIM A/C
SET HEADING BUG TO ROLL OUT HEADING
START NORMAL TURN POWER AS REQUIRED. *INCREASE APPROXIMATELY 10% TORQUE*
50° BANK ESTABLISHED. *PITCH UP APPROXIMATEY 2° TO 3° OR AS NECESSARY TO MAINTAIN ALTITUDE.*
*THIS MANEUVER SHOULD BE PERFORMED IN BOTH CLEAN AND LANDING CONFIGURATIONS (USE 130K FLAPS 20, GEAR DOWN, FOR LANDING CONFIGURATION)
CHECK FOR A/S AND ALTITUDE TRENDS
** NOTE: TURNS WILL BE DONE THROUGH 360° AS WELL AS 180°
REDUCE POWER TO MAINTAIN 180K
ROLL OUT ON HEADING ON ALT.
**START ROLL OUT 20° BEFORE ROLL OUT HEADING