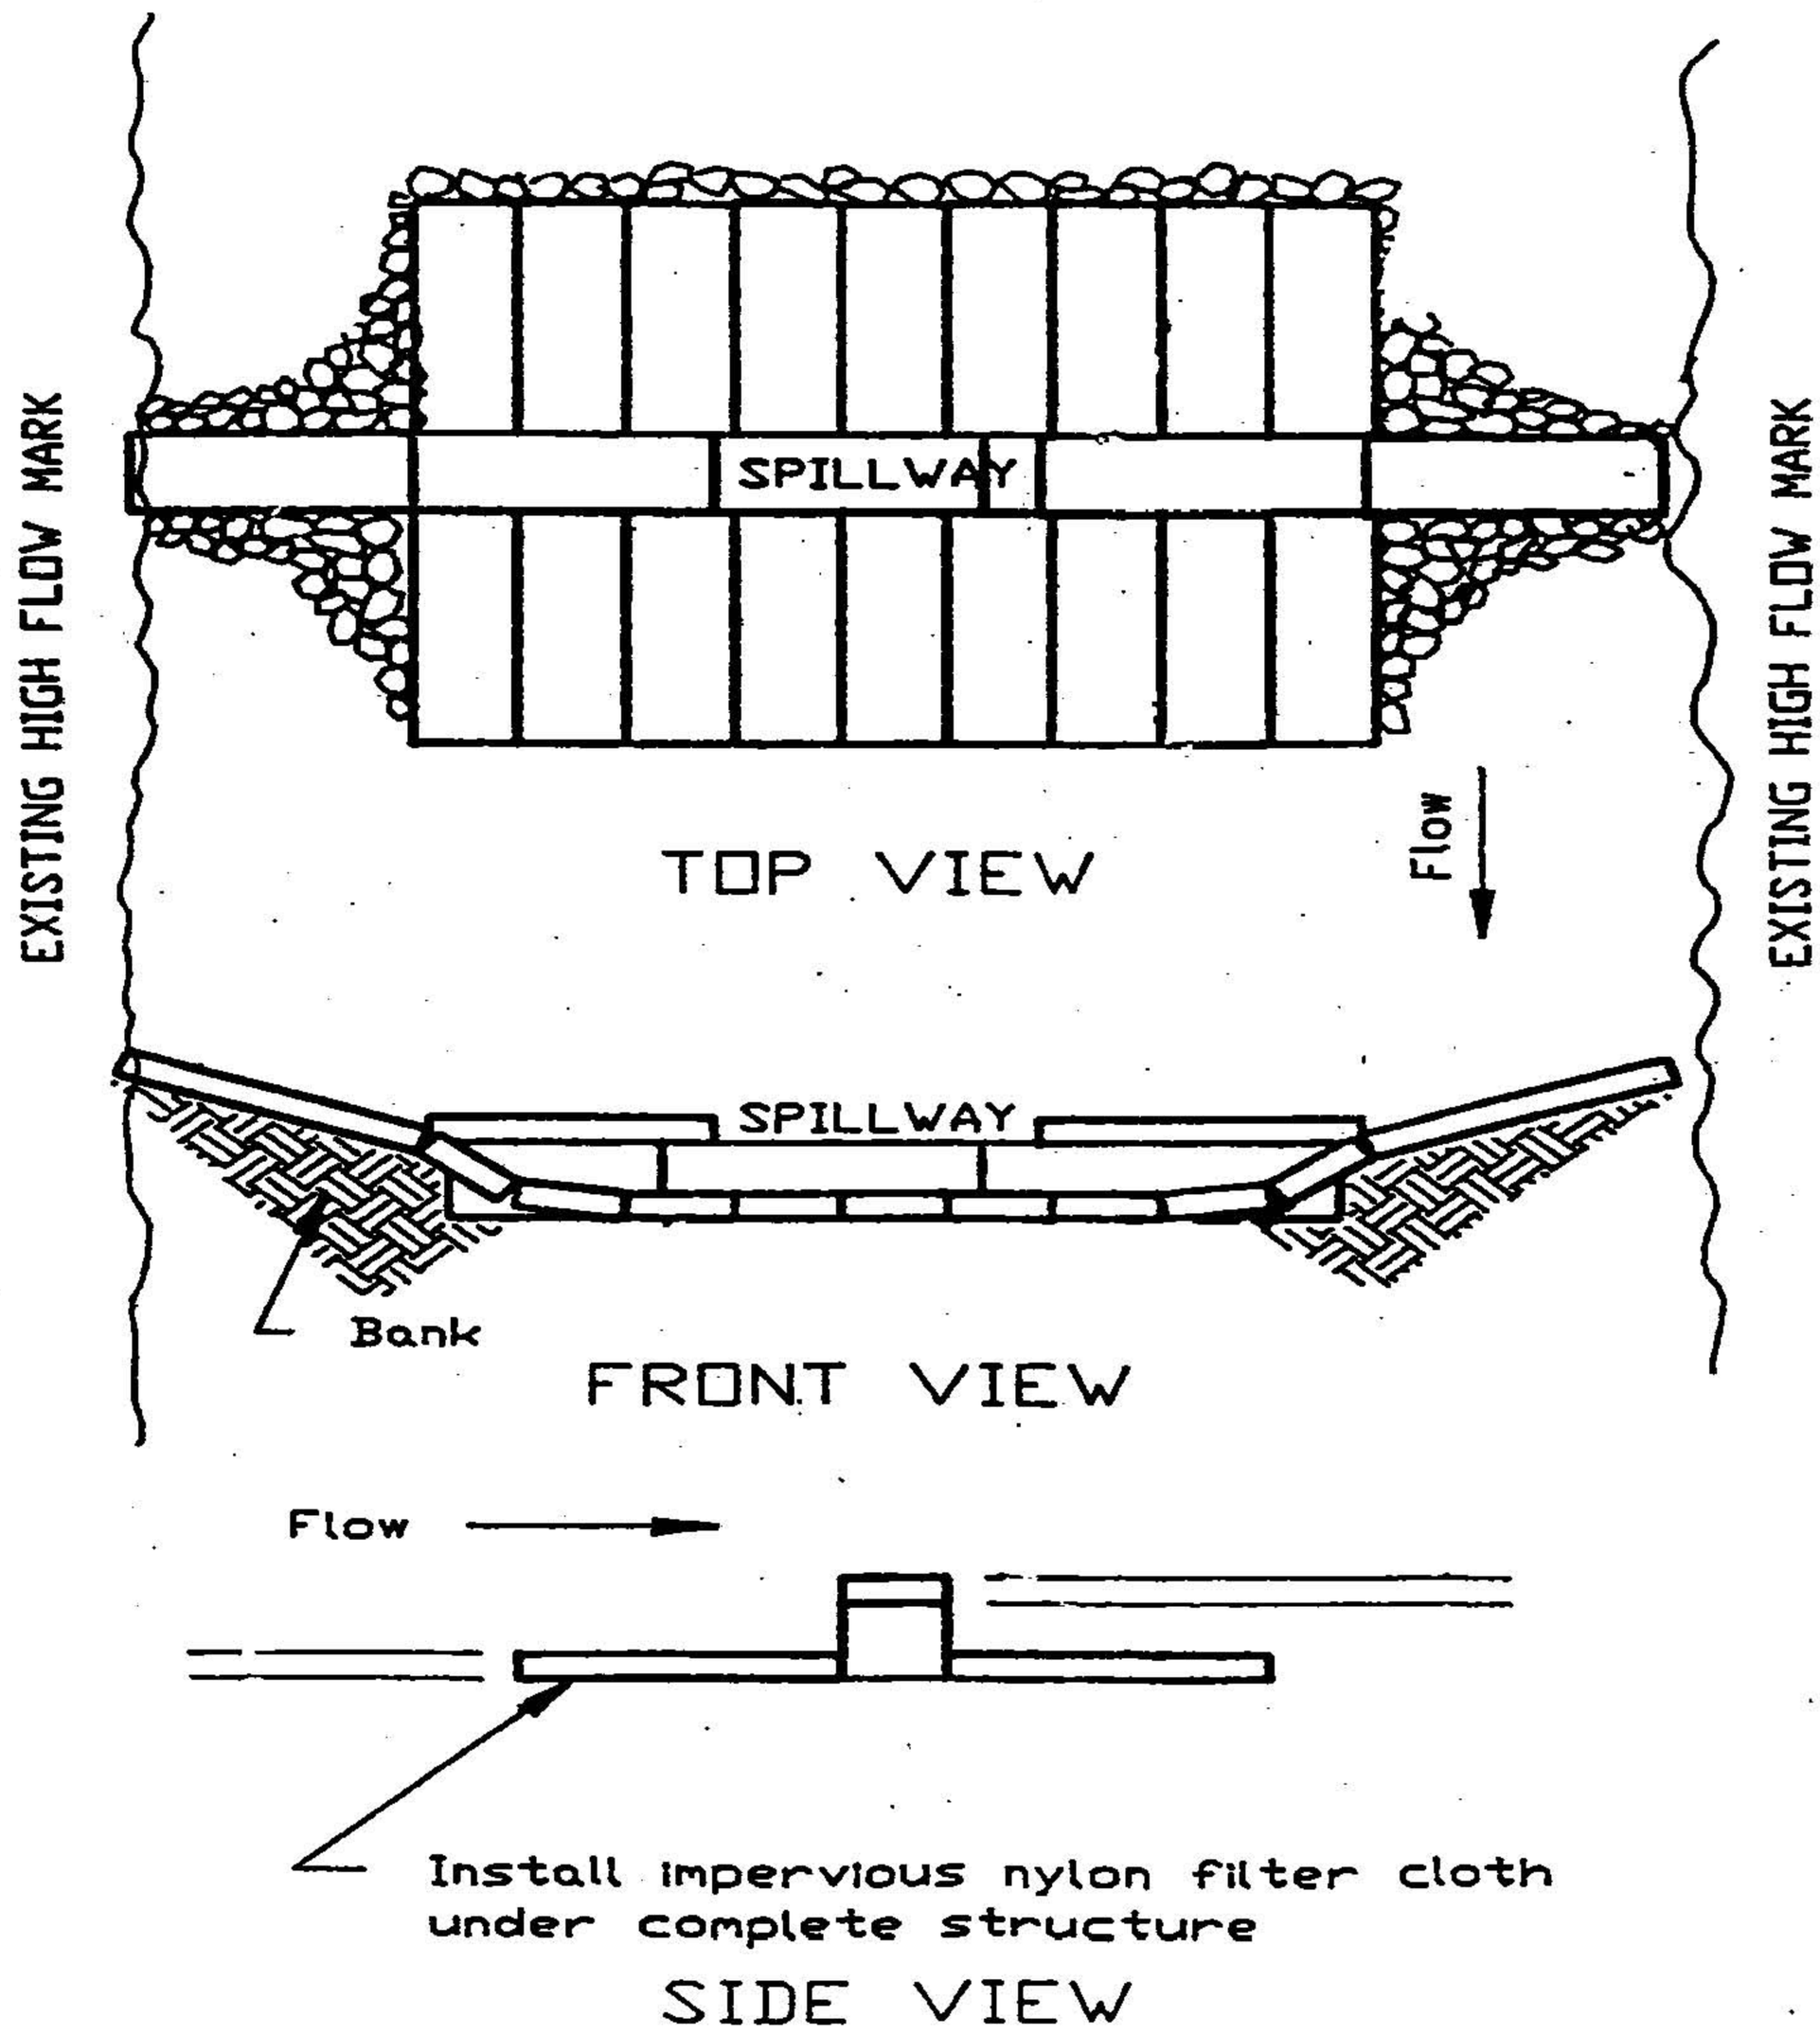
Large rock on corners to prevent
high water from cutting around structure
EXISTING HIGH FLOW MARK
SPILLWAY
EXISTING HIGH FLOW MARK
Flow
TOP VIEW
SPILLWAY
Bank
FRONT VIEW
Flow
Install impervious nylon filter cloth
under complete structure
SIDE VIEW