



Measured Peak Equipment Loads in Laboratories

This technical bulletin documents measured peak equipment load data from 39 laboratory spaces in nine buildings across five institutions. The purpose of these measurements was to obtain data on the actual peak loads in laboratories, which can be used to rightsize the design of HVAC systems in new laboratories. While any given laboratory may have unique loads and other design considerations, these results may be used as a "sanity check" for design assumptions.

1 Introduction

Laboratory equipment such as autoclaves, glass washers, refrigerators, and computers account for a significant portion of the energy use in laboratories. However, because of the general lack of measured equipment load data for laboratories, designers often use estimates based on "nameplate" rated data, or design assumptions from prior projects. Consequently, peak equipment loads are frequently overestimated. This results in oversized HVAC systems, increased initial construction costs, and increased energy use due to inefficiencies at low part-load operation.

Labs21 has published a best-practice guide which describes strategies to obtain better estimates of equipment loads and right-size HVAC systems, saving initial construction costs as well as life-cycle energy costs. (Available at: http://www.labs21century.gov/toolkit/bp_guide.htm)

Since the guide was published, Labs21 has obtained additional data on measured equipment loads in various laboratories. The purpose of this technical bulletin is to document these data, which were drawn from a total of 39 different lab spaces in nine different buildings from the following institutions: Duke University, Lawrence Berkeley National Laboratory, University of California Davis, University of California Santa Cruz, and University of Wisconsin Madison.

2 Measurement Approach

Clamp-on meters were used to take measurements of equipment electrical loads for each lab space. The measurements were taken when the labs were nominally fully occupied and used. In most cases, measurements were taken over a period of one to four weeks. The measured quantities were one or more of the following:

- Apparent instantaneous power: The product of the voltage and the current at any given instant. The maximum value of this number, divided by the lab area is hereafter referred to as the 'Max Inst. VA/sf'.
- Actual instantaneous power: This is the actual instantaneous power draw, which becomes a thermal load to the space. The maximum value of this number, divided by the lab area is hereafter referred to as 'Max Inst. W/sf'.
- Average interval power: This is obtained by averaging the actual instantaneous power over a time interval, typically 15 minutes. This quantity is typically measured by utility interval meters to determine demand charges. The maximum value of this number, divided by the lab area, is hereafter referred to as 'Max Interval Avg W/sf'.

Max Inst. VA/sf is the key metric for sizing the electrical distribution system, whereas Max Interval Avg W/sf is the key metric for sizing HVAC systems. For a further discussion of sizing, the reader is referred to the Labs21 best practice guide.

3 Measurement Data

Table 1 summarizes the measurement data as well as the area and type for each laboratory. The footnotes provide more information on the measurement approach for each building. The laboratory type was characterized by the measurement personnel, and as such do not necessarily refer to any standard definitions for type.

Table 1: Measured peak equipment loads in various laboratory spaces.

Bldg ID	Space ID	Area (sf)	Lab Type	Max Interval Avg W/sf	Max Inst. W/sf	Max Inst. VA/sf
A	1	850	Biology	1.68	4.99	5.14
	2	307	Biology	8.64	18.61	18.73
	3	833	Biology	1.83	4.32	4.50
	4	308	Biology	9.94	17.83	19.69
	5	831	Chemistry	3.13	4.97	5.45
	6	835	Chemistry	3.69	7.50	8.05
	7	832	Chemistry	2.16	7.05	7.07
	8	828	Chemistry	1.77	4.13	4.35
	9	459	Equipment	6.02	29.07	40.00
	10	306	Equipment	16.73	30.81	32.56
	11	1082	Isotope	8.07	15.29	15.83
B	1	1071	Biology	4.09	6.71	7.18
	2	711	Elec Microscope	9.33	18.21	19.33
	3	642	Env. Rooms	2.80	8.47	8.73
	4	646	Instrument	2.27	5.29	5.57
C	1	665	Biology	9.00	n/a	n/a
	2	790	Biology	6.11	n/a	n/a
	3	665	Biology	6.03	n/a	n/a
	4	500	Equipment	7.86	n/a	n/a
	5	500	Equipment	18.62	n/a	n/a
D	1	1121	Biology	3.22	4.19	4.40
	2	1121	Biology	3.92	6.00	6.48
	3	1138	Biology	3.32	3.89	4.24
	4	1138	Biology	1.85	2.26	2.52
	5	1139	Biology	1.14	3.38	5.87
	6	1139	Biology	2.00	2.40	7.30
	7	1133	Biology	5.87	7.34	7.89
E	1	562	Biology	n/a	n/a	5.64
	2	N/A	Biology	n/a	n/a	5.87
	3	N/A	Biology	n/a	n/a	6.61
	4	1222	Biology	n/a	n/a	5.85
F	1	2052	Biology	9.00	n/a	n/a
	2	5843	Biology	3.52	n/a	n/a
G	1	1763	Nanofab Suite	n/a	n/a	4.83
H	1	825	Dry lab	n/a	n/a	10.91
	2	541	Dry lab	n/a	n/a	2.01
I	1	1152	Biology	n/a	n/a	1.66
	2	1190	Biology	n/a	n/a	2.66
	3	1049	Bio Lab Support	n/a	n/a	7.53

Table 1 Footnotes - measurement approach for each building:

- Buildings A,B,C: Continuous instantaneous measurements; Averaged at 15 minute intervals; Instantaneous measurements are non-coincident sum of three phases.
- Building D: Continuous instantaneous measurements; Averaged at 5 minute intervals.
- Building E: Instantaneous measurements at 30 minute intervals.
- Building F: Continuous instantaneous measurements; Averaged at 15 minute intervals
- Buildings G, H: No documentation of measurement approach
- Building I: Instantaneous measurements at 15 minute intervals

4 Analysis

4.1 Maximum Interval Average W/sf for Different Laboratory Types

Figure 1 shows the maximum interval average W/sf in biology labs. The data show a wide range in loads in biology labs, from just over 1 W/sf to almost 10 W/sf. Figure 2 shows the correlation between lab area and the maximum interval average W/sf for biology labs. The data suggest that smaller labs tend to have higher equipment load densities – possibly because smaller labs may have more equipment per unit area as well as less diversity in loads due to less total equipment.

Figure 3 shows the maximum interval average W/sf in chemistry labs and equipment rooms. All the chemistry labs had less than 4 W/sf. Loads in equipment rooms, which typically contain shared equipment with little or no bench space, can exceed 15 W/sf.

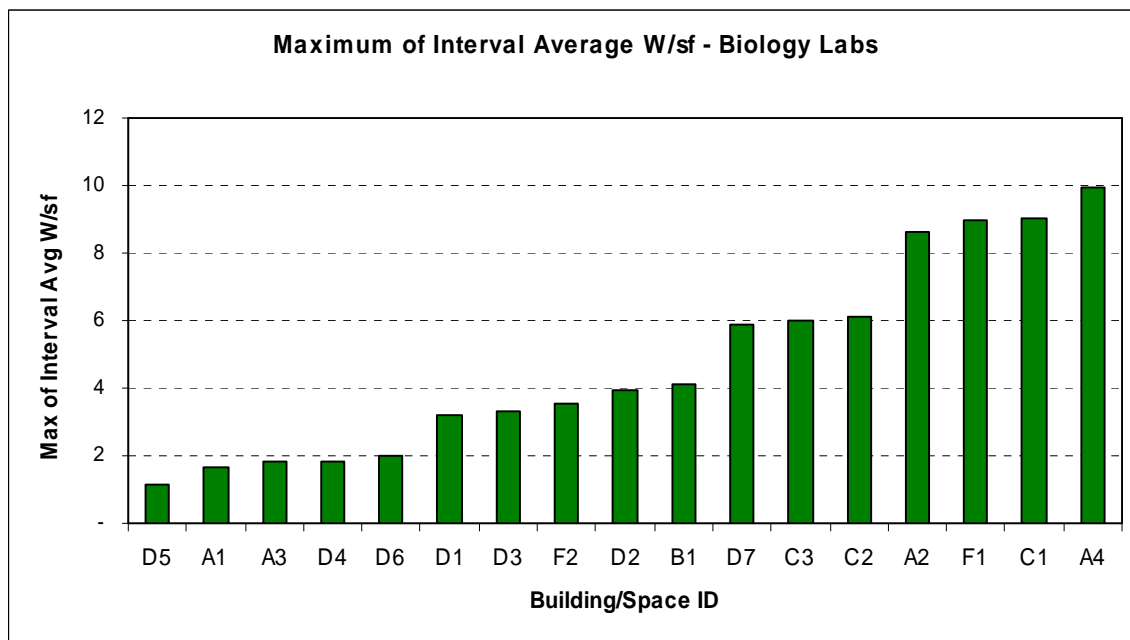


Figure 1 Maximum Interval Average W/sf in biology labs

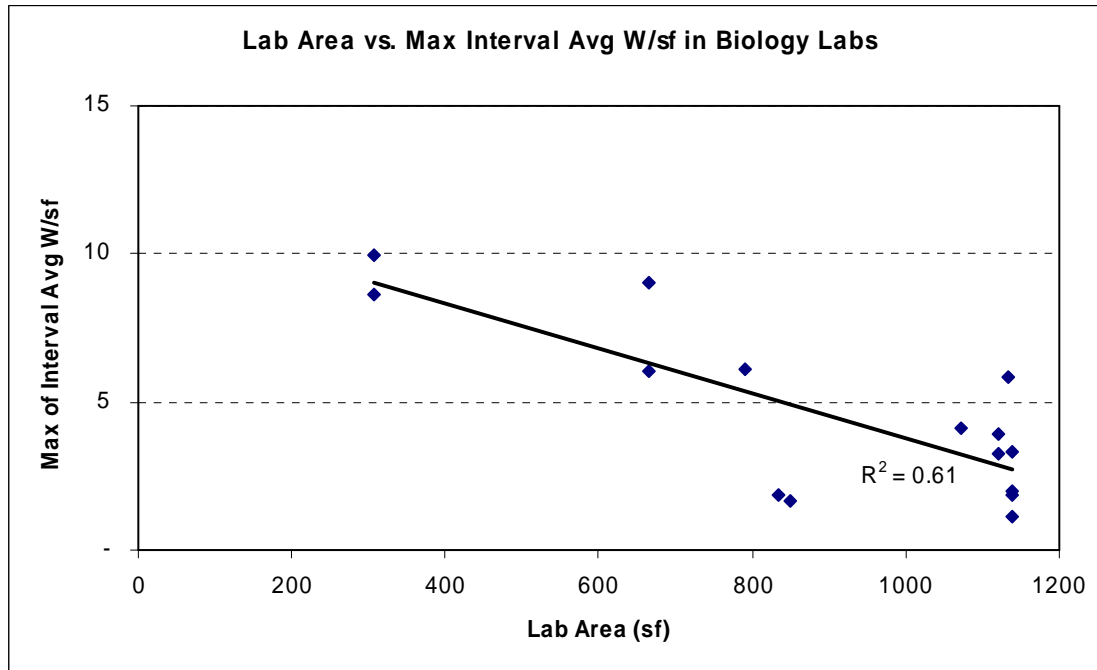


Figure 2 Correlation between lab area and Maximum Interval Average W/sf for biology labs. (Two high lab area outliers removed.)

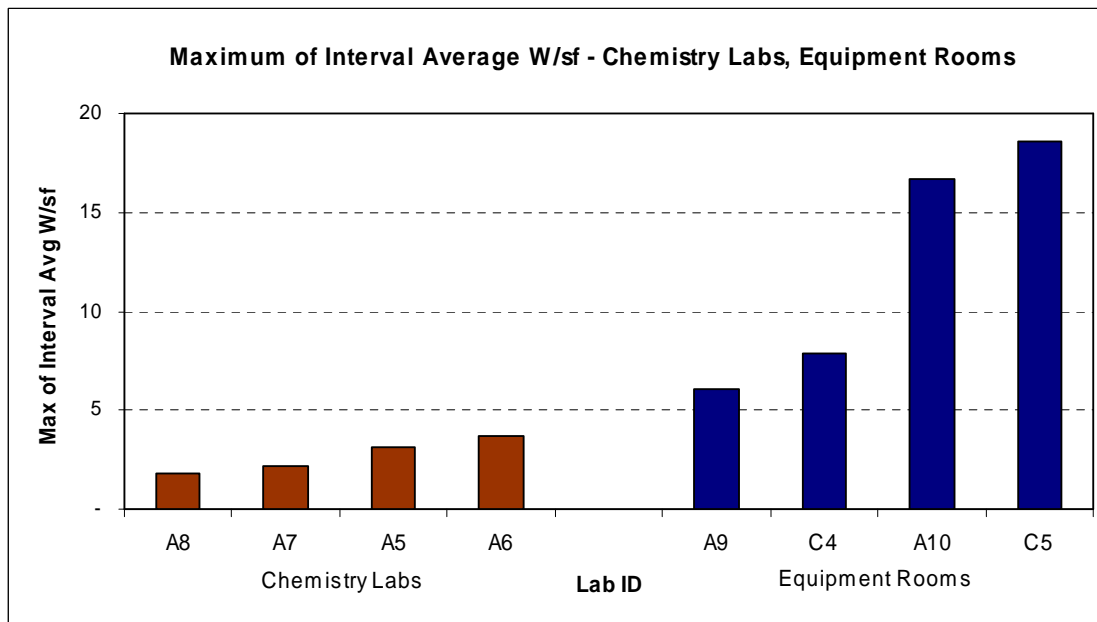


Figure 3 Maximum Interval Average W/sf in chemistry labs and equipment rooms

4.2 Comparison of Instantaneous and Interval Average loads

Figure 4 and Figure 5 compare instantaneous loads and interval average loads in Buildings A and D respectively. The data show that peak interval loads are significantly lower than peak instantaneous loads. This suggests that sizing HVAC systems based on instantaneous loads can result in significant over-sizing.

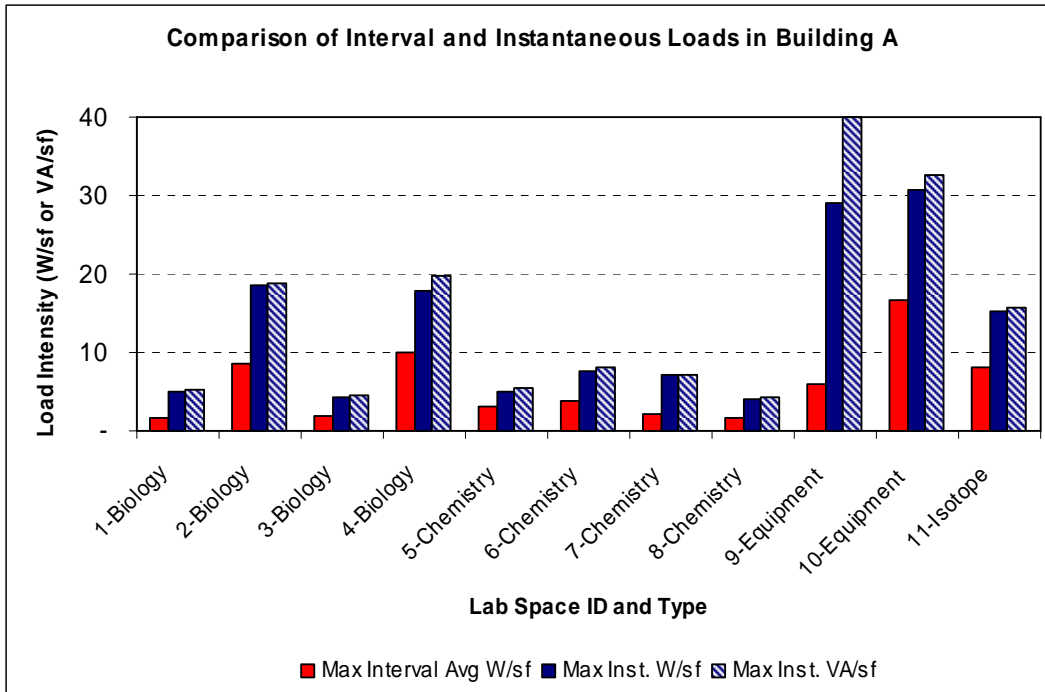


Figure 4 Comparison of instantaneous and interval average loads in lab spaces in Building A.

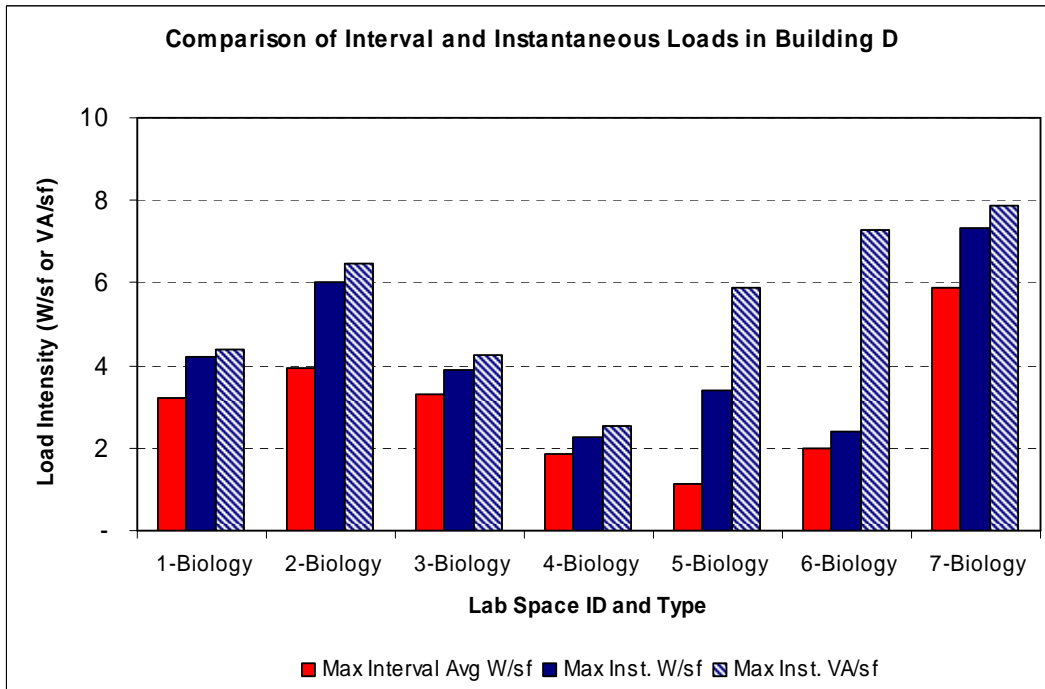


Figure 5 Comparison of instantaneous and interval average loads in lab spaces in Building D.

5 Conclusion

This bulletin presented measured equipment load data from various laboratory spaces while they were nominally fully occupied. For HVAC sizing, the key metric of interest is the maximum Interval Average W/sf. The data for this metric show a wide range in biology labs, from just over

1 W/sf to almost 10 W/sf. All the chemistry labs had less than 4 W/sf. Loads in equipment rooms can exceed 15 W/sf. These data may be used as a “sanity check” for design assumptions in a new laboratory project. However, laboratories tend to have unique loads and operational characteristics. Therefore, for the new design or major retrofit projects, it is strongly recommended that the measurements be taken in a comparable laboratory that has similar functions and operational characteristics.

6 References

Right-sizing Laboratory Equipment Loads, Labs21 Best Practice Guide. Available on the web: http://www.labs21century.gov/toolkit/bp_guide.htm

7 Acknowledgements

Measurement data were provided by: William Brewer, Duke University; Steve Greenberg and David Heinzerling, Lawrence Berkeley National Laboratory; William Starr, University of California, Davis; Patrick Testoni, University of California Santa Cruz; Mike Walters, Affiliated Engineers Inc. This bulletin was technically reviewed by Dan Amon, U.S. EPA, and Otto VanGeet, National Renewable Energy Laboratory.

For more information on this bulletin:

Paul Mathew, Ph.D.
Lawrence Berkeley National Laboratory
1 Cyclotron Road, MS 90-3111
Berkeley CA 94720
510-486-5116
PAMathew@lbl.gov

For more information on Laboratories for the 21st Century:

Dan Amon, P.E.
National Energy Manager
U.S. Environmental Protection Agency
1200 Pennsylvania Ave., N.W.
Washington, DC 20460
202-564-7509
amon.dan@epa.gov

Will Lintner, P.E.
Federal Energy Management Program
U.S. Department of Energy
1000 Independence Ave., S.W.
Washington, D.C. 20585-0121
202.586.3120
william.lintner@ee.doe.gov



Laboratories for the 21st Century
U.S. Environmental Protection Agency
Office of Administration and Resource Management
www.labs21century.gov



In partnership with the
U.S. Department of Energy
Energy Efficiency and Renewable Energy
Bringing you a prosperous future where energy
Is clean, abundant, reliable, and affordable
www.eere.energy.gov

Prepared at the Lawrence Berkeley National Laboratory
A DOE national laboratory