

Aruba 3000 and 6000/M3
Revision B2 Controllers with
ArubaOS FIPS Firmware Non-
Proprietary Security Policy FIPS
140-2 Level 2 Release
Supplement



Copyright

© 2013 Aruba Networks, Inc. Aruba Networks trademarks include  , Aruba Networks[®], Aruba Wireless Networks[®], the registered Aruba the Mobile Edge Company logo, Aruba Mobility Management System[®], Mobile Edge Architecture[®], People Move. Networks Must Follow[®], RFPProtect[®], Green Island[®]. All rights reserved. All other trademarks are the property of their respective owners. Open Source Code

Certain Aruba products include Open Source software code developed by third parties, including software code subject to the GNU General Public License (GPL), GNU Lesser General Public License (LGPL), or other Open Source Licenses. The Open Source code used can be found at this site:

http://www.arubanetworks.com/open_source

Legal Notice

The use of Aruba Networks, Inc. switching platforms and software, by all individuals or corporations, to terminate other vendors' VPN client devices constitutes complete acceptance of liability by that individual or corporation for this action and indemnifies, in full, Aruba Networks, Inc. from any and all legal actions that might be taken against it with respect to infringement of copyright on behalf of those vendors.

Warranty

This hardware product is protected by the standard Aruba warranty of one year parts/labor. For more information, refer to the ARUBACARE SERVICE AND SUPPORT TERMS AND CONDITIONS.

Altering this device (such as painting it) voids the warranty.



www.arubanetworks.com

1344 Crossman Avenue
Sunnyvale, California 94089

Phone: 408.227.4500
Fax 408.227.4550

0510541-17 | January 2013

| | |
|--|----|
| Preface..... | 5 |
| Purpose of this Document..... | 5 |
| Related Documents | 7 |
| Additional Product Information | 7 |
| The Aruba 3000 and 6000/M3 Controllers..... | 8 |
| Overview..... | 8 |
| Physical Description..... | 9 |
| Dimensions..... | 9 |
| Cryptographic Module Boundaries | 9 |
| Chassis..... | 10 |
| FIPS 140-2 Level 2 Features..... | 14 |
| Intended Level of Security | 14 |
| Physical Security | 15 |
| Operational Environment | 15 |
| Logical Interfaces | 15 |
| Roles and Services | 16 |
| Crypto Officer Role | 16 |
| User Role..... | 20 |
| Authentication Mechanisms..... | 21 |
| Unauthenticated Services..... | 22 |
| Cryptographic Key Management | 22 |
| Implemented Algorithms..... | 22 |
| Non-FIPS Approved Algorithms | 23 |
| Critical Security Parameters | 23 |
| Self-Tests..... | 27 |
| Alternating Bypass State..... | 29 |
| Mitigation of Other Attacks..... | 29 |
| XSec | 29 |
| Wireless Intrusion Detection..... | 29 |
| Unique Station and User Classification | 30 |
| Detecting and Disabling Rogue APs | 30 |

| | |
|---|----|
| Denial of Service and Impersonation Protection | 30 |
| Man-in-the-Middle Protection | 30 |
| Policy Definition and Enforcement..... | 30 |
| Using Wireless to Protect your Wired Network..... | 31 |
| Using Wireless to Protect your Existing Wireless Network..... | 31 |
| Installing the Controller..... | 32 |
| Pre-Installation Checklist..... | 32 |
| Precautions | 32 |
| Product Examination | 33 |
| Package Contents | 33 |
| Minimum Configuration for the Aruba 6000-400..... | 33 |
| Tamper-Evident Labels | 33 |
| Reading TELs..... | 34 |
| Required TEL Locations | 34 |
| To Detect Opening the Chassis Cover | 34 |
| To Detect the Removal of Any Module or Cover Plate..... | 35 |
| To Detect Access to Restricted Ports | 35 |
| To Detect Access to Restricted Port | 35 |
| To Detect Opening the Chassis Cover | 35 |
| Applying TELs | 35 |
| Ongoing Management..... | 36 |
| Crypto Officer Management..... | 36 |
| User Guidance | 36 |
| Setup and Configuration | 37 |
| Setting Up Your Controller | 37 |
| Enabling FIPS Mode | 37 |
| Enabling FIPS with the Setup Wizard..... | 37 |
| Enabling FIPS with the WebUI | 37 |
| Disallowed FIPS Mode Configurations | 38 |

This security policy document can be copied and distributed freely.

Purpose of this Document

This release supplement provides information regarding the Aruba 3000 and 6000/M3 Controller with FIPS 140-2 Level 2 validation from Aruba Networks. The material in this supplement modifies the general Aruba hardware and firmware documentation included with this product and should be kept with your Aruba product documentation.

This supplement primarily covers the non-proprietary Cryptographic Module Security Policy for the Aruba Controller. This security policy describes how the switch meets the security requirements of FIPS 140-2 Level 2 and how to place and maintain the switch in a secure FIPS 140-2 mode. This policy was prepared as part of the FIPS 140-2 Level 2 validation of the product.

FIPS 140-2 (Federal Information Processing Standards Publication 140-2, *Security Requirements for Cryptographic Modules*) details the U.S. Government requirements for cryptographic modules. More information about the FIPS 140-2 standard and validation program is available on the National Institute of Standards and Technology (NIST) Web-site at:

<http://csrc.nist.gov/groups/STM/cmvp/index.html>

Table 1 Aruba Legacy Controllers Supported but No Longer Sold

| Aruba Part Number | Aruba Firmware |
|------------------------|---|
| 3200-USF1 Revision B2 | ArubaOS_MMC_6.1.2.3-FIPS, ArubaOS_MMC_6.1.4.1-FIPS |
| 3400-USF1 Revision B2 | ArubaOS_MMC_6.1.2.3-FIPS, ArubaOS_MMC_6.1.4.1-FIPS |
| 3600-USF1 Revision B2 | ArubaOS_MMC_6.1.2.3-FIPS, ArubaOS_MMC_6.1.4.1-FIPS |
| 3200-F1 Revision B2 | ArubaOS_MMC_6.1.2.3-FIPS, ArubaOS_MMC_6.1.4.1-FIPS |
| 3400-F1 Revision B2 | ArubaOS_MMC_6.1.2.3-FIPS, ArubaOS_MMC_6.1.4.1-FIPS |
| 3600-F1 Revision B2 | ArubaOS_MMC_6.1.2.3-FIPS, ArubaOS_MMC_6.1.4.1-FIPS |
| M3mk1-S-F1 Revision B2 | ArubaOS_MMC_6.1.2.3-FIPS, |

Table 1 Aruba Legacy Controllers Supported but No Longer Sold

| | |
|-------------|--------------------------|
| | ArubaOS_MMC_6.1.4.1-FIPS |
| LC-2G-1 | N/A |
| LC-2G24F-1 | N/A |
| LC-2G24FP-1 | N/A |



Aruba part numbers have XLR processor version varieties, which includes the use of the XLR Rev. B2 processor. The XLR Rev. B2 processor is no longer sold. A B2 unit can be identified by a serial number beginning with an A.



Controller models (3200/3400/3600) and controller chassis (6000-400) ending with -USF1 are to be sold in the US only. Controller models ending with -F1 are considered 'rest of the world' and must not be used for deployment in the United States. From FIPS perspective, both -USF1 and -F1 controllers and chassis are identical and fully FIPS compliant. Please notice that M3mk1-S-F1 hardware module listed in Table 1 above is not a controller and the unit has been available throughout the world.



Aruba 6000-400-F1 and Aruba 6000-400-USF1 are the part numbers for Aruba 6000-400 controller chassis, where can host M3mk1-S-F1 Revision B2, LC-2G-1, LC-2G24F-1 and LC-2G24FP-1 line cards.



Aruba Line Cards LC-2G-1, LC-2G24F-1 and LC2G24FP-1 are no longer sold by Aruba, but are supported by the Aruba 6000-400 chassis until November 1, 2015. These optional line cards can be replaced by the hardware M3mk1-S-F1 Revision B2 (no longer sold) or by M3mk1-S-F1 Revision C4. Please notice that none of the Aruba Line cards (LC-2G-1, LC-2G24F-1 and LC2G24FP-1) performs cryptographic operations.

Related Documents

The following items are part of the complete installation and operations documentation included with this product:

- *Aruba 6000 Mobility Controller Installation Guide*
- *Aruba 3000-series Mobility Controller Installation Guide*
- *ArubaOS 6.1 User Guide*
- *ArubaOS 6.1 CLI Reference Guide*
- *ArubaOS 6.1 Quick Start Guide*
- *ArubaOS 6.1 Upgrade Guide*
- *Aruba AP Installation Guides*

Additional Product Information

More information is available from the following sources:

- The Aruba Networks Web-site contains information on the full line of products from Aruba Networks:
<http://www.arubanetworks.com>
- The NIST Validated Modules Web-site contains contact information for answers to technical or sales-related questions for the product:
<http://csrc.nist.gov/groups/STM/cmvp/index.html>

This chapter introduces the Aruba 3000 and 6000/M3 Controllers with FIPS 140-2 Level 2 validation. It describes the purpose of the controller, its physical attributes, and its interfaces.

Overview

Aruba Networks has developed a purpose-built Wireless LAN voice and data switching solution designed to specifically address the needs of large-scale WiFi network deployments for Government agencies and global enterprises. The Aruba Controller solution provides advanced security and management of the corporate RF environment and enforces User security and service policies to both wired and wireless users.

The Aruba Wireless FIPS 140-2 Level 2 validated Controlling platform serves value-add high speed data and QoS assured voice services to thousands of mobile wireless users simultaneously from a single, cost effective, redundant and scalable solution that performs centralized functionality for:

- Uncompromised User security, authentication and encryption
- Stateful LAN-speed firewalling
- VPN termination
- Wireless intrusion detection, prevention and rogue containment
- RF Air monitoring
- Powerful packet processing switching
- Mobility management
- Advanced RF management
- Advanced User and network service / element management

The Aruba FIPS 140-2 Level 2 validated Controller solution is a highly available, modular and upgradeable switching platform which connects, controls, secures, and intelligently integrates wireless Access Points and Air Monitors into the wired LAN, serving as a gateway between a wireless network and the wired network. The wireless network traffic from the APs is securely tunneled over a L2/L3 network and is terminated centrally on the switch via 10/100/1000 Ethernet physical interfaces where it is authenticated, assigned the appropriate security policies and VLAN assignments and up-linked onto the wired network.

The Aruba Controller solution consists of the three major components:

- Aruba Controller. This is an enterprise-class switch into which multiple Access Points (APs) and Air Monitors (AMs) may be directly or in-directly (tunneled over a L2/L3 network) connected and controlled.
- Aruba Wireless Access Point. This is a next-generation wireless transceiver which functions as an AP or AM. Although third-party APs can be used with the Aruba WLAN system, the Aruba AP provides the most comprehensive features and simpler integration.
- Aruba ArubaOS Switch firmware. This firmware intelligently integrates the Controller and APs to provide load balancing, rate limiting, self-healing, authentication, mobility, security, firewalls, encryption, and centralization for monitoring and upgrades.

The Aruba switch configurations validated during the cryptographic module testing included:

- Aruba 3200 Revision B2
- Aruba 3400 Revision B2

- Aruba 3600 Revision B2
- There is one version of the M3mk1-S-F1 in this document: Revision B2. Revision B2 does not support AES-GCM (see [“Cryptographic Key Management” on page 21](#) for more information). Revision B2 is no longer sold.
- Aruba 6000-400 chassis (no more than four Aruba line cards, including the combinations among M3mk1-S-F1 [Revision B2], LC-2G-1, LC-2G24F-1, or LC-2G24FP-1, in a single hardware configuration). Please notice that the use of LC-2G-1, LC-2G24F-1 and LC-2G24FP-1 is optional, but at least one M3mk1-S-F1 is required in a single hardware configuration).
- The exact firmware version validated was ArubaOS_MMC_6.1.2.3-FIPS, ArubaOS_MMC_6.1.4.1-FIPS

Physical Description

Dimensions

The Aruba 6000-400 controller chassis has the following physical dimensions:

- 3 RU chassis is designed to fit in a standard 19" rack. A separate mounting kit is needed for a 23" rack.
- Size:
 - Width 17.4" (19" rack width)
 - Height 5.25" (3 RU)—3.5" for the card slots plus 1 RU for the power supply slots
 - Depth 14"
- Maximum weight: Up to 58 lbs (26.5 kg)

The Aruba 3200 Controller has the following physical dimensions:

- 1 RU chassis is designed to fit in a standard 19" rack with the included mounting kit. A separate mounting kit is needed for a 23" rack.
- Size:
 - Width 13.8"
 - Height 1.75" (1 RU)
 - Depth 11.7"
- Maximum weight: Up to 7.1 lbs (3.2 kg)

The Aruba 3400 and 3600 Controllers have the following physical dimensions:

- 1 RU chassis is designed to fit in a standard 19" rack with the included mounting kit. A separate mounting kit is needed for a 23" rack.
- Size:
 - Width 13.8"
 - Height 1.75" (1 RU)
 - Depth 11.7"
- Maximum weight: Up to 7.4 lbs (3.4 kg)

Cryptographic Module Boundaries

For FIPS 140-2 Level 2 validation, the Controller has been validated as a multi-chip standalone cryptographic module. The steel chassis physically encloses the complete set of hardware (including supervisor cards, line cards, the fan tray

and the power supplies utilized within Aruba 6000-400 controller) and firmware components and represents the cryptographic boundary of the switch. The cryptographic boundary is defined as encompassing the top, front, left, right, rear, and bottom surfaces of the chassis.

Chassis

The Aruba 6000-400 controller chassis is designed to be modular. All of the modular components, consisting of the switching supervisor and network line cards, the fan tray, and the power supplies, are accessible from the front of the chassis.

Figure 1 The Aruba 6000-400 controller chassis with M3 Mark I

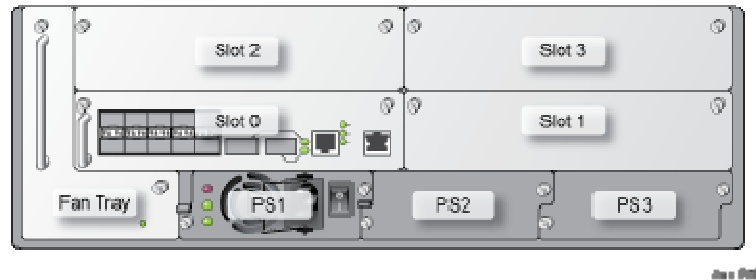


Figure 1 shows the front of the Aruba 6000 controller chassis, and illustrates the following:

- In each Aruba 6000-400-F1 or Aruba 6000-400-USF1 controller chassis:
 - One M3mk1-S-F1 Revision B2 card is required to be installed in slot 0.
 - Up to three Aruba line cards (the combination of LC-2G-1, LC-2G24F-1, LC-2G24FP-1, M3mk1-S-F1 Revision B2 card) can be installed in slots 1, 2 and 3 respectively

Table 2 below lists a detailed line cards configuration in a single Aruba 6000-400-F1 or Aruba 6000-400-USF1 controller chassis

Table 2 6000-400-F1 or 6000-400-USF1 Controller Chassis Configurations

| Slot 0 | Slot 1 | Slot 2 | Slot 3 |
|------------|------------|-------------|-------------|
| M3mk1-S-F1 | x | x | x |
| M3mk1-S-F1 | LC-2G-1 | x | x |
| M3mk1-S-F1 | LC-2G-1 | LC-2G-1 | x |
| M3mk1-S-F1 | LC-2G-1 | LC-2G-1 | LC-2G-1 |
| M3mk1-S-F1 | LC-2G-1 | LC-2G24F-1 | x |
| M3mk1-S-F1 | LC-2G-1 | LC-2G24F-1 | LC-2G24F-1 |
| M3mk1-S-F1 | LC-2G-1 | LC-2G24F-1 | LC-2G24FP-1 |
| M3mk1-S-F1 | LC-2G-1 | LC-2G24FP-1 | x |
| M3mk1-S-F1 | LC-2G-1 | LC-2G24FP-1 | LC-2G24FP-1 |
| M3mk1-S-F1 | LC-2G24F-1 | x | x |

Table 2 6000-400-F1 or 6000-400-USF1 Controller Chassis Configurations

| | | | |
|------------|-------------|-------------|-------------|
| M3mk1-S-F1 | LC-2G24F-1 | LC-2G24F-1 | x |
| M3mk1-S-F1 | LC-2G24F-1 | LC-2G24F-1 | LC-2G24F-1 |
| M3mk1-S-F1 | LC-2G24F-1 | LC-2G24F-1 | LC-2G24FP-1 |
| M3mk1-S-F1 | LC-2G24F-1 | LC-2G24FP-1 | LC-2G24FP-1 |
| M3mk1-S-F1 | LC-2G24FP-1 | x | x |
| M3mk1-S-F1 | LC-2G24FP-1 | LC-2G24FP-1 | x |
| M3mk1-S-F1 | LC-2G24FP-1 | LC-2G24FP-1 | LC-2G24FP-1 |
| M3mk1-S-F1 | M3mk1-S-F1 | x | x |
| M3mk1-S-F1 | M3mk1-S-F1 | LC-2G-1 | x |
| M3mk1-S-F1 | M3mk1-S-F1 | LC-2G-1 | LC-2G-1 |
| M3mk1-S-F1 | M3mk1-S-F1 | LC-2G-1 | LC-2G24F-1 |
| M3mk1-S-F1 | M3mk1-S-F1 | LC-2G-1 | LC-2G24FP-1 |
| M3mk1-S-F1 | M3mk1-S-F1 | LC-2G24F-1 | x |
| M3mk1-S-F1 | M3mk1-S-F1 | LC-2G24F-1 | LC-2G24F-1 |
| M3mk1-S-F1 | M3mk1-S-F1 | LC-2G24F-1 | LC-2G24FP-1 |
| M3mk1-S-F1 | M3mk1-S-F1 | LC-2G24FP-1 | x |
| M3mk1-S-F1 | M3mk1-S-F1 | LC-2G24FP-1 | LC-2G24FP-1 |
| M3mk1-S-F1 | M3mk1-S-F1 | M3mk1-S-F1 | x |
| M3mk1-S-F1 | M3mk1-S-F1 | M3mk1-S-F1 | LC-2G-1 |
| M3mk1-S-F1 | M3mk1-S-F1 | M3mk1-S-F1 | LC-2G24F-1 |
| M3mk1-S-F1 | M3mk1-S-F1 | M3mk1-S-F1 | LC-2G24FP-1 |
| M3mk1-S-F1 | M3mk1-S-F1 | M3mk1-S-F1 | M3mk1-S-F1 |

An "x" represents an empty slot.

- Status indicator LEDs indicate power state, status of the device, and link activity.
- Fan Tray is required for the Aruba 6000-400 controller. It can be replaced if needed and it is Crypto Officer's responsibility to replace and install the new Fan Tray. In addition, HW-FT is the part number for the fan tray used in the Aruba 6000-400-F1 and Aruba 6000-400-USF1 chassis.
- PS1, PS2, and PS3 are for Power Supply modules. The number of power supplies required for the system depends on the number of Line Cards installed, and whether to include redundancy for fault tolerance (please refer to the

Aruba 6000 Mobility Controller Installation Guide). It is Crypto Officer's responsibility to install the power supplies. The two available power supplies are:

- 200 W Power Supply (HW-PSU-200)
- 400 W Power Supply (HW-PSU-400)

When using more than one power supply, verify that they are all of the same type. Do not mix 200 W and 400 W power supplies in the same chassis.



HW-PSU-400 and HW-PSU-200 are the part numbers for the power supply used with the Aruba 6000-400-F1 or the Aruba 6000-400-USF1 chassis.

The Aruba 3000-series Controller chassis is a 1U not-modular chassis.

Figure 2 The Aruba 3000-series Controller Chassis

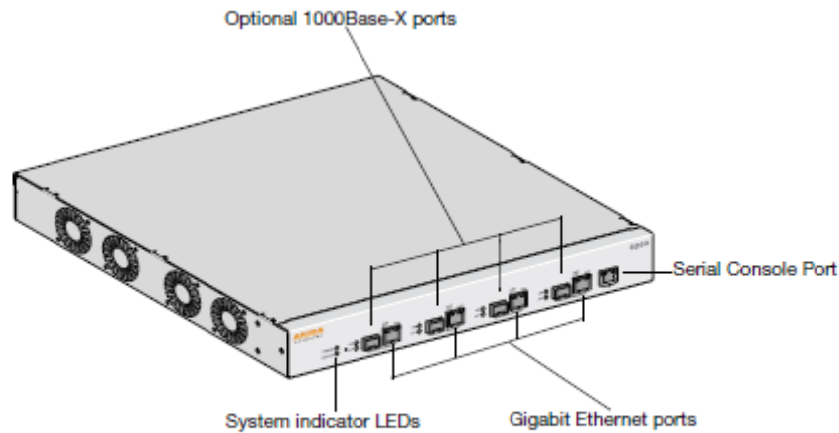


Figure 2 shows the front of the Aruba 3000-series Controller, and illustrates the following:

- System indicator LEDs indicate power state and status of the device.
- Four Gigabit Ethernet ports provide network connectivity.
- Optional 1000Base-X fiber optic ports provide network connectivity.
- Serial Console port is for connecting to a local management console.

Intended Level of Security

The Aruba 3000 and 6000/M3 Controllers and associated modules are intended to meet overall FIPS 140-2 Level 2 requirements as shown in Table 1.B

Table 3 *Intended Level of Security*

| Section | Section Title | Level |
|---------|---|-------|
| 1 | Cryptographic Module Specification | 2 |
| 2 | Cryptographic Module Ports and Interfaces | 2 |
| 3 | Roles, Services, and Authentication | 2 |
| 4 | Finite State Model | 2 |
| 5 | Physical Security | 2 |
| 6 | Operational Environment | N/A |
| 7 | Cryptographic Key Management | 2 |
| 8 | EMI/EMC | 2 |
| 9 | Self-tests | 2 |
| 10 | Design Assurance | 2 |
| 11 | Mitigation of Other Attacks | 2 |

Physical Security

The Aruba Controller is a scalable, multi-processor standalone network device and is enclosed in a robust steel housing. The switch enclosure is resistant to probing and is opaque within the visible spectrum. The enclosure of the switch has been designed to satisfy FIPS 140-2 Level 2 physical security requirements.

For the Aruba 6000-400 the left, top, right, and bottom surfaces are irremovable. The rear panel can be removed by unscrewing fifteen screws. The switch has a number of components at front side, including four slots for supervisor and line cards, one fan tray, and three power supplies. Each of the components is attached with two screws.

For the Aruba 3000-series the left, right, front, rear, and bottom surfaces are irremovable. The top panel can be removed by unscrewing two screws. A metallic opaque shield is installed at the factory during manufacturing and can not be removed by the User.

For physical security, the Aruba 6000-400 chassis requires Tamper-Evident Labels (TELs) to allow the detection of the opening of the chassis covers; the removal or replacement of any module or cover plate, and to block the Serial console port.

The Aruba 3000-series Controllers require Tamper-Evident Labels (TELs) to allow the detection of the opening of the chassis cover and to block the Serial console port.

To protect the Aruba 3000 and 6000/M3 Controllers from any tampering with the product, TELs should be applied by the Crypto Officer as covered under [“Tamper-Evident Labels” on page 33](#).

Operational Environment

The operational environment is non-modifiable. The control plane Operating System (OS) is Linux, a real-time, multi-threaded operating system that supports memory protection between processes. Access to the underlying Linux implementation is not provided directly. Only Aruba Networks provided interfaces are used, and the CLI is a restricted command set.

Logical Interfaces

All of these physical interfaces are separated into logical interfaces defined by FIPS 140-2, as described in the following table.

Table 4 FIPS 140-2 Logical Interfaces

| FIPS 140-2 Logical Interface | Module Physical Interface |
|------------------------------|--|
| Data Input Interface | 10/100 Mbps Ethernet port 10/100/1000 Mbps Ethernet ports |
| Data Output Interface | 10/100 Mbps Ethernet port 10/100/1000 Mbps Ethernet ports |

Table 4 FIPS 140-2 Logical Interfaces

| | |
|-------------------------|--|
| Control Input Interface | Power switch (Aruba 6000 only) Reset button (Aruba 6000 only) 10/100 Mbps Ethernet port 10/100/1000 Mbps Ethernet ports Serial console port (disabled) |
| Status Output Interface | 10/100 Mbps Ethernet port 10/100/1000 Mbps Ethernet ports LEDs Serial console port (disabled) |
| Power Interface | Power Supply POE (Aruba 6000 only) |

Data input and output, control input, status output, and power interfaces are defined as follows:

Data input and output are the packets that use the firewall, VPN, and routing functionality of the modules.

- Control input consists of manual control inputs for power and reset through the power and reset switch. It also consists of all of the data that is entered into the switch while using the management interfaces.
- Status output consists of the status indicators displayed through the LEDs, the status data that is output from the switch while using the management interfaces, and the log file.
- LEDs indicate the physical state of the module, such as power-up (or rebooting), utilization level, activation state (including fan, ports, and power). The log file records the results of self-tests, configuration errors, and monitoring data.
- A power supply is used to connect the electric power cable. Operating power is also provided (Aruba 6000 only) to a compatible Power Over Ethernet (POE) device when connected. The power is provided through the connected Ethernet cable.

The switch distinguishes between different forms of data, control, and status traffic over the network ports by analyzing the packets header information and contents.

Roles and Services

The Aruba Controller supports role-based authentication. There are two roles in the switch (as required by FIPS 140-2 Level 2) that operators may assume: a Crypto Officer role and a User role. The Administrator maps to the Crypto-Officer role and the client Users map to the User role.

Crypto Officer Role

The Crypto Officer role has the ability to configure, manage, and monitor the switch. Three management interfaces can be used for this purpose:

- CLI

The Crypto Officer can use the CLI to perform non-security-sensitive and security-sensitive monitoring and configuration. The CLI can be accessed remotely by using the SSHv2 secured management session over the Ethernet ports or locally over the serial port. In FIPS mode, the serial port is disabled.

- **Web Interface**

The Crypto Officer can use the Web Interface as an alternative to the CLI. The Web Interface provides a highly intuitive, graphical interface for a comprehensive set of switch management tools. The Web Interface can be accessed from a TLS-enabled Web browser using HTTPS (HTTP with Secure Socket Layer) on logical port 4343.

- **Bootrom Monitor Mode**

In Bootrom monitor mode, the Crypto Officer can reboot, update the Bootrom, issue file system-related commands, modify network parameters, and issue various show commands. The Crypto Officer can only enter this mode by pressing any key during the first four seconds of initialization. Bootrom Monitor Mode is disabled in FIPS mode.

The Crypto Officer can also use SNMPv1/2c/3 to remotely perform non-security-sensitive monitoring and use get and getnext commands. See the table below for descriptions of the services available to the Crypto Officer role.

Table 5 *Crypto-Officer Services*

| Service | Description | Input | Output | CSP Access |
|--------------------------------|--|---|--|---|
| SSH v2.0 | Provide authenticated and encrypted remote management sessions while using the CLI | SSH key agreement parameters, SSH inputs, and data | SSH outputs and data | Diffie-Hellman key pair (read/ write access), session key for SSH (read/write access), RNG keys (read access); Crypto Officer's password (read access) |
| IKEv1/IKEv2-IPSec | Provide authenticated and encrypted remote management sessions to access the CLI functionality | IKEv1/IKEv2 inputs and data; IPSec inputs, commands, and data | IKEv1/IKEv2 outputs, status, and data; IPSec outputs, status, and data | RSA or ECDSA key pair for IKEv1/IKEv2 (read access), Diffie-Hellman or Elliptic curve Diffie-Hellman key pair for IKEv1/IKEv2 (read/write access), pre- shared keys for IKEv1/IKEv2 (read access); Session keys for IPSec (read/write access) |
| Configuring Network Management | Create management Users and set their password and privilege level; configure the SNMP agent | Commands and configuration data | Status of commands and configuration data | Crypto Officer's password for CLI (read/write access) |

Table 5 *Crypto-Officer Services*

| | | | | |
|--------------------------------------|--|---------------------------------|---|---|
| Configuring the module Platform | Define the platform subsystem firmware of the module by entering Bootrom Monitor Mode, File System, fault report, message logging, and other platform related commands | Commands and configuration data | Status of commands and configuration data | None |
| Configuring Hardware Controllers | Define synchronization features for module | Commands and configuration data | Status of commands and configuration data | None |
| Configuring the Internet Protocol | Set IP functionality | Commands and configuration data | Status of commands and configuration data | None |
| Configuring Quality of Service (QoS) | Configure QOS values for module | Commands and configuration data | Status of commands and configuration data | None |
| Configuring the VPN | Configure Public Key Infrastructure (PKI); configure the Internet Key Exchange (IKEv1/IKEv2) Security Protocol; configure the IPSec protocol | Commands and configuration data | Status of commands and configuration data | RSA and ECDSA keys pair (read/write access), Pre-shared key (read/write access) |
| Configuring DHCP | Configure DHCP on module | Commands and configuration data | Status of commands and configuration data | None |
| Configuring Security | Define security features for module, including Access List, Authentication, Authorization and Accounting (AAA), and firewall functionality | Commands and configuration data | Status of commands and configuration data | AAA User password (read/write access), RADIUS password (read/ write access) |
| HTTPS over TLS | Secure browser connection over Transport Layer Security acting as a Crypto Officer service (web management interface) | TLS inputs, commands, and data | TLS outputs, status, and data | RSA key pair for TLS; TLS Session Key |

Table 5 *Crypto-Officer Services*

| | | | | |
|---|--|--|---|--|
| Status Function | Cryptographic officer may use CLI "show" commands or view WebUI via TLS to view the switch configuration, routing tables, and active sessions; view health, temperature, memory status, voltage, and packet statistics; review accounting logs, and view physical interface status | Commands and configuration data | Status of commands and configurations | None |
| IPSec tunnel establishment for RADIUS protection | Provided authenticated/encrypted channel to RADIUS server | IKEv1/IKEv2 inputs and data; IPSec inputs, commands, and data | IKEv1/IKEv2 outputs, status, and data; IPSec outputs, status, and data | Preshared key/RSA private key for IKEv1/IKEv2 (read access), Diffie-Hellman and Elliptic curve Diffie-Hellman key pair for IKEv1/IKEv2 (read/write access), Session keys for IPSec (read/write access) |
| Self-test | Run Power On Self-Tests and Conditional Tests | None | Error messages logged if a failure occurs | None |
| Configuring Bypass Operation | Configure bypass operation on the module | Commands and configuration data | Status of commands and configuration data | None |
| Updating Firmware | Updating firmware on the module | Commands and configuration data | Status of commands and configuration data | None |
| Configuring Online Certificate Status Protocol (OCSP) Responder | Configuring OCSP responder functionality | OCSP inputs, commands, and data | OCSP outputs, status, and data | RSA/ECDSA key pair for signing OCSP responses |
| Configuring Control Plane Security (CPSec) | Configuring Control Plane Security mode to protect communication with APs using IPSec and issue self signed certificates to APs | Commands and configuration data, IKEv1/IKEv2 inputs and data; IPSec inputs, commands, and data | Status of commands, IKEv1/IKEv2 outputs, status, and data; IPSec outputs, status, and data and configuration data, self signed certificates | RSA private key for IKEv1/IKEv2 and certificate signing (read access), Diffie-Hellman key pair for IKEv1/IKEv2 (read/write access), Session keys for IPSec (read/write access) |

User Role

The User role can access the switch's IPsec and IKEv1/IKEv2 services. Service descriptions and inputs/outputs are listed in the following table:

Table 6 *User Service*

| Service | Description | Input | Output | CSP Access |
|-------------------------|---|-----------------------------------|-----------------------------------|--|
| IKEv1/IKEv2-IPsec | Access the module's IPsec services in order to secure network traffic | IPsec inputs, commands, and data | IPsec outputs, status, and data | RSA and ECDSA key pair for IKEv1/IKEv2 (read access); Diffie-Hellman and Elliptic curve Diffie-Hellman key pair for IKEv1/IKEv2 (read and write access); pre-shared keys for IKEv1/IKEv2 (read access) |
| HTTPS over TLS | Access the module's TLS services in order to secure network traffic | TLS inputs, commands, and data | TLS outputs, status, and data | RSA key pair for TLS; TLS Session Key |
| EAP-TLS termination | Provide EAP-TLS termination | EAP-TLS inputs, commands and data | EAP-TLS outputs, status and data | EAP-TLS RSA private key (read) EAP-TLS ECDSA private key (read) |
| 802.11i Shared Key Mode | Access the module's 802.11i services in order to secure network traffic | 802.11i inputs, commands and data | 802.11i outputs, status and data | 802.11i Pre-Shared Key (read) 802.11i Session key (read/write) |
| 802.11i with EAP-TLS | Access the module's 802.11i services in order to secure network traffic | 802.11i inputs, commands and data | 802.11i outputs, status, and data | EAP-TLS RSA private key (read) EAP-TLS ECDSA private key (read) 802.11i Pair-Wise Master Key (read/write) 802.11i Session key (read/write) |

| | | | | |
|--------------------------------|--|--|--|-------------------------------------|
| Data link (Layer 2) Encryption | Access the module's Layer 2 encrypted tunnel services to secure network traffic Data link encryption inputs, commands and data | Data link encryption inputs, commands and data | Data link encryption, status, and data | Data link encryption AES key (read) |
|--------------------------------|--|--|--|-------------------------------------|

Authentication Mechanisms

The Aruba Controller supports role-based authentication. Role-based authentication is performed before the Crypto Officer enters privileged mode using admin password via Web Interface or SSH or by entering enable command and password in console. Role-based authentication is also performed for User authentication.

This includes password and RSA/ECDSA-based authentication mechanisms. The strength of each authentication mechanism is described below.

Table 7 Estimated Strength of Authentication Mechanisms

| Authentication Type | Role | Strength |
|---|----------------|--|
| Password-based authentication (CLI and Web Interface) | Crypto Officer | Passwords are required to be a minimum of six characters and a maximum of 32. Numeric, alphabetic (upper and lowercase), and keyboard and extended characters can be used, which gives a total of 95 characters to choose from. Therefore, the number of potential six-character passwords is 95^6 (735091890625). |
| RSA-based authentication (IKEv1/IKEv2) | User | RSA signing and verification is used to authenticate to the module during IKEv1/IKEv2. This mechanism is as strong as the RSA algorithm using a 1024 or 2048 bit key pair. |
| Pre-shared key-based authentication (IKEv1/IKEv2) | User | Pre-shared keys must be at least six characters long and up to 64 bytes long. Even if only uppercase letters were used without repetition for a six character pre-shared key, the probability of randomly guessing the correct sequence is one in 165,765,600. |
| Pre-shared key based authentication (802.11i) | User | 1024 and 2048 bit RSA keys correspond to effective strength of 2^{80} and 2^{112} respectively. |
| EAP-TLS authentication | User | 1024 and 2048 bit RSA keys correspond to effective strength of 2^{80} and 2^{112} respectively. |

| | | |
|--|------|---|
| ECDSA-based authentication (IKEv1/IKEv2) | User | ECDSA signing and verification is used to authenticate to the module during IKEv1/IKEv2. Both P-256 and P-384 keys are supported. ECDSA P-256 provides 128 bits of equivalent security, and P-384 provides 192 bits of equivalent security. |
|--|------|---|

Unauthenticated Services

The Aruba Controller can perform SNMP management, VLAN, bridging, firewall, routing, and forwarding functionality without authentication. These services do not involve any cryptographic processing.

Additional unauthenticated services include performance of the power-on self test and system status indication via LEDs.

Cryptographic Key Management

Implemented Algorithms

FIPS-approved cryptographic algorithms have been implemented in firmware and hardware.

The firmware supports the following cryptographic implementations.

ArubaOS OpenSSL Module implements the following FIPS-approved algorithms:

- [AES \(Cert. #1854\)](#)
- [Triple-DES \(Cert. #1201\)](#)
- [SHS \(Cert. #1631\)](#)
- [RNG \(Cert. #972\)](#)
- [RSA \(Cert. #937\)](#)
- [HMAC \(Cert. #1101\)](#)
- [ECDSA \(#258\)](#)

ArubaOS Crypto Module implementation supports the following FIPS Approved Algorithms:

- [AES \(Cert. #1850\)](#)
- [Triple-DES \(Cert. #1198\)](#)
- [SHS \(Cert. #1627\)](#)
- [RNG \(Cert. #969\)](#)
- [RSA \(Cert. #933\)](#)
- [HMAC \(Cert. #1098\)](#)
- [ECDSA \(Cert. #257\)](#)

ArubaOS UBOOT Bootloader implements the following FIPS-approved algorithms:

- [RSA \(Cert. #935\)](#)
- [SHS \(Cert. #1629\)](#)

The hardware supports the following cryptographic implementations.

Hardware encryption acceleration is provided for bulk cryptographic operations for the following FIPS approved algorithms:

- AES (Cert. #465) - [CBC: 128,192,256 bits - CCM](#)
- Triple-DES (Cert. #482) - [CBC: 192 bits \(168 used\)/1,2,3 keys keying option](#)
- SHS (Cert. #768) - [SHA-1, SHA-256 - BYTE oriented](#)
- HMAC (Cert.#416) - [HMAC-SHA-1, HMAC-SHA-256](#)

Non-FIPS Approved Algorithms

The cryptographic module implements the following non-approved algorithms that are not permitted for use in the FIPS 140-2 mode of operations:

- DES
- HMAC-MD5
- MD5
- RC4
- NDRNG

In addition, within the FIPS Approved mode of operation, the module supports the following allowed key establishment schemes:

- Diffie-Hellman (key agreement; key establishment methodology provides 80 bits of encryption strength; non-compliant less than 80-bits of encryption strength)
- EC Diffie-Hellman (key agreement; key establishment methodology provides between 128 and 192 bits of encryption strength)
- RSA (key wrapping; key establishment methodology provides 80 bits of encryption strength)

Critical Security Parameters

The following are the Critical Security Parameters (CSPs) used in the switch.

Table 8 CSPs Used in Aruba Controllers

| CSPs | CSPs type | Generation | Storage and Zeroization | Use |
|----------------------------|-----------------------------|---------------|--|---|
| Key Encryption Key (KEK) | Triple-DES 168-bit key | Hard Coded | Stored in Flash and zeroized by using the CLI command wipe out flash | Encrypts IKEv1/IKEv2 Pre-shared key, RADIUS server shared secret, RSA private key, ECDSA private key, 802.11i pre-shared key and Passwords. |
| IKEv1/IKEv2 Pre-shared key | 64 character pre-shared key | CO configured | Stored encrypted in Flash with the KEK. Zeroized by changing (updating) the pre-shared key through the User interface. | User and module authentication during IKEv1, IKEv2 |

Table 8 CSPs Used in Aruba Controllers

| | | | | |
|--|---|--|--|---|
| RADIUS server shared secret | 6-128 character shared secret | CO configured | Stored encrypted in Flash with the KEK. Zeroized by changing (updating) the pre-shared key through the User interface. | Module and RADIUS server authentication |
| Enable secret | 6-64 character password | CO configured | Store in ciphertext in flash. Zeroized by changing (updating) through the user interface. | Administrator authentication |
| IPSec session encryption keys | 168-bit Triple-DES or 128/192/256-bit AES-CBC or 128/256-bit AES-GCM keys | Established during the Diffie-Hellman key agreement | Stored in plaintext in volatile memory. Zeroized when the session is closed. | Secure IPSec traffic |
| IPSec session authentication keys | HMAC SHA-1 key | Established during the Diffie-Hellman key agreement | Stored in plaintext in volatile memory. Zeroized when the session is closed. | User authentication |
| SSH Diffie-Hellman shared secret | 128-octet intermediate value used for key derivation | Established during the SSH Diffie-Hellman key agreement | Stored in plain text in volatile memory, Zeroized when session is closed. | Key agreement in SSH |
| IKEv1/IKEv2 Diffie-Hellman private key | 768/1024-bit (MODP group) or 256/384-bit (Elliptic curve group) Diffie-Hellman private key. Note: Key size 768 bits is not allowed in FIPS mode. | Generated internally during IKEv1/IKEv2 negotiations | Stored in the volatile memory. Zeroized after the session is closed. | Used in establishing the session key for an IPSec session |
| IKEv1/IKEv2 Diffie-Hellman shared secret | 128 octet or 32/48 octet (Elliptic curve Diffie Hellman) intermediate value used for cryptographic key derivation | Established during the Diffie-Hellman Key Agreement | Stored in plaintext in volatile memory. Zeroized when session is closed. | Key agreement in IKEv1/IKEv2 |
| IKEv1/IKEv2 session authentication key | 160-bit HMAC-SHA1 or 256 byte HMAC-SHA-256-128 or 384 byte HMAC-SHA-384-192 key | Established as a result of Diffie-Hellman key agreement. | Stored in plaintext in volatile memory. Zeroized when session is closed. | IKEv1/IKEv2 payload integrity verification |

Table 8 CSPs Used in Aruba Controllers

| | | | | |
|------------------------------------|---|--|--|--|
| IKEv1/IKEv2 session encryption key | 168-bit Triple-DES or 128/192/256-bit AES-CBC key | Established as a result of Diffie-Hellman key agreement. | Stored in plaintext in volatile memory. Zeroized when session is closed. | IKEv1/IKEv2 payload encryption |
| SSH session keys | 168-bit Triple-DES or 128/192/256-bit AES keys | Established during the SSH key exchange using the Diffie-Hellman key agreement | Stored in plaintext in volatile memory. Zeroized when the session is closed. | Secure SSH traffic |
| SSH session authentication key | 160-bit HMAC-SHA-1 | Established during the SSH key exchange using the Diffie-Hellman key agreement | Stored in plaintext in volatile memory. Zeroized when the session is closed. | Secure SSH traffic |
| SSH Diffie-Hellman Private Key | 768/1024-bit Diffie-Hellman private key. Note: Key size 768 bits is not allowed in FIPS mode. | Generated internally during the SSH session negotiations | Stored in the volatile memory. Zeroized after the session is closed. | Used in establishing the session key for an SSH session. |
| TLS pre-master secret | 48 byte secret | Externally generated | Stored in plaintext in volatile memory. Zeroized when the session is closed. | Key agreement during TLS |
| TLS session encryption key | AES 128, 192, 256 | Generated in the module | Stored in plaintext in volatile memory. Zeroized when the session is closed. | Key agreement during 802.1x connection |
| TLS session authentication key | 160-bit HMAC-SHA1 key | Generated in the module | Stored in plaintext in volatile memory. Zeroized when the session is closed. | Key agreement during 802.1x connection |
| RSA Private Key | RSA 1024/2048 bit key | Generated in the module | Stored in flash memory encrypted with KEK. Zeroized by the CO command write erase all . | Used by TLS and EAP-TLS/PEAP protocols during the handshake, used for signing OCSP responses, and used by IKEv1/IKEv2 for device authentication and for signing certificates |

Table 8 CSPs Used in Aruba Controllers

| | | | | |
|------------------------------------|---|--|--|---|
| ECDSA Private Key | ECDSA suite B P-256 and P-384 curves | Generated in the module | Stored in flash memory encrypted with KEK. Zeroized by the CO command write erase all . | Used by TLS and EAP-TLS/PEAP protocols during the handshake. |
| skeyid | Intermediate 160-bit/256-byte/384-byte value used in key derivation | Established during the Diffie-Hellman Key Agreement | Stored in plaintext in volatile memory. Zeroized when session is closed. | Key agreement in IKEv1/IKEv2 |
| skeyid_d | Intermediate 160-bit/256-byte/384-byte value used in key derivation | Established during the Diffie-Hellman Key Agreement | Stored in plaintext in volatile memory. Zeroized when session is closed. | Key agreement in IKEv1/IKEv2 |
| 802.11i Pre-Shared Key (PSK) | 802.11i pre-shared secret key (256-bit) | CO configured | Stored in flash memory encrypted with KEK. Zeroized by the CO command write erase all . | Used by the 802.11i protocol |
| 802.11i Pair-Wise Master key (PMK) | 802.11i secret key (256-bit) | Derived during the EAP-TLS/PEAP handshake | Stored in the volatile memory. Zeroized on reboot. | Used by the 802.11i protocol |
| 802.11i session key | AES-CCM key (128 bit), AES-GCM key (128/256-bit) | Derived from 802.11 PMK | Stored in plaintext in volatile memory. Zeroized on reboot. | Used for 802.11i encryption |
| Data link (Layer 2) encryption key | AES key (256 bit) | Derived during the EAP-TLS handshake | Stored in plaintext in volatile memory. Zeroized on reboot. | Used to encrypt tunneled Layer 2 frames |
| Data link (Layer 2) integrity key | HMAC-SHA1 key (160-bit) | Derived during EAP-TLS handshake storage and zeroization: Stored in plaintext in volatile memory | Stored in plaintext in volatile memory. Zeroized on reboot. | Used to integrity-protect tunneled Layer 2 frames |
| Passwords | 6-character password | CO configured | Stored encrypted in Flash with KEK. Zeroized by either deleting the password configuration file or by overwriting the password with a new one. | Authentication for accessing the management interfaces, RADIUS authentication |

Table 8 CSPs Used in Aruba Controllers

| | | | | |
|---|--|---|--|---|
| ArubaOS OpenSSL RNG Seed for FIPS compliant ANSI X9.31, Appendix A2.4 using AES-128 key algorithm | Seed (16 bytes) | Derived using NON-FIPS approved HW RNG (/dev/urandom) | Stored in plaintext in volatile memory only. Zeroized on reboot. | Seed ANSI X9.31 RNG |
| ArubaOS OpenSSL RNG Seed key for FIPS compliant ANSI X9.31, Appendix A2.4 using AES-128 key algorithm | Seed key (16 bytes, AES-128 key algorithm) | Derived using NON-FIPS approved HW RNG (/dev/urandom) | Stored in plaintext in volatile memory only. Zeroized on reboot. | Seed ANSI X9.31 RNG |
| ArubaOS cryptographic Module RNG seed for FIPS compliant 186-2 General purpose (x-change Notice); SHA-1 RNG | Seed (64 bytes) | Derived using NON-FIPS approved HW RNG (/dev/urandom) | Stored in plaintext in volatile memory. Zeroized on reboot. | Seed 186-2 General purpose (x-change Notice); SHA-1 RNG |
| ArubaOS cryptographic Module RNG seed key for FIPS compliant 186-2 General purpose (x-change Notice); SHA-1 RNG | Seed key (64 bytes) | Derived using NON-FIPS approved HW RNG (/dev/urandom) | Stored in plaintext in volatile memory. Zeroized on reboot. | Seed 186-2 General purpose (x-change Notice); SHA-1 RNG |

Self-Tests

The Aruba Controller performs both power-up and conditional self-tests. In the event any self-test fails, the switch will enter an error state, log the error, and reboot automatically.

The following self-tests are performed:

ArubaOS OpenSSL Module:

- AES KAT
- Triple-DES KAT
- RNG KAT
- RSA KAT
- ECDSA (sign/verify)
- SHA (SHA1, SHA256 and SHA384) KAT
- HMAC (HMAC-SHA1, HMAC-SHA256 and HMAC-SHA384) KAT

ArubaOS Cryptographic Module

- AES KAT
- Triple-DES KAT
- SHA (SHA1, SHA256, SHA384 and SHA512) KAT
- HMAC (HMAC-SHA1, HMAC-SHA256, HMAC-SHA384 and HMAC-SHA512) KAT
- RSA (sign/verify)
- ECDSA (sign/verify)
- FIPS 186-2 RNG KAT

ArubaOS Uboot BootLoader Module

Firmware Integrity Test: RSA PKCS#1 v1.5 (2048 bits) signature verification with SHA-1

Aruba Hardware Known Answer Tests Revision B2:

- AES KAT
- AES-CCM KAT
- Triple DES KAT
- HMAC (HMAC-SHA1, HMAC-SHA256) KAT

Following Conditional Self-tests are performed in the switch:

ArubaOS OpenSSL Module

- Bypass Test (Wired Bypass Test and Wireless Bypass Test)
- CRNG Test on Approved RNG
- ECDSA Pairwise Consistency Test
- RSA Pairwise Consistency Test
- Firmware Load Test - RSA PKCS#1 v1.5 (2048 bits) signature verification

Aruba OS Crypto Module

- CRNG Test on Approved RNG
- ECDSA Pairwise Consistency Test
- RSA Pairwise Consistency Test

Conditional Tests on Hardware:

- CRNG Test on non-Approved RNGs

Self-test results are logged in a log file. Upon successful completion of the power-up self tests, the module logs a KATS: passed message into a log file. Confirm the file update by checking the associated time of the file.

In the event of a hardware KATs failure, the log file records one of the following messages depending on the algorithm being validated:

- AES256 HMAC-SHA1 hash failed
- AES256 Encrypt failed
- AES256 Decrypt Failed
- 3DES HMAC-SHA1 hash failed
- 3DES Encrypt failed
- 3DES Decrypt Failed
- DES HMAC-SHA1 hash failed
- DES Encrypt failed
- DES Decrypt Failed
- HW KAT test failed for AESCCM CTR. Rebooting

- AESCCM Encrypt Failed

This text is followed by this message:

The POST Test failed!!!!

Rebooting...

Alternating Bypass State

The controller implements an alternating bypass state when:

- a port is configured in trusted mode to provide unauthenticated services
- a configuration provides wireless access without encryption

The alternating bypass status can be identified by retrieving the port configuration or the wireless network configuration.

Mitigation of Other Attacks

ArubaOS includes two modules that provide protection from attacks. These are:

- XSec
- Wireless Intrusion Protection

XSec

xSec is a highly secure data link layer (Layer 2) protocol that provides a unified framework for securing all wired and wireless connections using strong encryption and authentication. xSec provides greater security than Layer 3 encryption technologies through the use of FIPS-validated encryption algorithms (AES-CBC-256 with HMAC-SHA1) to secure Layer 2 traffic, as well as the encryption of Layer 2 header information including MAC addresses. xSec was jointly developed by Aruba Networks and Funk Software.

Many government agencies and commercial entities that transmit highly sensitive information over wireless networks mandate that strong Layer 2 encryption technologies be deployed to ensure absolute data privacy. U.S. DoD Directive 8100.2 requires that all data transmitted using commercial wireless devices be encrypted at Layer 2 or Layer 3. The U.S. Navy and Army are requiring Layer 2 encryption, and cryptographic engines used for all sensitive government communications must be validated as meeting FIPS 140-2 requirements.

xSec has been designed to address this requirement and to provide a number of additional benefits.

Wireless Intrusion Detection

Aruba's Wireless Intrusion Protection (WIP) module eliminates the need for a separate system of RF sensors and security appliances. The WIP module provides extraordinary capabilities to Aruba's enterprise mobility system, giving administrators visibility into the network, along with the power to thwart malicious wireless attacks, impersonations and unauthorized intrusions.

Wireless intrusion detection is only the first step in securing the corporate environment from unwanted wireless access. Without adequate measures to quickly shut down intrusions, detection is almost worthless. Without accurate classification of APs and stations (e.g., valid, rogue, or neighbor), providing an automated response to possible intrusion is impossible.

Aruba access points constantly scan all channels of the RF spectrum, capturing all 802.11 traffic and locally examining the captured data. Only policy violations are sent to the central controller to ensure

minimal impact on wired network performance. While scanning the environment, the Aruba system learns about all wireless APs and stations and classifies these devices based on traffic flows seen on the wire and in the air. This traffic is collected and correlated on the controller.

Aruba's WIP module provides both detection and prevention capabilities. Users and devices are detected and classified so administrators can react to both unintentional and malicious WLAN access. No other system on the market provides such capabilities.

Unique Station and User Classification

Aruba's patent-pending classification system automatically identifies and classifies all APs and stations connected to the network. The system works by comparing traffic seen in the air with traffic seen on the wire. When a match is found, it is known with certainty that the device belongs to the local network rather than a neighboring network. This avoids false alarms for the administrator, because only true rogue devices are classified as such.

Detecting and Disabling Rogue APs

Aruba's classification algorithms allow the system to accurately determine who is a threat and who is not. Once classified as rogue, these APs can be automatically disabled. Administrators are also notified of the presence of rogue devices, along with their precise physical location on a floor plan, so that they may be removed from the network.

Denial of Service and Impersonation Protection

Wireless networks, by their nature, make an attractive target for denial of service attacks. Such attacks include software that floods the network with association requests, attacks that make a laptop look like thousands of APs, and deauthentication floods. Aruba controllers equipped with the Aruba WIP module maintain signatures of many different wireless attacks and are able to block them so service is not disrupted.

Advanced Denial of Service (DoS) protection keeps enterprises safe against a variety of wireless attacks, including association and de-authentication floods, honeypots and AP and station impersonations. Based on location signatures and client classification, Aruba access points will drop illegal requests and generate alerts to notify administrators of the attack.

Man-in-the-Middle Protection

One of the common attacks possible in wireless networks is the "man-in-the-middle" attack. During a man-in-the-middle attack, a hacker masquerades as a legitimate AP. Then, acting as a relay point, this man-in-the-middle fools users and other APs into sending data through the unauthorized device. An attacker can then modify or corrupt data or conduct password-cracking routines.

Aruba access points monitor the air to detect other wireless stations masquerading as valid APs. When such masquerading is detected, appropriate defense mechanisms are put into place. Aruba controllers also track unique "signatures" for each wireless client in the network. If a new station is introduced claiming to be a particular client, but without the proper signature, a station impersonation attack is detected.

Policy Definition and Enforcement

Aruba WIP provides a number of policies that can be configured to take automatic action when a policy is violated. Examples of wireless policies include weak WEP implementation detection, AP misconfiguration

protection, ad-hoc network detection and protection, unauthorized NIC type detection, wireless bridge detection and more.

Using Wireless to Protect your Wired Network

Even if wireless LANs are not sanctioned at this time, no security conscious company can afford to do nothing. Aruba's WIP will keep wireless traffic from working its way into the wired network through rogue APs unknowingly attached to a network port. With Aruba's mobility system equipped with WIP, the enterprise network is protected against wireless security holes. And when the enterprise is ready to deploy wireless LANs, the Aruba system can be easily reconfigured to provide a scalable and secure wireless LAN infrastructure.

Using Wireless to Protect your Existing Wireless Network

Aruba's mobility system with WIP delivers the detection and protection necessary to keep your existing wireless network safe from undesirable wireless access. ArubaOS WIP complements and enhances any existing WLAN deployment, including Cisco deployments, by providing advanced RF security and control features not found in first-generation wireless products.

This chapter covers the physical installation of the Aruba 3000 and 6000/M3 Controllers with FIPS 140-2 Level 2 validation. The Crypto Officer is responsible for ensuring that the following procedures are used to place the switch in a FIPS-approved mode of operation.

This chapter covers the following installation topics:

- Precautions to be observed during installation
- Requirements for the switch components and rack mounting gear
- Selecting a proper environment for the switch
- Mounting the switch in a rack
- Connecting power to the switch

Pre-Installation Checklist

You will need the following during installation:

- Aruba 3000 and 6000/M3 Controller components.
- Aruba 3000 and 6000/M3 rack mounting kit.
- Phillips or cross-head screwdriver.
- 19-inch equipment rack, or equivalent.
- 3U rack space for the Aruba 6000-400 and 1U rack space for the Aruba 3000-Series with 10 cm (4 inches) clearance to the left, right, front, and rear of the rack.
- Another person to help position the switch.
- Aruba power cord for each power supply, rated to at least 10 A with IEC320 connector.
- Adequate power supplies and electrical power.
- Cool, non-condensing air 0 to 40 °C (32 to 104 °F). May require air conditioning.
- Management Station (PC) with 10/100 Mbps Ethernet port and SSH software.
- A 4- or 8-conductor Category 5 UTP Ethernet cable.

Precautions

- Installation should be performed only by a trained technician.
- Dangerous voltage in excess of 240 VAC is always present while the Aruba power supply is plugged into an electrical outlet. Remove all rings, jewelry, and other potentially conductive material before working with this product.
- Never insert foreign objects into the chassis, the power supply, or any other component, even when the power supplies have been turned off, unplugged, or removed.
- Main power is fully disconnected from the switch only by unplugging all power cords from their power outlets. For safety reasons, make sure the power outlets and plugs are within easy reach of the operator.
- Do not handle electrical cables that are not insulated. This includes any network cables.
- Keep water and other fluids away from the product.
- Comply with electrical grounding standards during all phases of installation and operation of the product. Do not allow the switch chassis, network ports, power supplies, or mounting brackets to contact any device, cable, object, or person attached to a different electrical ground. Also, never connect the device to external storm grounding sources.
- Installation or removal of the chassis or any module must be performed in a static-free environment. The proper use of anti-static body straps and mats is strongly recommended.
- Keep modules in anti-static packaging when not installed in the chassis.
- Do not ship or store this product near strong electromagnetic, electrostatic, magnetic or radioactive fields.
- Do not disassemble chassis or modules. They have no internal user-serviceable parts. When service or repair is needed, contact Aruba Networks.

Product Examination

The units are shipped to the Crypto Officer in factory-sealed boxes using trusted commercial carrier shipping companies. The Crypto Officer should examine the carton for evidence of tampering. Tamper-evidence includes tears, scratches, and other irregularities in the packaging.

Package Contents

The product carton should include the following:

- Aruba 3000 and 6000/M3 Controller
- Rack mounting kit
- Aruba User Documentation CD
- Tamper-Evident Labels

Minimum Configuration for the Aruba 6000-400

The Aruba 6000-400 controller chassis must include the following basic components:

- One modular switch chassis
- One fan tray
- One Aruba M3mk1-S-F1 card in slot 0
- Power Supply



The number and type of power supplies required depends on the number of line cards installed in the chassis (refer to the *Aruba 6000 Mobility Controller Installation Guide*). It is the Crypto Office's responsibility to install all required power supplies during module setup phase.

The switch is shipped with all required modules installed.



The Aruba 3000 series do not have minimum configurations, as they are fixed configuration chassis.

Tamper-Evident Labels

After testing, the Crypto Officer must apply Tamper-Evident Labels (TEs) to the switch. When applied properly, the TEs allow the Crypto Officer to detect the opening of the chassis cover, the removal or replacement of modules or cover plates, or physical access to restricted ports. Vendor provides **FIPS 140** designated TEs which have met the physical security testing requirements for tamper evident labels under the FIPS 140-2 Standard. TEs are not endorsed by the Cryptographic Module Validation Program (CMVP).



The tamper-evident labels shall be installed for the module to operate in a FIPS Approved mode of operation.



Aruba Provides double the required amount of TELs. If a customer requires replacement TELs, please call customer support and Aruba will provide the TELs (Part # 4010061-01).



The Crypto officer shall be responsible for keeping the extra TELs at a safe location and managing the use of the TELs.

Reading TELs

Once applied, the TELs included with the switch cannot be surreptitiously broken, removed, or reapplied without an obvious change in appearance:

Figure 3 *Tamper-Evident Labels*




Each TELs also has a unique serial number to prevent replacement with similar labels.

Required TEL Locations

The Aruba 6000-400 controller chassis requires a minimum of 11 TELs to be applied as follows:

Figure 4 *Required TELs for the Aruba 6000 Controller Chassis*

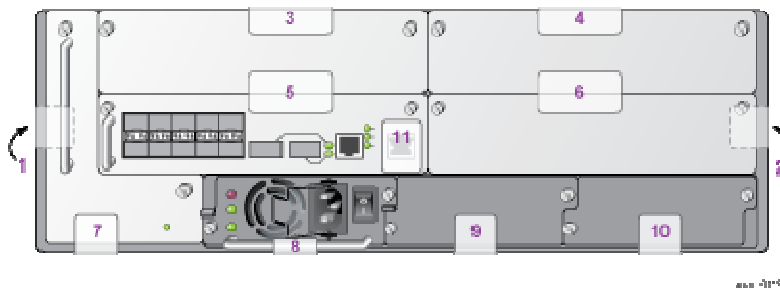

To Detect Opening the Chassis Cover

1. Spanning the left side and rear of the chassis
2. Spanning the right side and rear of the chassis

To Detect the Removal of Any Module or Cover Plate


3. Spanning the Slot 2 faceplate or blank and the top of the chassis
4. Spanning the Slot 3 faceplate or blank and the top of the chassis
5. Spanning the Slot 0 faceplate or blank and the Slot 2 faceplate or blank
6. Spanning the Slot 1 faceplate or blank and the Slot 3 faceplate or blank
7. Spanning the fan tray faceplate and the bottom of the chassis
8. Spanning the PS1 handle (or blank faceplate) and the bottom of the chassis
9. Spanning the PS2 handle (or blank faceplate) and the bottom of the chassis
10. Spanning the PS3 handle (or blank faceplate) and the bottom of the chassis

To Detect Access to Restricted Ports

11. Spanning the Serial port on the M3

The Aruba 3000 series Controller require a minimum of 3 TELs to be applied as follows:

Figure 5 Required TELs for the Aruba 3000-series Controller

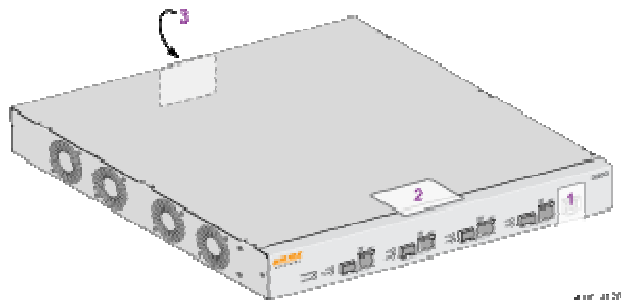

To Detect Access to Restricted Port

1. Spanning the Serial port

To Detect Opening the Chassis Cover

2. Spanning the top of the faceplate and top of the chassis
3. Spanning the back and top of the chassis

Applying TELs

The Crypto Officer should employ TELs as follows:

- Before applying a TEL, make sure the target surfaces are clean and dry.
- Do not cut, trim, punch, or otherwise alter the TEL.
- Apply the wholly intact TEL firmly and completely to the target surfaces.
- Ensure that TEL placement is not defeated by simultaneous removal of multiple modules.
- Allow 24 hours for the TEL adhesive seal to completely cure.
- Record the position and serial number of each applied TEL in a security log.

Once the TELs are applied, the Crypto Officer (CO) should perform initial setup and configuration as described in the next chapter.

The Aruba 3000 and 6000/M3 Controllers meet FIPS 140-2 Level 2 requirements. The information below describes how to keep the switch in FIPS-approved mode of operation. The Crypto Officer must ensure that the switch is kept in a FIPS-approved mode of operation.

Crypto Officer Management

The Crypto Officer must ensure that the switch is always operating in a FIPS-approved mode of operation. This can be achieved by ensuring the following:

- FIPS mode must be enabled on the switch before Users are permitted to use the switch (see [“Enabling FIPS Mode” on page 37](#))
- The admin role must be root.
- Passwords must be at least six characters long.
- VPN services can only be provided by IPsec or L2TP over IPsec.
- Access to the switch Web Interface is permitted only using HTTPS over a TLS tunnel. Basic HTTP and HTTPS over SSL are not permitted.
- Only SNMP read-only may be enabled.
- Only FIPS-approved algorithms can be used for cryptographic services (such as HTTPS, L2, AES-CBC, SSH, and IKEv1/IKEv2-IPSec), which include AES, Triple-DES, SHA-1, HMAC SHA-1, and RSA signature and verification.
- TFTP can only be used to load backup and restore files. These files are: Configuration files (system setup configuration), the WMS database (radio network configuration), and log files. (FTP and TFTP over IPsec can be used to transfer configuration files.)
- The switch logs must be monitored. If a strange activity is found, the Crypto Officer should take the switch off line and investigate.
- The Tamper-Evident Labels (TEs) must be regularly examined for signs of tampering.
- When installing expansion or replacement modules for the Aruba 6000-400, use only FIPS-approved modules, replace TEs affected by the change, and record the reason for the change, along with the new TE locations and serial numbers, in the security log.
- The Crypto Officer shall not configure the Diffie-Hellman algorithm with 768-bits (Group 1) in FIPS mode for IKEv1/IKEv2-IPSec and SSH.

User Guidance

The User accesses the switch VPN functionality as an IPsec client. The user can also access the switch 802.11i functionality as an 802.11 client. Although outside the boundary of the switch, the User should be directed to be careful not to provide authentication information and session keys to others parties.

The Aruba 3000 and 6000/M3 Controllers meet FIPS 140-2 Level 2 requirements. The sections below describe how to place and keep the switch in FIPS-approved mode of operation. The Crypto Officer (CO) must ensure that the switch is kept in a FIPS-approved mode of operation.

The switch can operate in two modes: the FIPS-approved mode, and the standard non-FIPS mode. By default, the switch operates in non-FIPS mode.

Setting Up Your Controller

To set up your controller:

1. Make sure that the controller is not connected to any device on your network.
2. Boot up the controller.
3. Connect your PC or workstation to a line port on the controller.

For further details, see the *ArubaOS 6.1 Quick Start Guide*.

Enabling FIPS Mode

For FIPS compliance, users cannot be allowed to access the switch until the CO changes the mode of operation to FIPS mode. There are two ways to enable FIPS mode:

- Use the WebUI
- Use the Setup Wizard

Enabling FIPS with the Setup Wizard

The Setup Wizard allows you to configure access to the controller, install software licenses, and configure wireless local area networks (WLANs) for internal or guest users.

The Setup Wizard is available the first time you connect to and log into the controller or whenever the controller is reset to its factory default configuration. After you complete the Setup Wizard, the controller reboots using the new configuration information you entered.

For details on running the Setup Wizard, see the *ArubaOS 6.1 Quick Start Guide*.

Enabling FIPS with the WebUI

The default IP address of the controller is 172.16.0.254. When you connect a PC or workstation to a line port on the controller, you can connect to this IP address through a Web browser. The system must be configured to either obtain its IP address via DHCP or have a static IP address on the 172.16.0.0/24 subnetwork.

To log in with the WebUI:

1. Open a Web browser and connect to <http://172.16.0.254>.
2. Log in.
3. Go to the **Configuration > Network > Controller > System Settings** page (the default page when you click the **Configuration** tab).
4. Click the **FIPS Mode for Controller Enable** checkbox.

If you need to enable FIPS mode on a controller that is no longer in the factory default configuration, you can either:

- Log in through the WebUI as described previously
- Enable FIPS on the **Configuration > Wizards > Controller Wizard** page

- 'FIPS Enable' is shown on SSH Command Line Interface (CLI) after issuing the command `show fips`.

Disallowed FIPS Mode Configurations

When you enable FIPS mode, the following configuration options are disallowed:

- All WEP features
- WPA
- TKIP mixed mode
- Any combination of DES, MD5, and PPTP