


Figure R 5

THORAX IMPACT TEST SET-UP SPECIFICATIONS

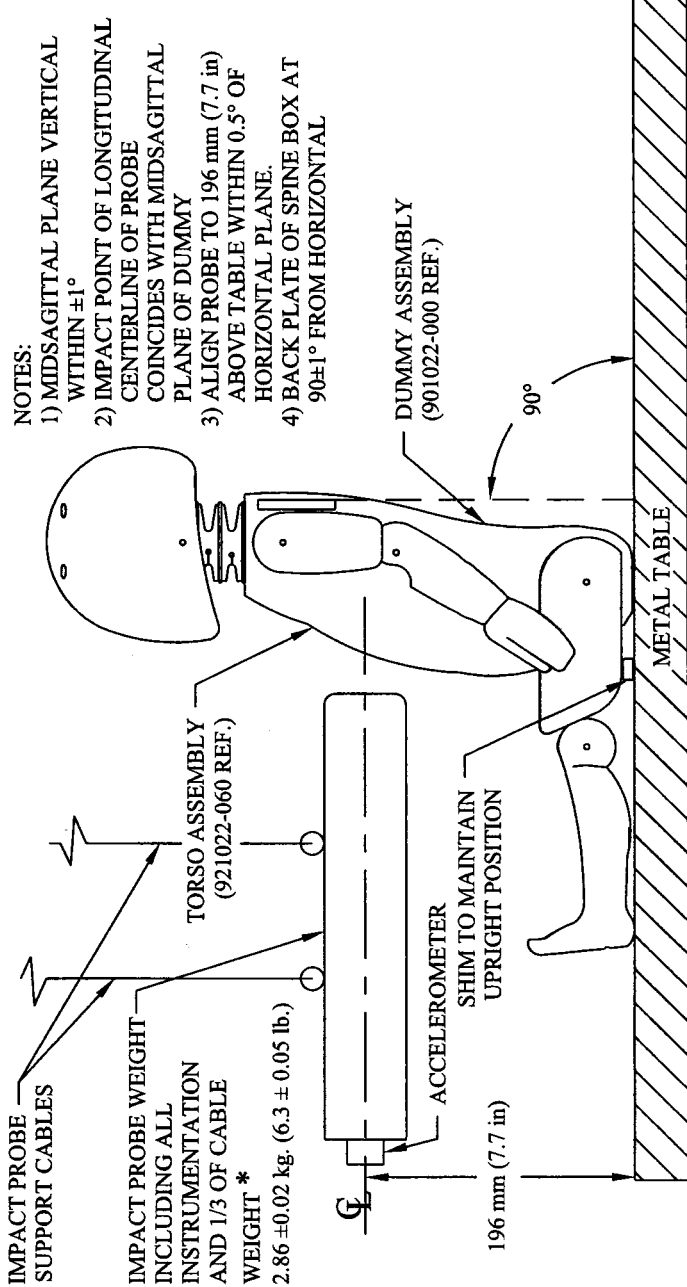

NOTES:

- 1) MIDSAGITTAL PLANE VERTICAL WITHIN ±1°
- 2) IMPACT POINT OF LONGITUDINAL CENTERLINE OF PROBE COINCIDES WITH MIDSAGITTAL PLANE OF DUMMY
- 3) ALIGN PROBE TO 196 mm (7.7 in) ABOVE TABLE WITHIN 0.5° OF HORIZONTAL PLANE.
- 4) BACK PLATE OF SPINE BOX AT 90±1° FROM HORIZONTAL

\* 1/3 OF CABLE WEIGHT NOT TO EXCEED 5% OF THE TOTAL IMPACT PROBE WEIGHT.