

September 2003

# Environmental Technology Verification Report

ENVIMETRICS  
ARGUS-HG 1000 MERCURY  
CONTINUOUS EMISSION MONITOR

Prepared by  
Battelle



Under a cooperative agreement with



**ETV ✓ ETV ✓ ETV ✓**

# **Environmental Technology Verification Report**

ETV Advanced Monitoring Systems Center

## **Envimetrics Argus-Hg 1000 Mercury Continuous Emission Monitor**

by  
Thomas Kelly  
Zachary Willenberg  
Karen Riggs

Battelle  
Columbus, Ohio 43201

and  
(under the support of the U.S. Department of Energy)

James Dunn  
Shaw Environmental, Inc.  
Oak Ridge, Tennessee  
Kristopher Kinder  
Shaw Environmental, Inc.  
Knoxville, Tennessee  
James Calcagno  
University of Tennessee  
Knoxville, Tennessee

## **Notice**

The U.S. Environmental Protection Agency (EPA), through its Office of Research and Development, has financially supported and collaborated in the extramural program described here. This document has been peer reviewed by the Agency and recommended for public release. Mention of trade names or commercial products does not constitute endorsement or recommendation by the EPA for use.

## Foreword

The U.S. Environmental Protection Agency (EPA) is charged by Congress with protecting the nation's air, water, and land resources. Under a mandate of national environmental laws, the Agency strives to formulate and implement actions leading to a compatible balance between human activities and the ability of natural systems to support and nurture life. To meet this mandate, the EPA's Office of Research and Development provides data and science support that can be used to solve environmental problems and to build the scientific knowledge base needed to manage our ecological resources wisely, to understand how pollutants affect our health, and to prevent or reduce environmental risks.

The Environmental Technology Verification (ETV) Program has been established by the EPA to verify the performance characteristics of innovative environmental technology across all media and to report this objective information to permittees, buyers, and users of the technology, thus substantially accelerating the entrance of new environmental technologies into the marketplace. Verification organizations oversee and report verification activities based on testing and quality assurance protocols developed with input from major stakeholders and customer groups associated with the technology area. ETV consists of seven environmental technology centers. Information about each of these centers can be found on the Internet at <http://www.epa.gov/etv/>.

Effective verifications of monitoring technologies are needed to assess environmental quality and to supply cost and performance data to select the most appropriate technology for that assessment. In 1997, through a competitive cooperative agreement, Battelle was awarded EPA funding and support to plan, coordinate, and conduct such verification tests for "Advanced Monitoring Systems for Air, Water, and Soil" and report the results to the community at large. Information concerning this specific environmental technology area can be found on the Internet at <http://www.epa.gov/etv/centers/center1.html>.

## **Acknowledgments**

The authors wish to acknowledge the support of all those who helped plan and conduct the verification test, analyze the data, and prepare this report. In particular we would like to thank Wayne Davis of the University of Tennessee; Marshall Allen and Thomas Geisler of the Hemispheric Center for Environmental Technology at Florida International University; and Stephen Priebe of the Idaho National Engineering and Environmental Laboratory, U.S. Department of Energy. We also acknowledge the assistance of ETV AMS Center stakeholders Philip Galvin, New York State Department of Environmental Conservation; Will Ollison, American Petroleum Institute; and Roy Owens, Owens Corning; and of Jeff Ryan of EPA's National Risk Management Research Laboratory, as reviewers of the verification reports from this test.

# Contents

	Page
Notice .....	ii
Foreword .....	iii
Acknowledgments .....	iv
List of Abbreviations .....	viii
1 Background .....	1
2 Technology Description .....	2
3 Test Design and Procedures .....	3
3.1 Introduction .....	3
3.2 Facility Description .....	4
3.3 Test Design .....	8
3.3.1 Equipment Setup .....	8
3.3.2 Test Schedule .....	8
3.3.3 Reference Method Sampling .....	10
3.3.4 Verification Procedures .....	13
3.4 Materials and Equipment .....	15
3.4.1 High Purity Gases .....	15
3.4.2 Mercury Standard Gases .....	15
3.4.3 Mercury Spiking Standard .....	18
3.4.4 Sampling Trains .....	18
3.4.5 Analysis Equipment .....	18
4 Quality Assurance/Quality Control .....	19
4.1 Facility Calibrations .....	19
4.2 Ontario Hydro Sampling and Analysis .....	19
4.2.1 Ontario Hydro Reproducibility .....	20
4.2.2 Ontario Hydro Blank and Spike Results .....	23
4.3 Audits .....	24
4.3.1 Technical Systems Audit .....	24
4.3.2 Performance Evaluation Audits .....	25
4.3.3 Data Quality Audit .....	27
5 Statistical Methods .....	28
5.1 Relative Accuracy .....	28
5.2 Correlation with Reference Method .....	28
5.3 Precision .....	29
5.4 Sampling System Bias .....	29

5.5	Relative Calibration and Zero Drift	30
5.6	Response Time	30
5.7	Data Completeness	31
5.8	Operational Factors	31
6	Test Results	32
6.1	Relative Accuracy	32
6.2	Correlation with the Reference Method	33
6.3	Precision	35
6.4	Sampling System Bias	35
6.5	Relative Calibration and Zero Drift	36
6.6	Response Time	36
6.7	Data Completeness and Operational Factors	38
7	Performance Summary	43
8	References	44

### Figures

Figure 2-1.	Envimetrics Argus-Hg 1000 CEM	2
Figure 3-1.	Schematic of the TSCAI and Off-Gas Cleaning System	5
Figure 3-2.	Overview of TSCAI Test Location	6
Figure 3-3.	Side View of TSCAI Stack	6
Figure 4-1.	Plot of Ontario Hydro Train B Results vs. Train A Results	23
Figure 6-1a.	Linear Regression Plot of Argus-Hg 1000 Hg <sub>T</sub> Results Against OH Results (all data included)	34
Figure 6-1b.	Linear Regression Plot of Argus-Hg 1000 Hg <sub>T</sub> Results Against OH Results (OH Run number 16 excluded).	34

### Tables

Table 3-1.	TSCAI Stack Gas Characteristics	7
Table 3-2.	Mercury CEM Verification Test Schedule	9

Table 3-3.	Schedule of OH Method Sampling Runs in Initial Sampling Period (August 8 – 11, 2002) .....	11
Table 3-4.	Schedule of OH Method Sampling Runs in Final Sampling Period (September 16 – 19, 2002) .....	12
Table 3-5.	Data Used for Argus-Hg 1000 Performance Evaluation .....	13
Table 3-6.	Results of Elemental Mercury Standard Analyses .....	16
Table 3-7.	Precision of Elemental Mercury Standard Measurements .....	17
Table 4-1.	Ontario Hydro Results from Initial Sampling Period (August 8 – 11, 2002) ( $\mu\text{g}/\text{dscm}$ ) .....	21
Table 4-2.	Ontario Hydro Results from Final Sampling Period (September 16 – 19, 2002) ( $\mu\text{g}/\text{dscm}$ ) .....	22
Table 4-3.	Results of Linear Regression, Correlation, and Percent Relative Standard Deviation of Paired Ontario Hydro Train Results ( $n = 18$ ) .....	23
Table 4-4.	Summary of PE Audits .....	25
Table 4-5.	Results of PE Audit of OH Train Recovery and Analysis .....	26
Table 6-1.	Summary of Results from OH Reference Method and Argus-Hg 1000 .....	32
Table 6-2.	Relative Accuracy Results for the Argus-Hg 1000 .....	33
Table 6-3.	Coefficients of Determination ( $r^2$ ) for Correlation of Argus-Hg 1000 $\text{Hg}_T$ with OH Results .....	35
Table 6-4.	Precision of the Argus-Hg 1000 During OH Runs 9 and 12 .....	35
Table 6-5.	Sampling System Bias Results .....	36
Table 6-6.	Calibration Drift Test Results .....	37
Table 6-7.	Summary of Data Used to Estimate Response Time .....	38
Table 6-8.	Extent of Down Time and Service Time .....	40



## List of Abbreviations

AMS	Advanced Monitoring Systems
CO	carbon monoxide
CO <sub>2</sub>	carbon dioxide
CEM	continuous emission monitor
cm	centimeter
CVAA	cold vapor atomic absorption
dscf	dry standard cubic foot
dscm	dry standard cubic meter
DOE	U.S. Department of Energy
EPA	U.S. Environmental Protection Agency
ETTP	East Tennessee Technology Park
ETV	Environmental Technology Verification
FIU-HCET	Florida International University, Hemispheric Center for Environmental Technology
Hg <sup>o</sup>	elemental mercury
Hg <sub>OX</sub>	oxidized mercury
Hg <sub>T</sub>	total vapor-phase mercury
hr	hour
µg	microgram
mL	milliliter
m <sup>3</sup>	cubic meter
mg	milligram
min	minute
NIST	National Institute of Standards and Technology
O <sub>2</sub>	oxygen
OH	Ontario Hydro
ORD	Office of Research and Development
PE	performance evaluation
QA	quality assurance
QA/QC	quality assurance/quality control
QMP	Quality Management Plan
RA	relative accuracy
RCRA	Resource Conservation and Recovery Act
RPD	relative percent difference
RSD	relative standard deviation
SEI	Shaw Environmental, Inc.
STL	Severn Trent Laboratories
TSA	technical systems audit
TSCAI	Toxic Substances Control Act Incinerator

---

## **Chapter 1 Background**

The U.S. Environmental Protection Agency (EPA) supports the Environmental Technology Verification (ETV) Program to facilitate the deployment of innovative environmental technologies through performance verification and dissemination of information. The goal of the ETV Program is to further environmental protection by accelerating the acceptance and use of improved and cost-effective technologies. ETV seeks to achieve this goal by providing high-quality, peer-reviewed data on technology performance to those involved in the design, distribution, financing, permitting, purchase, and use of environmental technologies.

ETV works in partnership with recognized testing organizations; with stakeholder groups consisting of buyers, vendor organizations, and permittees; and with the full participation of individual technology developers. The program evaluates the performance of innovative technologies by developing test plans that are responsive to the needs of stakeholders, conducting field or laboratory tests (as appropriate), collecting and analyzing data, and preparing peer-reviewed reports. All evaluations are conducted in accordance with rigorous quality assurance (QA) protocols to ensure that data of known and adequate quality are generated and that the results are defensible.

The EPA's National Exposure Research Laboratory and its verification organization partner, Battelle, operate the Advanced Monitoring Systems (AMS) Center under ETV. The AMS Center recently evaluated the performance of continuous emission monitors (CEMs) for mercury, including the EnviroMetrics Argus-Hg 1000 mercury CEM.

---

## Chapter 2 Technology Description

The objective of the ETV AMS Center is to verify the performance characteristics of environmental monitoring technologies for air, water, and soil. This verification report provides results for the verification testing of the Argus-Hg 1000 mercury CEM. Following is a description of the Argus-Hg 1000 mercury CEM, based on information provided by the vendor. The information provided below was not subjected to verification in this test.

The Argus-Hg 1000 uses atomic emission spectroscopy to measure total mercury in flue gas. Flue gas is sampled with a filtered probe inserted in the flue duct. Heated Teflon sample lines transport the flue gas from the sample probe to the instruments. The Argus-Hg 1000 measures total mercury with the aid of a proprietary catalytic converter that reduces molecular forms of mercury to atomic mercury. Wet chemical reagents are not used by the Argus-Hg 1000. A chiller removes water vapor before flue gas enters the Argus-Hg 1000. The Argus-Hg 1000 samples the flue gas, and the mercury is preconcentrated by an absorbent. The absorbent is thermally desorbed, and the mercury is analyzed by a patented microwave plasma source, which excites the mercury, and a low-resolution ultraviolet spectrometer. The Argus-Hg 1000 uses argon as a carrier gas, and in normal use a standard cylinder of argon is sufficient for a year or more of operation. The Argus-Hg 1000 requires one to two nanograms of mercury to make a measurement and does not need a zero adjust. Sample time is approximately three minutes at sampling rates close to two liters per minute, and that sample collection interval is part of an overall measurement cycle of approximately seven minutes.



The Argus-Hg 1000 is microprocessor-controlled and can operate unattended when measuring total mercury. When manually operated, the Argus-Hg 1000 also can determine both elemental and total mercury. The Argus-Hg 1000 is packaged in two 48-centimeter (cm) (19-inches) wide waist-high racks. Its dimensions are 48 cm by 61 cm by 71 cm (19 inches by 24 inches by 28 inches). Figure 2-1 shows the Argus-Hg 1000 with the plasma source, spectrometer, absorbent, and microprocessor. Data are provided in multiple formats. The Argus-Hg 1000 provides analog signals and contact closures for acquisition by a data logger. Alternately, data can be downloaded from the internal microprocessor by a computer.

**Figure 2-1. EnviroMetrics Argus-Hg 1000 CEM**

---

## Chapter 3

### Test Design and Procedures

#### 3.1 Introduction

This verification test was conducted according to procedures specified in the *Test/QA Plan for Field Demonstration of Mercury Continuous Emission Monitors at the TSCA Incinerator*.<sup>(1)</sup> The purpose of the verification test was to evaluate the performance of mercury CEMs at a full-scale field location, over a substantial period of continuous operation. The mercury CEMs were challenged by stack gases generated from the thermal treatment of a variety of actual wastes in the Toxic Substances Control Act Incinerator (TSCAI) at the East Tennessee Technology Park (ETTP) in Oak Ridge, Tennessee. CEM responses were compared with reference mercury measurements of total ( $\text{Hg}_T$ ), oxidized ( $\text{Hg}_{\text{OX}}$ ), and elemental ( $\text{Hg}^\circ$ ) mercury. Mercury standard gases were used to challenge the CEMs to assess stability in long-term operation, and the instruments were operated for several weeks by TSCAI staff to assess operational aspects of their use.

The performance of the Argus-Hg 1000 was verified while monitoring emissions from the TSCAI that were generated from treating actual waste. The reference method for establishing the quantitative performance of the tested technologies was the Ontario Hydro (OH) method.<sup>(2)</sup>

The Argus-Hg 1000 performance parameters addressed included

- Relative accuracy (RA) with respect to reference method results
- Correlation with reference method results
- Precision
- Sampling system bias
- Relative calibration and zero drift
- Response time
- Data completeness
- Operational factors.

Relative accuracy, correlation with the reference method, and precision (i.e., repeatability at stable test conditions) were assessed for total mercury in the stack gas emissions. Sampling system bias, calibration and zero drift, and response time were assessed for  $\text{Hg}^\circ$  only, using commercial compressed gas standards of  $\text{Hg}^\circ$ . The data completeness, reliability, and maintainability of the CEMs over the course of the verification test were assessed during several weeks of continuous operation.

---

This verification test was conducted jointly by the ETV AMS Center and the DOE. Under DOE funding, Shaw Environmental Inc. (SEI) under subcontract to Bechtel Jacobs Company LLC, and the Hemispheric Center for Environmental Technology at Florida International University (FIU-HCET) directed the field test. Reference method analyses were conducted by Severn Trent Laboratories (STL), and data analysis was conducted by the University of Tennessee. Funding for these activities was provided by DOE's Transuranic and Mixed Waste Focus Area; the Characterization, Monitoring and Sensor Technology Crosscutting Program; and FIU-HCET.

### **3.2 Facility Description**

The TSCAI is designed and permitted for receiving, sorting, storing, preparing, and thermally destroying low-level radioactive and Resource Conservation and Recovery Act (RCRA) mixed waste contaminated with polychlorinated biphenyls. This waste is treated in a rotary kiln incinerator with a secondary combustion chamber and off-gas treatment system for cleaning combustion effluent gases. The TSCAI includes various support buildings, an unloading and storage area, a tank farm, an incinerator area, concrete collection sumps, and carbon adsorbers. A schematic of the TSCAI is shown in Figure 3-1, and photographs of the facility are shown in Figures 3-2 and 3-3.

The TSCAI treats a wide range of waste categories, including oils, solvents and chemicals, aqueous liquids, solids, and sludges. Solid and non-pumpable sludge material is typically received and stored in metal containers and repackaged into combustible containers prior to feeding. A hydraulic ram feeds containerized solids and sludges to the rotary kiln. Aqueous waste is injected into the kiln through a lance. High heat-of-combustion liquids are burned in either the rotary kiln or a secondary combustion chamber with gas burners. Both solids and waste liquids are permitted for treatment in the primary combustion chamber, but only organic liquids may be treated in the secondary combustion chamber. The typical temperature in the primary combustion chamber is approximately 870°C (1,600°F), and in the secondary combustion chamber is greater than 1,200°C (2,200°F).

Ash residue from the wet ash removal system is collected and handled through hazardous and radioactive waste storage facilities. Selected residues are sent to a commercial landfill. Kiln off-gas flows to the secondary combustion chamber. The off-gas from the secondary combustion chamber then passes through a four-stage treatment system that includes a quench chamber and scrubber treatment system for cooling, removing particulate matter, and neutralizing acidic by-products. An induced-draft fan forces flue gases through the stack. Liquid waste generated by the scrubber systems is treated by the Central Neutralization Facility, an adjacent on-site waste water treatment plant. Solid waste, such as scrubber sludge, is collected in drums for off-site disposal.

The off-gas treatment system of the TSCAI produces a scrubbed, wet gas flow. The TSCAI stack receives this water-saturated flue gas and vents it to the atmosphere. The stack is 100 feet high and its inside diameter is 54 inches, with a gas velocity of approximately 20 feet per second. The stack is equipped with several sample ports for flue gas sampling; a continuous emission

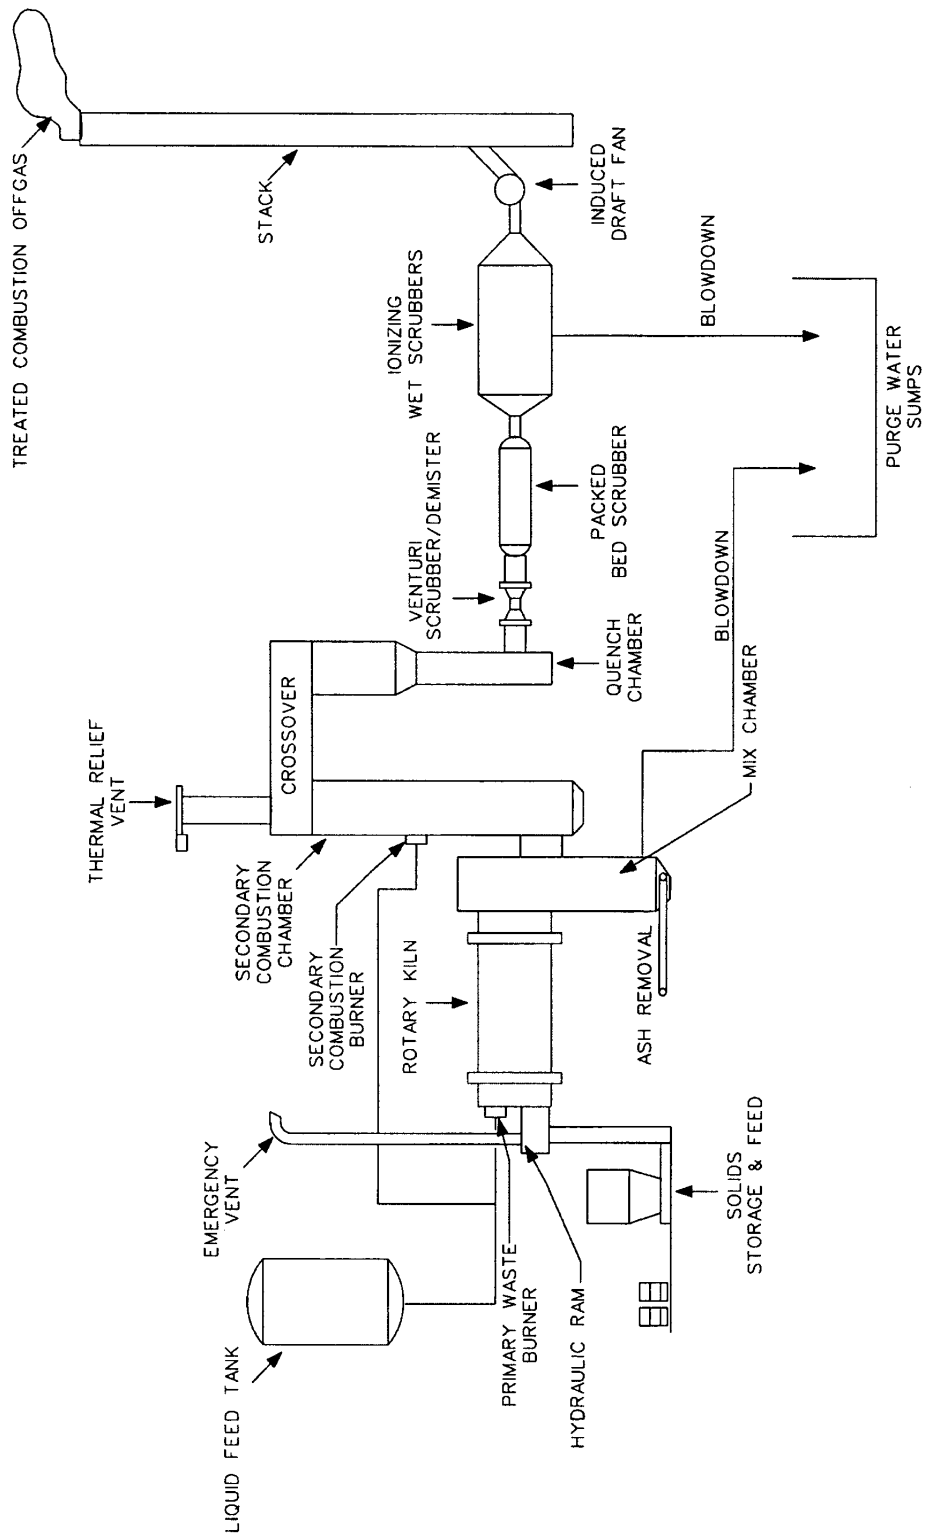


Figure 3-1. Schematic of the TSCAI and Off-Gas Cleaning System



**Figure 3-2. Overview of TSCAI Test Location.** The incinerator stack is at left, with waste feed area behind the stack. The trailers housing the mercury CEMs for this test were located in the foreground at the base of the stack.



**Figure 3-3. Side View of TSCAI Stack.** Sampling platforms are at the left and CEM trailers are at the lower right.

monitoring system for measuring carbon monoxide (CO), carbon dioxide (CO<sub>2</sub>), and oxygen (O<sub>2</sub>); continuous sampling systems for radionuclides and metals; and two access platforms that surround the full circumference of the stack at about 30 feet and 50 feet above ground level. The combustion gas velocity is also monitored by means of the induced-draft fan current and pressure drop across the fan.

The combustion process and off-gas cleaning systems are monitored by instrumentation for process control and data collection. Operational parameters are automatically monitored and logged by the incinerator Supervisory Control and Data Acquisition system.

Stack gas characteristics at the CEM sampling locations used in this test are summarized in Table 3-1. Additional detail on the TSCAI configuration and operations are available in the test/QA plan,<sup>(1)</sup> and in recent publications describing this test.<sup>(3-5)</sup>

**Table 3-1. TSCAI Stack Gas Characteristics<sup>(a)</sup>**

<b>Parameter</b>	<b>Range</b>	<b>Units</b>
Temperature	83.7 – 86.0 (182.6 – 186.8)	°C (°F)
Static Pressure	- 0.25	inches H <sub>2</sub> O
Flow Rate	6,065 – 9,100	dry standard cubic feet (dscf) per minute (min)
	14,920 – 23,450	actual cubic feet per minute
Velocity	15.78 – 19.73	feet per second
O <sub>2</sub>	8.4 – 11.6	%
CO <sub>2</sub>	4.3 – 7.0	%
CO	0 – 10.3	parts per million by volume
Moisture	47.1 – 52.2	%
Particulate Matter Loading	0.0012 – 0.0079	grain/dscf @ 7% O <sub>2</sub>
	2.68 – 18.2	mg/dry standard cubic meters (dscm) @ 7% O <sub>2</sub>

<sup>(a)</sup> Values shown are actual conditions during OH reference method periods.



---

### 3.3 Test Design

#### 3.3.1 Equipment Setup

The Argus-Hg 1000 was housed in the TSCAI Test Bed Mobile Laboratory Trailer located near the base of the TSCAI stack. A dedicated data acquisition system was placed inside the trailer for logging signals from the Argus-Hg 1000 and other CEMs undergoing verification. The data logger was also connected to the facility Supervisory Control and Data Acquisition system through an Ethernet link to collect and log process parameters on the Argus-Hg 1000 data logger.

At the lower of the two platforms on the TSCAI stack (i.e., about 30 feet above ground level), one sampling port was dedicated to a probe that extracts stack gas to be analyzed for CO, CO<sub>2</sub>, and O<sub>2</sub> by the facility CEMs. Other ports at this level were used for the Argus-Hg 1000 and other CEMs being tested.

For the Argus-Hg 1000, the vendor-supplied extractive sampling probe was connected to the CEM by means of a PFA heated 3/8-inch outside diameter (0.25-inch inside diameter) Teflon sample line. A vendor representative oversaw installation of the Argus-Hg 1000. The source sample was withdrawn from the TSCAI stack through an in-stack ceramic filter and probe, and then a second large-area ceramic filter, all of which were heated to 180°C (356°F). A pump located near the instrument drew the sample gas through the 100-foot PFA Teflon sample line maintained at 180°C (356°F) and into the Argus-Hg 1000 thermal converter unit that converts oxidized mercury (Hg<sub>OX</sub>) in the sample gas to Hg<sup>o</sup> for detection (see Section 2). The total sample flow through the probe, filter, and Teflon line was approximately two liters per minute. Like all CEMs in this verification test, the Argus-Hg 1000 sampled at a single (fixed) point in the stack. This CEM provides a reading of total vapor-phase mercury (Hg<sub>T</sub>) (i.e., the sum of Hg<sup>o</sup> and Hg<sub>OX</sub> vapor) about every seven minutes, but does not determine particle-phase mercury. Verification of the performance of the Argus-Hg 1000 was based on comparison with the corresponding Hg<sub>T</sub> results from the OH reference method.

#### 3.3.2 Test Schedule

In this verification test, the CEMs undergoing testing sampled the TSCAI stack gas continuously for nearly two months in the fall of 2002, while the TSCAI operated normally in destroying a variety of waste materials. Stack sampling with the OH reference method was conducted in the first week and the last week of the test, and between those two periods the CEMs operated continuously for approximately five weeks. Table 3-2 summarizes the schedule of verification testing at the TSCAI facility. Shown in this table are the activities conducted during various periods, and the performance parameters addressed by those activities.

The TSCAI was operated continuously during the first and last weeks of test and was not shut down overnight. Such continuous round-the-clock operation is the standard mode of operation for the TSCAI. During the OH reference method sampling runs, the TSCAI burned aqueous, solid, or a combination of aqueous and solid waste. The waste was characterized by chemical

**Table 3-2. Mercury CEM Verification Test Schedule**

<b>Time Period (2002)</b>	<b>Activity</b>	<b>Performance Parameters</b>
August 5 – 7	Installation and shakedown	—
August 8 – 11	OH method sampling; daily challenge with mercury standard gases	RA, correlation, precision; sampling system bias, calibration drift, zero drift, response time
August 12 – September 15	Routine monitoring, with scheduled challenges with mercury standard gases	Calibration drift, zero drift
September 16 – 19	OH method sampling; daily challenge with mercury standard gases	RA, correlation, precision; sampling system bias, calibration drift, zero drift, response time

analysis before the test began, and some measure of control of the stack mercury concentration was achieved by varying the feed rate of aqueous waste and/or mixing solid and aqueous waste materials.

After installation at the TSCAI in early August 2002, the CEMs went through a shakedown period in which all CEMs sampled the facility stack gas. Sampling of the stack gas then continued for the duration of the verification test, including during the performance of 10 OH reference method sampling runs with dual OH trains on August 8 through 11. During this period, the CEMs also were challenged with zero gas and with commercially prepared compressed gas standards of Hg<sup>0</sup>. Vendor representatives oversaw installation and shakedown of the CEMs and operated the CEMs through the first week of testing. Following this first OH sampling period, vendor representatives trained site personnel on routine operation, maintenance, and calibration checks of each of the mercury CEMs. The CEMs then operated for five weeks with only routine attention and maintenance from TSCAI staff. During this period, the staff recorded the maintenance and repair needs of each CEM and made observations on the ease of use of each CEM. Finally, a second four-day period of OH method sampling with dual trains was conducted on September 16 through 19, in which eight OH sampling runs were conducted. The zero gas and mercury standard challenges were carried out by vendor representatives through this period as well.

The OH reference method results are presented in Section 4.2, along with evaluations of the quality of these reference results. The commercial mercury gas standards are described in Section 3.4.2, and the CEM results on those standards are reported in Section 6.

---

### ***3.3.3 Reference Method Sampling***

OH method sampling at the TSCAI was conducted at the upper platform on the stack (50 feet above ground) by staff of SEI, who prepared the trains, conducted sampling at the TSCAI stack using dual OH trains, and then recovered the resulting samples in a laboratory facility near the TSCAI site. The dual OH sampling trains sampled isokinetically at separate ports located 90° apart on the stack circumference and traversed the stack at points determined by EPA Method 1. The two trains were interchanged from port to port at the halfway point in the OH sampling period, so that the trains completed full and identical traverses of the stack during each OH run. STL supplied the chemical reagents used in the OH sampling train impingers and performed the mercury analyses on the OH method samples. Containers for collecting and storing samples were labeled for tracking by STL and subsequently supplied to the SEI field sampling team. Request for Analysis/Chain of Custody forms accompanied the samples from the time of collection by the field sampling team through analysis by the laboratory. Modified QA procedures for the OH method were followed, as described in Section 4.3.1. In addition, two blank OH trains (one in each week of OH method sampling) were spiked with known quantities of mercury to assess recovery in sample analysis. The results of those mercury spikes are reported in Section 4.3.2.

Tables 3-3 and 3-4 summarize the schedule of OH sampling in the initial and final weeks of the verification test, respectively, indicating the run number, date, and start and stop times of each OH run. These tables also show the type of waste burned in each OH run. In most runs, the total sampling period was made up of two separate periods of time, as necessitated by the port change procedure noted above. In a few OH runs, other factors such as disturbances in the waste feed required a stoppage in OH sampling; for those runs the total OH sampling period consists of three or more segments, rather than two. A few OH runs of one hour duration were conducted in the initial week of OH sampling (Table 3-3). However, it was recognized that this sample duration allowed only a few measurements to be made within the OH sample period, by those CEMs that provided sequential batch analyses, as opposed to continuous analysis. Consequently, all OH periods in the final week (Table 3-4) were of two hours duration.

Note that the first 10 OH sampling runs (Table 3-3) were numbered 7 through 16, and the last eight (Table 3-4) were numbered 18 through 25. The numbers 1 through 6 were assigned to OH trains used in pre-test trial runs, and other numbers were assigned to trains used as field blanks or as field spike trains. Each OH run number applies to two trains, designated A and B, which were used in parallel sampling, as described above, or used for separate QA purposes. For example, OH train 17A was spiked with known amounts of mercury, as described in Section 4.3.2, and train 17B was used as a blank. Similarly, train 28A was spiked and train 28B was a blank.

To ensure that the OH reference method and CEM data sets were indeed parallel and comparable for each sampling period, the CEM vendors were notified of the start and stop times of each OH period so that average analyte concentrations corresponding directly to the reference method sampling period could be reported. The CEM vendors were given at least 15 minutes notice prior to initiation of each OH method sampling run.

All OH trains were prepared, recovered, and analyzed in the same manner, with one exception. The particulate filters from trains designated “A” and used for sampling at the TSCAI stack were

**Table 3-3. Schedule of OH Method Sampling Runs in Initial Sampling Period (August 8 – 11, 2002)**

Run Number	Date	Start Time	Stop Time	Waste Feed Type
7	8/8/02	09:10	09:28	Solids
		09:43	10:25	
		10:55	11:55	
8	8/8/02	14:40	15:40	Solids
		16:10	17:10	
		10:50	11:50	
9	8/9/02	12:15	13:15	Aqueous
		14:35	15:35	
10	8/9/02	16:10	17:10	Aqueous
		9:35	10:05	
11	8/10/02	10:25	10:55	Aqueous
		12:15	12:45	
12	8/10/02	13:10	13:40	Aqueous
		15:00	15:30	
13	8/10/02	15:50	16:20	Aqueous
		08:20	08:50	
14	8/11/02	09:10	09:40	Aqueous and Solids
		10:40	10:52	
		11:05	11:23	
15	8/11/02	11:45	12:15	Aqueous and Solids
		13:45	14:15	
16	8/11/02	15:00	15:30	Solids

weighed before and after sampling to determine particulate matter loading in the flue gas, whereas those from the trains designated “B” were not. The particulate loadings determined from the A trains ranged from 0.0012 to 0.0079 grain/dscf (2.68 to 18.2 mg/dscm). Particulate mercury was determined from the filter catch and probe rinse of both the A and B trains in all samples, but was never found at significant levels (i.e., maximum values of particulate Hg were less than 0.003  $\mu\text{g/dscm}$ ). Given this negligible amount of particulate mercury, the total vapor-phase mercury ( $\text{Hg}_T$ ) determined by the OH method can be considered as the total mercury content of the stack gas.

**Table 3-4. Schedule of OH Method Sampling Runs in Final Sampling Period  
(September 16 – 19, 2002)**

<b>Run Number</b>	<b>Date</b>	<b>Start Time</b>	<b>Stop Time</b>	<b>Waste Feed Type</b>
18	9/16/02	11:10	12:10	Aqueous
		13:05	14:05	
19	9/16/02	15:20	16:20	Aqueous
		16:50	17:50	
20	9/17/02	9:25	10:25	Aqueous and Solids
		11:10	12:10	
21	9/17/02	13:15	14:15	Aqueous and Solids
		14:35	15:35	
22	9/18/02	8:35	9:35	Aqueous
		9:55	10:37	
23	9/18/02	12:35	12:53	Aqueous
		14:36	15:36	
24	9/19/02	16:36	17:36	Aqueous and Solids
		8:25	9:20	
25	9/19/02	10:56	11:01	Aqueous and Solids
		11:22	11:44	
25	9/19/02	11:59	12:37	Aqueous and Solids
		13:34	14:34	
		15:46	16:46	

---

### 3.3.4 Verification Procedures

This section describes the test procedures that were used to verify mercury CEM performance on each of the performance parameters listed in Section 3.1. Table 3-5 lists the quantitative performance parameters and summarizes the types of data that were used to verify each of those parameters.

**Table 3-5. Data Used for Argus-Hg 1000 Performance Evaluation**

<b>Performance Parameter</b>	<b>Objective</b>	<b>Comparison Based On</b>
Relative Accuracy	Determine degree of quantitative agreement with reference method	Reference method results
Correlation with Reference Method	Determine degree of correlation with reference method	Reference method results
Precision	Determine repeatability of successive measurements at relatively stable mercury levels	Repetitive measurements under stable facility conditions
Sampling System Bias	Determine effect of the CEM's sample interface on response to zero gas and Hg <sup>0</sup> standard	Response to zero gas and Hg <sup>0</sup> standards at analyzer vs. through sample interface
Relative Calibration/Zero Drift	Determine relative response to zero gas and span gas over successive days	Zero gas and Hg <sup>0</sup> standards
Response Time	Estimate rise and fall times of the CEMs	CEM results at start/stop of Hg addition

#### 3.3.4.1 Relative Accuracy

The RA of the Argus-Hg 1000 was verified using the OH reference method data for total mercury. The Hg<sub>T</sub> readings of the Argus-Hg 1000 during each OH sampling interval were averaged and compared with the average of the Hg<sub>T</sub> results from the paired OH trains (see Section 4.2.1). The RA equation stated in Section 5.1 was applied to the averaged CEM data, using the OH data as the reference values. To optimize the comparability of the CEM and OH data, the OH sampling was coordinated with the CEM operations as noted in Section 3.3.3.

#### 3.3.4.2 Correlation with Reference Method

The correlation of Argus-Hg 1000 total mercury results with the OH results was based on the same data used to assess RA. No additional test procedures were needed to verify the correlation.

---

### 3.3.4.3 Precision

Precision is the degree of variability of successive CEM readings under conditions of stable mercury concentration. In this test, the TSCAI stack gas mercury concentrations resulted entirely from the waste feed material being burned (i.e., no mercury was spiked into the flue gas). Consequently, mercury concentrations in the TSCAI stack would be most stable when a waste material of uniform mercury content was being fed into the incinerator at a uniform rate. For this verification test, an aqueous waste was stockpiled in quantities sufficient for all the testing and was characterized to document its mercury content. The aqueous feed rate data from the TSCAI were then reviewed for the periods of each OH run in which only aqueous waste was burned (see Tables 3-3 and 3-4). On the basis of the feed rate data, two OH runs (Runs 9 and 12, Table 3-3) were selected as having relatively uniform feed rates. The variability of the responses of each CEM during these two OH runs was then calculated to assess the variability of the CEM response.

As described in Section 5.3, the assessment of precision is based on comparing the variability of CEM readings to that of the aqueous feed rate, with variability expressed as a percent relative standard deviation (RSD). This approach does not assume that the waste feed rate is the sole factor affecting the variability of stack mercury concentrations, nor that the waste feed is perfectly uniform in mercury content. This approach does provide a consistent basis for reporting CEM variability in measuring mercury in the TSCAI stack gas.

### 3.3.4.4 Sampling System Bias

Sampling system bias was assessed using the commercial Hg<sup>0</sup> gas standards described in Section 3.4.2. To assess sampling system bias, a mercury gas standard was supplied at the analyzer portion of the CEM, and separately at the stack gas sampling point of the CEM. Any difference in the CEM responses in the two cases was attributed to the effect on the mercury level of the sampling system components, i.e., the probe, filter, mercury conversion system, and transport lines.

### 3.3.4.5 Relative Calibration and Zero Drift

Zero drift and calibration drift also were assessed using the commercial Hg<sup>0</sup> gas standards described in Section 3.4.2, respectively. Although the mercury standards were not suitable for use as absolute standards, they did exhibit stable concentrations and so were useful for assessing CEM relative calibration drift (see Section 3.4.2). These gases were supplied to the CEMs on numerous occasions throughout the study, and the range, mean, and standard deviation of the CEM readings were calculated as indicators of the drift of the instruments over the course of the test. Both low (approximately 8 µg/m<sup>3</sup>) and high (40 to 60 µg/m<sup>3</sup>) mercury standards were used for this evaluation. Zero gas (nitrogen) was used for a similar assessment of the drift in CEM zero readings. The Hg<sup>0</sup> standards and zero gas were supplied to the analyzer portion of each CEM for this assessment, with the exception of one, which was designed to accept standard and zero gases only at its stack gas inlet.

---

#### *3.3.4.6 Response Time*

Mercury CEM response time also was verified using zero gas and the commercial Hg<sup>0</sup> standards. Response time was determined as the time required for the CEM to reach 95% of its final value, after switching from zero gas to the mercury gas standard, or vice versa. The former procedure was used to assess rise time, and the latter to assess fall time. Because the Argus-Hg 1000 is a batch (i.e., noncontinuous) analyzer, time response is reported as the percentage response to a step change that is achieved within each seven-minute measurement cycle.

#### *3.3.4.7 Data Completeness*

Data completeness was determined as the percentage of data that each CEM produced, relative to the total possible data return. This parameter was evaluated both in terms of the percentage of OH sampling runs for which each CEM produced data and in terms of the overall fraction of the two-month test period in which the CEM was operating and producing data.

#### *3.3.4.8 Operational Factors*

Throughout the field period of testing, the mercury CEMs at the TSCAI (August 8 – September 19, 2002), the CEM vendors and TSCAI staff operating the CEMs recorded the repair, routine maintenance, and expendables needs of each CEM and noted operational issues such as the ease of use and calibration of the instruments. These observations are summarized for the Argus-Hg 1000 in Section 6.7.

### **3.4 Materials and Equipment**

#### *3.4.1 High Purity Gases*

The high purity gas used for zeroing the CEMs during testing was commercial, ultra-high purity (i.e., minimum 99.999% purity) nitrogen. Argon of the ultra-high or industrial-grade purity also was obtained for those CEMs requiring it.

#### *3.4.2 Mercury Standard Gases*

Ten compressed gas standards of Hg<sup>0</sup> in nitrogen were obtained from Spectra Gases (Alpha, New Jersey) for use in assessing drift and sampling system bias of the CEMs. These cylinders were received in March 2002 and stored outdoors at the TSCAI site until the start of the verification test. When used during the verification test, each mercury standard was placed inside the instrument trailer near the CEMs for ease of access and to maintain the cylinders at room temperature.

To assess their stability, the mercury gas standards were analyzed using various methods at intervals before, during, and after the verification test. The 10 mercury standards were analyzed by Spectra Gases in March, before shipment to the TSCAI site. In addition, a cold vapor atomic absorption mercury analyzer (Seefeldler Messtechnik) on loan from the EPA Office of Research and Development (EPA-ORD) was used to analyze the mercury gas standards at the TSCAI field site.



Analysis of all 10 cylinders was conducted with the Seefeldler analyzer on August 8 and on nine of the cylinders on October 17, after the field test had been completed. The contents of one cylinder (CC133537) were unintentionally depleted during the verification test, and post-test analysis was not possible. Eight cylinders, including the depleted one, were returned to Spectra Gases, where the seven cylinders with remaining gas were analyzed on November 13.

SEI staff also analyzed the remaining two cylinders (CC133359 and CC133367) using a modified version of EPA Method 101A<sup>(6)</sup>, with sampling performed on November 5 and 6, respectively, for the two cylinders. Finally, the contents of these two cylinders were determined on November 6 using the EPA-ORD Seefeldler analyzer. Upon return to Spectra Gases, the gas in these two cylinders was analyzed on November 21 by the vendor. The results of these diverse measurements on each of the cylinders are summarized in Table 3-6. This table lists the cylinder numbers, the various analytical results obtained on each cylinder (Hg<sup>0</sup> results in µg/m<sup>3</sup>), and the percent difference between the initial and final concentrations determined by the gas vendor.

**Table 3-6. Results of Elemental Mercury Standard Analyses** <sup>(a)</sup>

Cylinder Number	Post-Test						Difference Between Initial and Final Gas Vendor Certified Analyses (%)
	March 1 Initial Gas Vendor Certified Analysis (µg/m <sup>3</sup> )	August 8 EPA-ORD Seefeldler Analysis (µg/m <sup>3</sup> )	October 17 EPA-ORD Seefeldler Analysis (µg/m <sup>3</sup> )	November 5 & 6 Method 101A Mini-Train Analysis (µg/m <sup>3</sup> )	November 6 EPA-ORD Seefeldler Analysis (µg/m <sup>3</sup> )	November 13 & 21 Final Gas Vendor Certified Analysis (µg/m <sup>3</sup> )	
CC133146	14.0	11.3	11.4	NA	NA	12.1	-13.3
CC133172	64.3	44.7	42.4	NA	NA	44.7	-30.4
CC133174	59.6	46.0	45.2	NA	NA	47.5	-20.3
CC133345	11.2	7.9	6.8	NA	NA	5.6	-50.0
CC133357	53.1	37.6	37.1	NA	NA	40.1	-24.6
CC133359	60.6	37.2	34.5	30.6	35.4	44.7	-26.2
CC133367	10.2	6.3	5.4	4.6	5.6	5.6	-45.4
CC133537	15.8	14.9	NA	NA	NA	NA	NA
CC133612	57.8	36.9	34.4	NA	NA	35.4	-38.7
CC133619	59.6	39.9	37.8	NA	NA	40.1	-32.8

<sup>(a)</sup> All measurements corrected to 1 atmosphere and 20°C.  
NA: Not available, analysis not performed.

It is apparent from the last column of Table 3-6 that there was a substantial decrease in all the concentrations determined after the test by Spectra Gases, relative to those determined before the test by Spectra Gases. This finding suggests a decay in the mercury content of all the standards

between these March and November analyses by the gas vendor. However, Table 3-6 also shows that all analyses subsequent to the initial analysis by Spectra Gases show better agreement. This observation suggests that any such decay in concentration must have occurred primarily before the August 8 analyses. Unfortunately, no measurements were made between the original March 1, 2002, Spectra Gases analyses and the August 8 analyses made during the first week of CEM testing. Thus, there is no way to determine whether the decrease occurred as a sudden, step-wise drop or a gradual decay over time. However, the important point regarding Table 3-6 is that the data indicate stable mercury concentrations in all cylinders throughout the period of the verification test.

This point is supported by Table 3-7, which shows the mean, standard deviation, and percent RSD of all analyses of each mercury standard from August 8 on. Table 3-7 indicates that the RSD values for six of the standard cylinders were about 4% or less, and the RSD values for the other three cylinders having multiple analyses were less than 17%. These results indicate that the contents of the mercury standard cylinders were stable over the course of the verification test and, consequently, were suitable for assessing the stability of the CEMs themselves.

**Table 3-7. Precision of Elemental Mercury Standard Measurements**

Cylinder Number	August 8 and Later Analyses		
	Mean ( $\mu\text{g}/\text{m}^3$ )	Standard Deviation ( $\mu\text{g}/\text{m}^3$ )	RSD (%)
CC133146	11.6	0.5	4.0
CC133172	43.9	1.3	3.0
CC133174	46.2	1.2	2.6
CC133345	6.8	1.1	16.8
CC133357	38.3	1.6	4.1
CC133359	36.5	5.2	14.2
CC133367	5.5	0.6	11.4
CC133537	14.9	NA <sup>(a)</sup>	NA
CC133612	35.6	1.3	3.5
CC133619	39.3	1.2	3.2

<sup>(a)</sup> Not applicable for one data point.

---

Spectra Gases conducted a quality review of its production and analytical records to determine the cause of the concentration decay observed.<sup>(7)</sup> The preliminary conclusion from the review was that an important step had been omitted from the manufacturing process. Spectra Gases tested this hypothesis by manufacturing two separate cylinder batches of three cylinders each. The first batch was made according to procedure, and the second batch was made with the suspect step omitted from the manufacturing process. After the cylinders were prepared, each cylinder was analyzed every seven days over a 49-day period. After 49 days, the concentration of the first batch was stable, but the second batch (with the manufacturing step omitted) exhibited a sharp decay in concentration. This test seemed to validate the theory that an important step had been omitted from the manufacturing process, which led to a decrease in concentration from the initial certified analysis of the gases used in the TSCAI CEM test.

### ***3.4.3 Mercury Spiking Standard***

A National Institute of Standards and Technology (NIST)-traceable aqueous mercury standard, with a concentration of 1,000 mg/L of Hg as HgO in dilute nitric acid, was obtained from VWR Scientific (Catalog No. VW4217-1). This solution was Lot No. B2015064 and had an expiration date of August 2003. Dilution of this standard in American Society for Testing and Materials Type II water with added nitric acid was used to prepare the 10 µg/mL and 30 µg/mL spiking solutions for the performance evaluation (PE) audit of the reference method (Section 4.3.2).

### ***3.4.4 Sampling Trains***

The SEI field sampling team supplied the glassware, probes, heater boxes, meter boxes, and other associated equipment for the OH method sampling. STL supplied the chemical reagents and materials used in the OH sampling train impingers. Multiple trains were prepared each day so that as many as six trains (i.e., three sampling runs with two trains each) could be sampled in a single day, in addition to at least one blank train. The SEI field sampling team recovered samples from OH method trains in a laboratory facility near the TSCAI site. Containers for collecting and storing samples were purchased and labeled for tracking by STL. Samples were packaged and delivered by the field sampling team to STL.

### ***3.4.5 Analysis Equipment***

Laboratory equipment for sample recovery and analysis was provided by STL. This included all chemicals and solutions for rinsing train components and recovering impinger samples, as well as cold vapor atomic absorption (CVAA) spectroscopy equipment for mercury determination.

---

## **Chapter 4**

### **Quality Assurance/Quality Control**

Quality assurance/quality control (QA/QC) procedures were performed in accordance with the quality management plan (QMP) for the AMS Center<sup>(7)</sup> and the test/QA plan for this verification test.<sup>(1)</sup>

#### **4.1 Facility Calibrations**

During this verification test, the TSCAI facility was operated normally to carry out its function of destroying hazardous waste. Consequently, calibration procedures and schedules for the TSCAI monitoring equipment were followed throughout the verification test, as required to maintain RCRA certification of the TSCAI. These procedures, which included both weekly and monthly calibrations, took precedence over the conduct of the verification test. Included in these activities were calibrations of the O<sub>2</sub> and CO<sub>2</sub> CEMs on the incinerator stack. Records of all such calibrations are maintained in the operation files of the TSCAI.

Measurements that factored into the verification test results were also the subject of PE audits, as described in Section 4.3.2. Those audits included checks of the facility O<sub>2</sub> and CO<sub>2</sub> CEMs.

#### **4.2 Ontario Hydro Sampling and Analysis**

The preparation, sampling, and recovery of samples from the OH trains adhered to all aspects of the OH method,<sup>(2)</sup> with minor modifications as described in Section 4.3.1. The preparation and recovery of trains was carried out by SEI staff in a laboratory on the ETTP site; trains were sealed for transport between the preparation/recovery laboratory and the TSCAI. Blank trains were prepared in both the initial and final weeks of OH sampling, taken to the sampling location on the TSCAI stack, and recovered along with the sampled trains. Reagent blanks were collected as specified in the OH method. OH trains and resulting samples were numbered uniquely, and samples were transferred to the analysis laboratory (STL) within about 24 hours of collection, using chain-of-custody forms prepared before the field period. As described in Section 4.3.1, trial OH sampling by SEI and OH sample analysis by STL were both subjected to a pre-test evaluation before the field verification took place.

Because of the importance of the OH data in this verification, the following sections present key data quality results from the OH data.

---

#### 4.2.1 Ontario Hydro Reproducibility

The results of the OH flue gas sampling are shown in Tables 4-1 and 4-2, for the initial (August 8 – 11) and final (September 16 – 19) weeks of OH method sampling, respectively. Each table indicates the OH run number, and lists the  $\text{Hg}^0$ ,  $\text{Hg}_{\text{OX}}$ , and  $\text{Hg}_{\text{T}}$  results from the paired OH trains (designated A and B) in each run. Also shown are the mean values of the paired train results, and the relative percent difference (RPD) of each pair of results (RPD = difference between A and B results divided by sum of A and B results expressed as a percentage). All mercury results are in  $\mu\text{g}/\text{dscm}$ , adjusted to 20°C (68°F) at 7% flue gas  $\text{O}_2$  content. Particulate mercury is not shown in Tables 4-1 and 4-2. Particulate mercury was determined from the particulate filters in both OH trains for each run, but was always less than 0.003  $\mu\text{g}/\text{dscm}$ . Thus, particulate mercury was a negligible fraction of the total mercury in the TSCAI stack.

Inspection of Tables 4-1 and 4-2 shows that  $\text{Hg}^0$  composed most of the total mercury value, consistent with the extent of scrubbing of the TSCAI flue gas. The total mercury level was controlled to some extent by the choice of waste feed material and the waste feed rate entering the TSCAI. Total mercury was less than 1.7  $\mu\text{g}/\text{dscm}$  in the first two OH runs and then was progressively increased throughout the rest of the first 10 OH runs (Table 4-1), peaking at about 200  $\mu\text{g}/\text{dscm}$  in OH Run 16. In the eight OH runs conducted during the final week of the test (Table 4-2), total mercury ranged from about 23 to 85  $\mu\text{g}/\text{dscm}$ . All the CEMs tested produced readings of  $\text{Hg}_{\text{T}}$  that generally paralleled this progression of mercury levels during the two weeks of OH method sampling.  $\text{Hg}_{\text{OX}}$  was typically about 1% of the total mercury, and in 17 of the 18 OH runs, the  $\text{Hg}_{\text{OX}}$  results from both OH trains were less than 2  $\mu\text{g}/\text{dscm}$ . The one exception was the  $\text{Hg}_{\text{OX}}$  level of about 15  $\mu\text{g}/\text{dscm}$  observed with the peak mercury levels in OH Run 16, when  $\text{Hg}_{\text{OX}}$  was about 7% of  $\text{Hg}_{\text{T}}$ .

Tables 4-1 and 4-2 show generally close agreement between the A and B train results for all three mercury fractions. The reproducibility of OH results is an important indicator of the quality of the OH reference data for this verification test. Consequently, that reproducibility was quantified by the RPD values for each A and B pair, by linear regression of the A and B train results, including the correlation of the A and B results, and by calculation of the mean RSD of the paired OH results for  $\text{Hg}^0$ ,  $\text{Hg}_{\text{OX}}$ , and  $\text{Hg}_{\text{T}}$ . Considering the RPD values in Tables 4-1 and 4-2, only one of the 18 RPD values for  $\text{Hg}^0$  exceeds 7%, and the same is true for  $\text{Hg}_{\text{T}}$ . The RPD values for  $\text{Hg}_{\text{OX}}$  range from 0.5 to 39.4%, with a median of 9.7%. These results indicate close agreement at the low  $\text{Hg}_{\text{OX}}$  concentrations found. Figure 4-1 shows the linear regression of B train results versus A train results, for all three mercury fractions. The data for all three mercury fractions lie closely along the 1-to-1 line shown in this figure. Table 4-3 summarizes the results of the linear regression, correlation, and %RSD analyses for the duplicate OH trains for  $\text{Hg}^0$ ,  $\text{Hg}_{\text{OX}}$ , and  $\text{Hg}_{\text{T}}$ . The correlation between paired trains is shown in terms of the coefficient of determination ( $r^2$ ). Table 4-3 shows that the slopes of the paired OH regressions are all close to 1.0, the intercepts are near zero, and the  $r^2$  values are all approximately 0.99. Mean RSD values of about 5.5% were found for the paired results for  $\text{Hg}^0$  and total mercury. The mean %RSD for  $\text{Hg}_{\text{OX}}$  was higher, due undoubtedly to the low  $\text{Hg}_{\text{OX}}$  levels in the TSCAI flue gas.

Based on the close agreement of the duplicate OH results for all mercury fractions in all sample runs, the mean OH results in each run were used for comparison to the CEM results.

**Table 4-1. Ontario Hydro Results from Initial Sampling Period (August 8 – 11, 2002)(µg/dscm)**


OH Run Number	Hg <sup>o</sup>				Hg <sub>ox</sub>				Hg <sub>T</sub>			
	A <sup>(a)</sup>	B <sup>(a)</sup>	Mean	RPD	A	B	Mean	RPD	A	B	Mean	RPD
7	1.46	1.53	1.49	2.4	0.17	0.15	0.16	7.2	1.63	1.68	1.65	1.5
8	0.17	0.19	0.18	6.7	0.17	0.19	0.18	5.1	0.34	0.38	0.36	5.9
9	17.9	18.3	18.1	1.1	0.34	0.42	0.38	10.4	18.2	18.7	18.4	1.3
10	34.7	39.0	36.8	5.9	0.32	0.48	0.40	19.8	35.0	39.5	37.2	6.0
11	48.5	36.0	42.3	14.8	0.34	0.40	0.37	8.1	48.9	36.4	42.6	14.6
12	47.8	47.4	47.6	0.5	0.64	0.45	0.54	17.2	48.5	47.8	48.1	0.7
13	36.9	37.9	37.4	1.3	0.26	0.58	0.42	37.5	37.1	38.4	37.8	1.7
14	38.1	43.3	40.7	6.5	0.44	0.44	0.44	0.5	38.5	43.8	41.1	6.4
15	68.6	66.3	67.5	1.7	0.84	1.93	1.39	39.4	69.4	68.3	68.8	0.8
16	187.5	181.4	184.4	1.7	13.7	15.1	14.4	5.1	201.2	196.5	198.8	1.2

<sup>(a)</sup> A and B are the paired OH trains used in sampling.

**Table 4-2. Ontario Hydro Results from Final Sampling Period (September 16 – 19, 2002) ( $\mu\text{g/dscm}$ )**

OH Run Number	Hg <sup>0</sup>				Hg <sub>ox</sub>				Hg <sub>T</sub>			
	A <sup>(6)</sup>	B <sup>(6)</sup>	Mean	RPD	A	B	Mean	RPD	A	B	Mean	RPD
18	74.1	67.7	70.9	4.5	0.45	0.95	0.70	35.9	74.6	68.7	71.6	4.1
19	77.5	76.6	77.0	0.6	0.47	0.49	0.48	2.0	77.9	77.1	77.5	0.6
20	82.3	84.7	83.5	1.4	0.59	0.63	0.61	3.7	82.9	85.4	84.1	1.4
21	50.3	54.1	52.2	3.7	0.30	0.36	0.33	9.0	50.6	54.4	52.5	3.7
22	21.7	23.9	22.8	4.7	0.22	0.32	0.27	18.5	22.0	24.2	23.1	4.9
23	30.5	35.1	32.8	7.0	0.45	0.32	0.39	16.6	30.9	35.4	33.1	6.7
24	23.4	23.0	23.2	0.9	0.26	0.27	0.27	1.6	23.6	23.2	23.4	0.9
25	55.3	63.1	59.2	6.6	1.04	0.59	0.82	28.2	56.3	63.6	60.0	6.1

<sup>(6)</sup> A and B are the paired OH trains used in sampling.

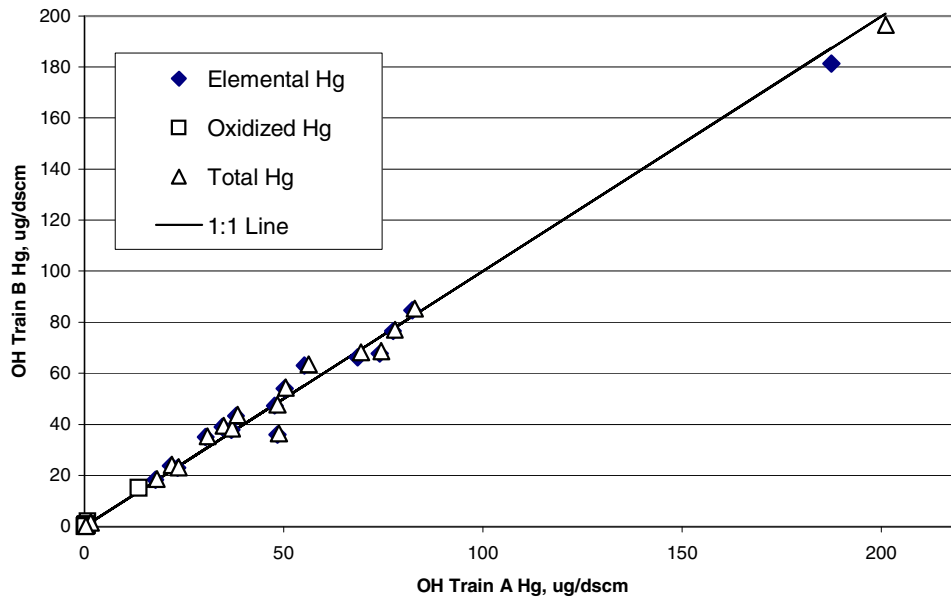

**Figure 4-1. Plot of Ontario Hydro Train B Results vs. Train A Results**

**Table 4-3. Results of Linear Regression, Correlation, and Percent Relative Standard Deviation of Paired Ontario Hydro Train Results (n = 18)**

Analyte	Slope (CI) <sup>(a)</sup>	Intercept (CI) $\mu\text{g}/\text{m}^3$	$r^2$	%RSD
$\text{Hg}^0$	0.959 (0.027)	2.19 (1.73)	0.988	5.55
$\text{Hg}_{\text{OX}}$	1.104 (0.025)	0.053 (0.082)	0.992	20.9
$\text{Hg}_{\text{T}}$	0.969 (0.025)	1.93 (1.65)	0.990	5.36

<sup>(a)</sup> (CI) = 98% confidence interval shown in parentheses.

#### 4.2.2 Ontario Hydro Blank and Spike Results

None of the OH reagent blanks showed any detectable mercury. Also, OH sampling trains were prepared and taken to the sampling location at the TSCAI stack on two occasions, and then returned for sample recovery without exposure to stack gas. These blank OH trains provide additional assurance of the quality of the train preparation and recovery steps. Four sample fractions were analyzed from these blank trains: the particulate filter and probe rinse; impingers 1-3 (KCl); impinger 4 ( $\text{H}_2\text{O}_2$ ); and impingers 5-7 ( $\text{KMnO}_4$ ). Mercury was not detected in any of the blank train samples. The detection limits for analysis of these fractions (in terms of mass of mercury detectable) were 0.019  $\mu\text{g}$ , 0.005  $\mu\text{g}$ , 0.021  $\mu\text{g}$ , and 0.031  $\mu\text{g}$ , respectively, which correspond to stack gas concentrations of less than 0.001  $\mu\text{g}/\text{dscm}$  under all sampling conditions in this verification. Thus, the blank OH train results confirm the cleanliness of the OH train preparation and analysis



---

procedures. The recovery of mercury spiked into blank train samples as part of the PE audit also met the prescribed criteria, as described in Section 4.3.2.

Mercury spike recovery was also evaluated using sample fractions from selected trains used for the 18 OH method runs in the TSCA stack. Those spike recoveries ranged from 85 to 101%, and the results for duplicate spikes never differed by more than 4%, well within the 10% duplicate tolerance required by the OH method.

## **4.3 Audits**

### ***4.3.1 Technical Systems Audit***

Battelle's Quality Manager performed a pre-test evaluation and an internal TSA of the verification test at the TSCAI. The TSA ensures that the verification test is conducted according to the test/QA plan<sup>(1)</sup> and that all activities in the test are in compliance with the AMS Center QMP.<sup>(8)</sup>

The pre-test evaluation consisted of a visit on May 14, 2002, by a representative of the Battelle Quality Manager to observe trial OH method sampling and to audit the laboratory conducting the OH method analyses. Trial sampling was observed at the facilities of SEI, and analytical procedures were observed at STL, both in Knoxville, Tennessee. The Battelle representative was a staff member highly familiar with the sampling and analysis requirements of the OH method. He used detailed checklists to document the performance of OH method train preparation, sampling, sample recovery, chain of custody, and sample analysis. All observations were documented in an evaluation report, which indicated no adverse findings that could affect data quality. An amendment to the test/QA plan<sup>(1)</sup> was prepared as a result of this evaluation, documenting several minor procedural changes implemented in the OH sample recovery by STL. These procedural changes were based on the experience of STL personnel in conducting OH mercury analyses and other metals analyses, as well as on the numbers and types of analyses needed for this verification. The most significant such changes were

- The analysis of one matrix spike duplicate for each type of sample received (i.e., filter catch and probe rinse, KCl impingers, H<sub>2</sub>O<sub>2</sub> impingers, etc.), rather than the duplicate and triplicate analyses stated in section 13.4.2.3 of the OH method.
- The analysis of one spiked sample for each type of sample received, rather than a spike after every 10 samples as stated in section 13.4.2.4 of the OH method.
- The use of a 25% tolerance on spike recovery values based on the requirements of EPA Method 7460 for metals analysis, rather than the 10% tolerance stated in section 13.4.2.4 of the OH method.

The Battelle Quality Manager conducted the TSA in a visit to the TSCAI test location on August 8, 2002, which was the first day of OH sampling in the first intensive period. In that visit he toured the incinerator and CEM locations; observed the OH method sampling; observed OH sample recovery and documentation in the on-site laboratory at the ETTP; reviewed Battelle notebooks, gas standard

certifications, and the CEM data acquisition procedures; and conferred with the CEM vendors and facility personnel. The TSA report from this audit found no issues that could adversely affect data quality. All records from both the pre-test evaluation and the TSA are permanently in the custody of the Battelle Quality Manager.

### 4.3.2 Performance Evaluation Audits

A series of PE audits was conducted on several measurement devices at the TSCAI facility to assess the quality of the measurements made in the verification test. These audits were performed by Battelle staff and were carried out with the cooperation of SEI staff. These audits addressed only measurements that factored directly into the data used for verification, i.e., the CEMs undergoing testing were not the subject of the PE audit. Each PE audit was performed by analyzing a standard or comparing to a reference that was independent of standards used during the testing. Each PE audit procedure was performed once during the verification test, with the exception that blank OH sampling trains were spiked with a mercury standard during both the first and last intensive OH sampling periods, approximately six weeks apart. Table 4-4 summarizes the PE audit results on several measurement devices at the TSCAI facility.

**Table 4-4. Summary of PE Audits**

Measurement Audited	Date	Audit Method	Observed Difference	Acceptable Difference
Flue gas O <sub>2</sub>	8/9/02	Comparison to independent O <sub>2</sub> measurement	0.16% O <sub>2</sub> <sup>(a)</sup> 0.24% O <sub>2</sub>	1% O <sub>2</sub>
Flue gas CO <sub>2</sub>	8/9/02	Comparison to independent CO <sub>2</sub> measurement	0.0% of reading <sup>(b)</sup> 3.3% of reading	10% of reading
OH gas flow rate	8/7/02	Comparison to independent flow measurement	1.3% <sup>(c)</sup> 3.2%	5%
Flue gas temperature	8/7/02	Comparison to independent temperature measurement	0.33% <sup>(c)</sup> 0.07%	2% absolute temperature
Barometric pressure	8/7/02	Comparison to independent barometric pressure measurement	0.5" H <sub>2</sub> O	0.5" H <sub>2</sub> O
Impinger weights (electronic balance)	8/7/02	Weighing certified weights	0.37% (1.7 g at 454 g)	greater of 1% or 0.5 g

<sup>(a)</sup> The two results shown are for the two Siemens Oxymate 5E units (Serial Nos. D1-447 and D3-491, respectively) used at the TSCAI facility.

<sup>(b)</sup> The two results shown are for the two Siemens Ultramat 22P units (Serial Nos. U01-483 and A03-277, respectively) used at the TSCAI facility.

<sup>(c)</sup> The two results shown are for the two NuTech meter boxes designated Unit A (Serial No. 80563) and Unit B (Serial No. 008068), respectively.

Table 4-4 shows the type of measurement audited, the date the PE audit was conducted, the basis for the audit comparison, the difference between the measurement and the PE audit value, and the acceptable difference stated in the test/QA plan. As Table 4-4 shows, all the PE audits

met the required tolerances stated in the test/QA plan.<sup>(1)</sup> The PE audits for O<sub>2</sub> and CO<sub>2</sub> were conducted by sampling the same cooled and dried flue gas analyzed by the facility's CEMs for these gases. The O<sub>2</sub> and CO<sub>2</sub> content of the flue gas were about 9.5% O<sub>2</sub> and 6% CO<sub>2</sub>. The independent audit monitor and the facility CEMs sampled this gas simultaneously for the PE audit. As noted in the footnotes to Table 4-4, both of the dual O<sub>2</sub> monitors and dual CO<sub>2</sub> monitors installed at the TSCAI facility were audited. The gas flow rate measurements of the two OH trains were audited using a certified mass flow meter. The temperature measurements were audited at ambient temperature (approximately 27°C), rather than in the flue gas, because of the limited access to the TSCAI stack. The PE audit of the electronic balance used certified weights of approximately 200 and 500 grams; the observed agreement shown in Table 4-4 is for the 500-gram weight, which showed the greater percentage deviation. A planned audit of the flue gas static pressure<sup>(1)</sup> was not conducted, because the minimal differential relative to atmospheric pressure (approximately -0.25 inches of H<sub>2</sub>O) makes this measurement both difficult to audit and relatively unimportant in calculating the reference mercury results. An amendment to the test/QA plan was prepared and approved to document this change.

The PE audit of the OH train mercury recovery and analysis was performed by spiking blank OH trains with NIST-traceable mercury solutions. In each case, impingers 1 (KCl), 4 (H<sub>2</sub>O<sub>2</sub>/HNO<sub>3</sub>), and 5 (KMnO<sub>4</sub>/H<sub>2</sub>SO<sub>4</sub>) of a blank OH train were spiked. In the first week of OH sampling, each impinger was spiked with 1 mL of a 10-µg/mL mercury solution, and in the final week of OH sampling each impinger was spiked with 1 mL of a 30-µg/mL mercury solution. Table 4-5 identifies the OH trains that were spiked, the date of the spike, the amount of the spike, and the analytical results for each spiked impinger in the train (i.e., impingers 1, 4, and 5 of each OH train).

**Table 4-5. Results of PE Audit of OH Train Recovery and Analysis**

<b>Train</b>	<b>Date</b>	<b>Impinger Number</b>	<b>Hg Spiked (µg)</b>	<b>Hg Found (µg)</b>	<b>Observed Agreement</b>	<b>Target Agreement</b>
17A	8/8/02	1	10	9.7	3%	25%
		4	10	7.8	22%	25%
		5	10	8.3	17%	25%
28A	9/16/02	1	30	32.5	8.3%	25%
		4	30	26.7	11.0%	25%
		5	30	30.6	2.0%	25%

Table 4-5 shows that all of the six spike recoveries were well within the target of 25% agreement with the spiked values that was stated in the amended test/QA plan (see Section 4.3.1). Furthermore, four of the six results were near or within the 10% tolerance stated in the OH method.<sup>(2)</sup> These results support the validity of the OH reference method results used in this verification.

---

### ***4.3.3 Data Quality Audit***

An audit was conducted to trace the test data from initial acquisition, through reduction and statistical comparisons, to final reporting. All calculations performed on data leading to verification results were checked. The Battelle Quality Manager reviewed the procedures and results of this audit, and conducted his own independent review of a small portion of the data.

---

## Chapter 5 Statistical Methods

This chapter presents the statistical procedures that were used in calculations for verifying the performance factors listed in Section 3.1.

### 5.1 Relative Accuracy

RA was verified by comparing the Argus-Hg 1000 results for  $Hg_T$  against the reference results. The average of the paired OH train results was used as the reference value for each OH run. The Argus-Hg 1000 readings in each OH run were averaged for comparison to the reference data.

The RA of the Argus-Hg 1000 with respect to the reference method was calculated using

$$RA = \frac{|\bar{d}| + \frac{t_{0.975}}{\sqrt{n}} SD}{\bar{X}_{RM}} \quad (1)$$

Where

- $|\bar{d}|$  = the absolute value of the arithmetic mean of the differences,  $d$ , of the paired Argus-Hg 1000 and reference method results
- $\bar{X}_{RM}$  = arithmetic mean of the reference method results
- $n$  = number of data points
- $t_{0.975}$  = the  $t$ -value at the 97.5% confidence with  $n-1$  degrees of freedom
- $SD$  = standard deviation of the differences between the paired Argus-Hg 1000 and reference method results.

RA was calculated separately for the first and last weeks of OH sampling ( $n = 10$  and  $n = 8$ , respectively), and for all reference data combined ( $n = 18$ ).

### 5.2 Correlation with Reference Method

Correlation of the Argus-Hg 1000 with the OH method was calculated using the same data used to assess RA. The coefficient of determination ( $r^2$ ) was calculated to determine the degree of correlation of the Argus-Hg 1000  $Hg_T$  results with the reference method results. This calculation

---

was conducted using data from the first week, the last week, and both weeks of OH reference method sampling.

### 5.3 Precision

As described in Section 3.3.4.3, precision was assessed based on the individual readings provided by the Argus-Hg 1000 over the duration of OH method sampling Runs 9 and 12. Precision of the Argus-Hg 1000 was determined by calculating the percent relative standard deviation (%RSD) of a series of Argus-Hg 1000 measurements made during stable operation of the TSCAI in these OH runs. The %RSD is the ratio of the standard deviation of those readings to the mean of the readings, expressed as a percentage.

$$\% RSD = \frac{SD}{\bar{X}} \times 100 \quad (2)$$

where

$SD$  = standard deviation of the readings from the Argus-Hg 1000

$\bar{X}$  = mean of the Argus-Hg 1000 readings.

The calculated precision values from Equation 2 include the variability of the TSCAI stack gas mercury concentration, as well as the variability of the Argus-Hg 1000 itself. To estimate the precision of the Argus-Hg 1000, it was assumed that the two sources of variability combine in root-mean-square fashion, with the variability of the TSCAI mercury concentration represented by the variability of the aqueous waste feed rate. Consequently, the CEM precision was estimated in terms of a %RSD by means of Equation 3:

$$\%RSD_R = [(\%RSD_{WF})^2 + (\%RSD_{CEM})^2]^{1/2} \quad (3)$$

where %RSD<sub>R</sub> is the relative standard deviation of the CEM readings, %RSD<sub>WF</sub> is the relative standard deviation of the aqueous waste feed readings, and %RSD<sub>CEM</sub> is the resulting relative standard deviation attributable to the CEM variability. It must be noted that the total variability of the TSCAI may not be fully represented by the variability of the waste feed rate. Consequently, the CEM variability (% RSD<sub>CEM</sub>) calculated from Equation 3 must be considered as the maximum variability that could be attributable to the CEM.

### 5.4 Sampling System Bias

Sampling system bias ( $B$ ) reflects the difference in Argus-Hg 1000 response when sampling Hg<sup>o</sup> standard gas through the Argus-Hg 1000's entire sample interface, compared with that when sampling the same gas directly at the Argus-Hg 1000's mercury analyzer, i.e.:

$$B = \frac{R_a - R_i}{R_a} \times 100 \quad (4)$$

---

where

$R_i$  = Argus-Hg 1000 reading when the standard gas is supplied at the sampling inlet

$R_a$  = Argus-Hg 1000 reading when the standard is supplied directly to the analyzer.

Since the effect of the inlet is expected to be a negative bias on measured Hg levels,  $R_i$  is expected to be less than  $R_a$ . Equation 4 thus gives a positive percent bias value for what is understood to be an inherently negative bias. In rare instances  $R_i$  was found to exceed  $R_a$  slightly due to normal instrument variation. In such instances,  $B$  was reported as 0.0%.

The purpose of this part of the verification was to assess the bias introduced by the sampling probe, filter, gas drier, and long (>100-foot) sampling lines in sampling Hg<sup>0</sup>. It must be pointed out that delivery of the standard gas to the sample inlet also required a Teflon line over 100 feet in length. Thus, the observed bias may include a contribution from the standard gas delivery system, as well as from the sampling system.

## 5.5 Relative Calibration and Zero Drift

Calibration and zero drift were reported in terms of the mean, relative standard deviation, and range (maximum and minimum) of the readings obtained from the Argus-Hg 1000 in the repeated sampling of the same Hg<sup>0</sup> standard gas and of zero gas. The relative standard deviation of standard gas or zero gas readings was calculated according to Equation 2 above. This calculation, along with the range of the data, indicates the variation in zero and standard readings.

The Argus-Hg 1000 was challenged with two Hg<sup>0</sup> gas standards in this test, cylinders CC133146 and CC133174, which had nominal average Hg<sup>0</sup> concentrations of 11.6 and 46.2 µg/m<sup>3</sup>, respectively. These nominal averages are based on all analyses of the gas standards from August 8, 2002, through November 21, 2002, (Table 3-7), i.e., excluding the vendor's initial pre-test analysis of the standards in March 2002.

## 5.6 Response Time

The response time refers to the time interval between the start of a step change in mercury input and the time when the Argus-Hg 1000 reading reached 95% of the final value. Both rise time and fall time were determined. Argus-Hg 1000 response times were obtained in conjunction with a calibration/zero drift check or sampling system bias check by starting or stopping delivery of the mercury standard gas to the Argus-Hg 1000 or sampling interface, recording all readings until stable readings were obtained, and calculating the percentage of final response achieved in each measurement cycle of the Argus-Hg 1000.

---

## **5.7 Data Completeness**

Data completeness was assessed by comparing the data recovered from the Argus-Hg 1000 with the amount of data that would be recovered upon completion of all portions of these test procedures.

## **5.8 Operational Factors**

Maintenance and operational needs were documented qualitatively, both through observation and through communication with the vendor during the test. Factors noted included the frequency of scheduled maintenance activities, the down time of the Argus-Hg 1000, and the staff time needed for maintaining it during the verification test.



## Chapter 6 Test Results

The results of the verification test of the Argus-Hg 1000 are presented below for each of the performance parameters.

### 6.1 Relative Accuracy

Table 6-1 lists the OH reference method results and the corresponding Argus-Hg 1000 results for Hg<sub>T</sub> in all 18 OH sampling runs. The OH results are the averages of the Hg<sub>T</sub> results from the paired A and B trains in each run; the Argus-Hg 1000 results are the averages of the Argus-Hg 1000 readings over the period of each OH run.

**Table 6-1. Summary of Results from OH Reference Method and Argus-Hg 1000**

Date	OH Run Number	Hg <sub>T</sub> , µg/dscm	
		OH	Hg-1000
8/8/2002	7	1.65	1.14
	8	0.36	0.90
8/9/2002	9	18.4	9.1
	10	37.2	20.9
8/10/2002	11	42.6	26.0
	12	48.1	29.0
	13	37.8	22.5
8/11/2002	14	41.1	26.0
	15	68.9	38.3
	16	198.8	63.5
9/16/2002	18	71.6	37.9
	19	77.5	46.8
9/17/2002	20	84.1	47.2
	21	52.5	24.9
9/18/2002	22	23.1	14.8
	23	33.1	22.3
9/19/2002	24	23.4	14.5
	25	60.0	37.0

Table 6-1 shows that the Argus-Hg1000 readings were almost always lower than the corresponding OH results. Generally the difference amounted to approximately 30 to 50% of the corresponding OH result, but in OH Run 16 the difference was nearly 70%. This observation is noteworthy, because the results of OH Run 16 have a strong effect on the RA results of the Argus-Hg 1000 for the first week and overall. Table 6-2 shows the RA results for the Argus-Hg 1000 when all the results in Table 6-1 are included in the calculation, and when OH Run 16 is excluded from the calculation. An RA of 109% for the first week and an overall RA of 76.5% were found for the entire data set. However, if the results of OH Run 16 are excluded from the calculation, the RA result for the first week improves to 63.6% (consistent with the 60.6% RA found in the second week), and the overall RA improves to 55.5%. It should be noted that Run 16 was conducted using packets of solid waste of relatively high mercury content with no accompanying liquid waste. That waste material is likely to have produced a relatively variable mercury content in the flue gas. It is possible that the periodic batch analysis process of the Argus-Hg 1000 could not accurately determine the average mercury content in the flue gas under such conditions, resulting in the nearly 70% deviation from the OH results for that run.


**Table 6-2. Relative Accuracy Results for the Argus-Hg 1000**

Test Period	Relative Accuracy (%)	
	All Data	Excluding OH Run 16
First Week (n = 10)	109	63.6
Last Week (n = 8)	60.6	60.6
Overall (n = 18)	76.5	55.5


The results shown in Table 6-2 include corrections for known problems with the Envimetrics mercury calibration source that were discovered during the first few days of the verification field period. Envimetrics representatives also reported finding an additional calibration error after the field period was concluded and the CEM had been returned to the laboratory. Correction for that error (by applying a factor of 1.37 to all CEM data) would significantly improve the RA results. However, since this calibration error was not documented while the CEM was in the field, no retroactive correction has been made.

## 6.2 Correlation with the Reference Method

The correlation of the Argus-Hg 1000 readings with the OH results for Hg<sub>T</sub> was calculated using the data shown in Table 6-1. As was the case in the RA calculation, the results of OH Run 16 had a strong effect on the observed correlation. To illustrate the correlation, Figure 6-1a shows a linear regression plot of the Argus-Hg 1000 Hg<sub>T</sub> results against all of the corresponding OH results, and Figure 6-1b shows the same comparison with OH Run 16 excluded. The linear regression equations and coefficients of determination (r<sup>2</sup>) are shown on the graphs. Table 6-3

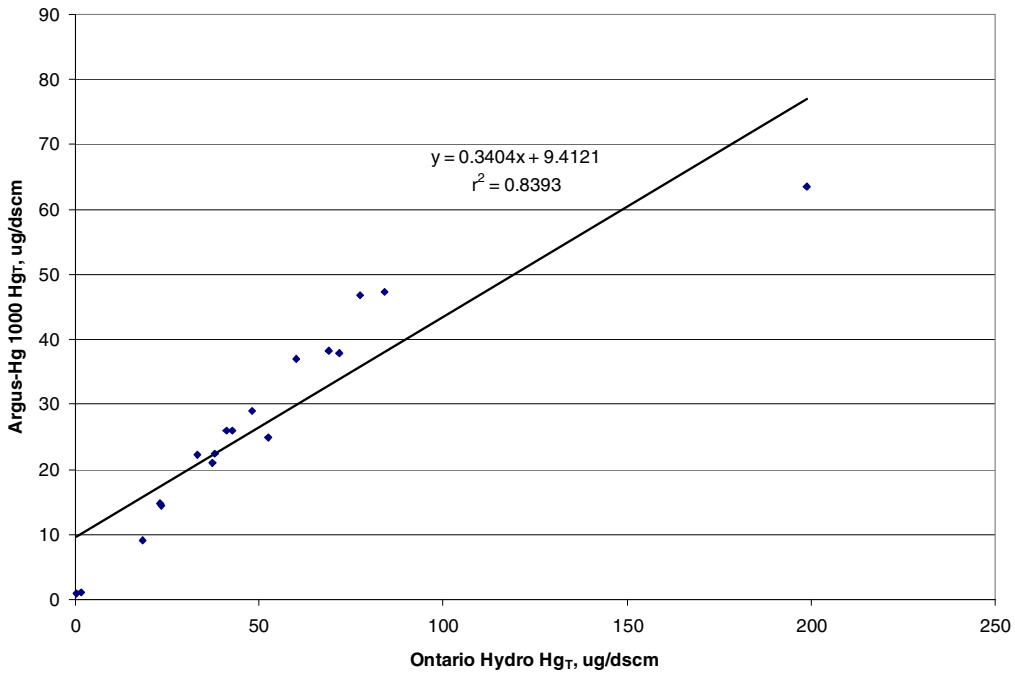

**Figure 6-1a. Linear Regression Plot of Argus-Hg 1000 Hg<sub>T</sub> Results Against OH Results (all data included).**

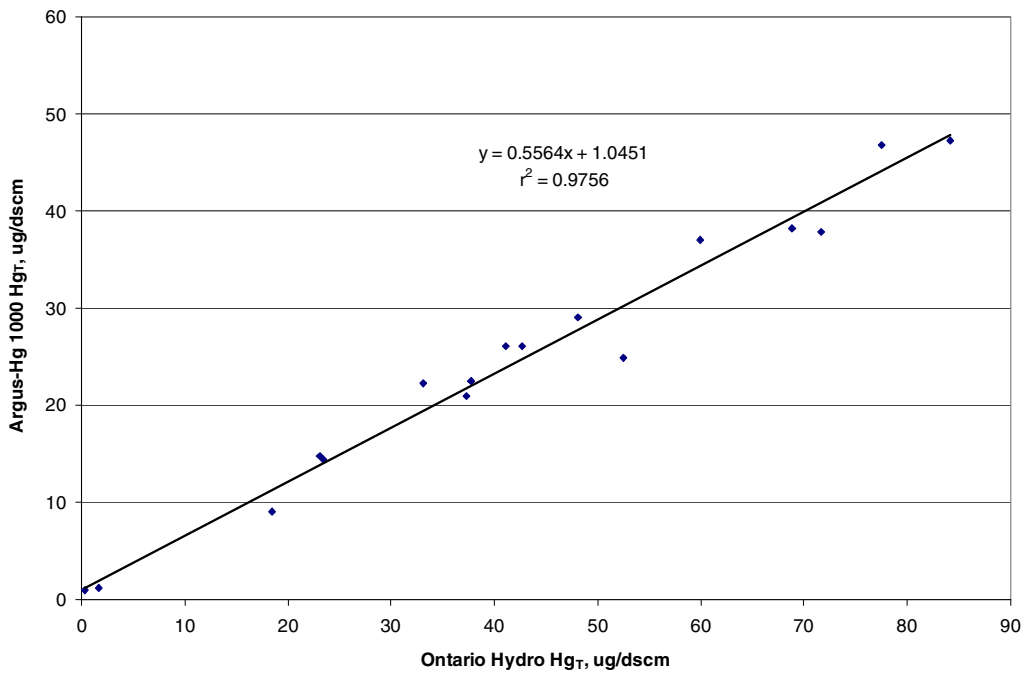

**Figure 6-1b. Linear Regression Plot of Argus-Hg 1000 Hg<sub>T</sub> Results Against OH Results (OH Run 16 excluded).**

**Table 6-3. Coefficients of Determination ( $r^2$ ) for Correlation of Argus-Hg 1000  $Hg_T$  with OH Results**

Test Period	$r^2$	
	All Data	Excluding OH Run 16
First Week (n = 10)	0.889	0.990
Last Week (n = 8)	0.953	0.953
Overall (n = 18)	0.839	0.976

shows the  $r^2$  values for the first and last weeks of OH sampling and for the two periods combined, both with and without OH Run 16. With all OH data included, the overall  $r^2$  value was 0.839, whereas with OH Run 16 excluded, the overall  $r^2$  was 0.976.

### 6.3 Precision

Table 6-4 summarizes the observed precision of the Argus-Hg 1000 in terms of the stability of its readings during two periods of relatively stable introduction of mercury in aqueous waste into the TSCAI. For OH Runs 9 and 12, Table 6-4 shows the %RSD of the aqueous waste feed rate into the TSCAI, the corresponding %RSD of the Argus-Hg 1000  $Hg_T$  readings, and the resulting estimate of the variability attributable to the Argus-Hg 1000, calculated according to Equation 3 in Section 5.3. (The integrated OH and average Argus-Hg 1000 results in these two runs are shown in Table 6-1.)

**Table 6-4. Precision of the Argus-Hg 1000 During OH Runs 9 and 12**

OH Run Number	Aqueous Feed Rate Variability (%RSD <sub>WF</sub> )	Argus-Hg 1000 Readings (%RSD <sub>R</sub> )	Maximum CEM Variability (%RSD <sub>CEM</sub> )
9	2.4	22.2	22.1
12	13.9	17.2	10.1

The results in Table 6-4 show that the Argus-Hg 1000 readings exhibited variability of about 17 to 22%RSD under conditions of relatively stable mercury feed into the TSCAI. The maximum variability attributable to the Argus-Hg 1000 was 22.1%RSD in OH Run 9 and 10.1%RSD in OH Run 12.

### 6.4 Sampling System Bias

On three occasions during the verification test, an elemental mercury gas standard was supplied directly to the analyzer of the Argus-Hg 1000 CEM, and then to the inlet of the CEM's sampling

system on the TSCAI stack. Table 6-5 shows the date, the mercury standard, and the Argus-Hg 1000 readings obtained for each of these sampling system bias checks. The last column in Table 6-5 also shows the sampling system bias, calculated according to Equation 4 in Section 5.4. In the bias checks performed on August 8 and September 17, all analyses were completed within about one hour. However, in the bias check on September 18, the analyses of gas supplied to the inlet occurred almost seven hours after those at the analyzer. Table 6-5 shows that the sampling system bias was 14.6% in the first bias check and 4.3% and 0.3% in the two bias checks over a month later.

**Table 6-5. Sampling System Bias Results**

Date	Hg <sup>o</sup> Standard <sup>(a)</sup>	Response at Inlet (R <sub>i</sub> ) (µg/m <sup>3</sup> )	Response at Analyzer (R <sub>a</sub> ) (µg/m <sup>3</sup> )	Bias <sup>(b)</sup> %
8/8/02	CC133146	12.11	14.18	14.6
9/17/02	CC133146	14.80	15.47	4.3
9/18/02 <sup>(c)</sup>	CC133174	45.37	45.50	0.3

<sup>(a)</sup> See Section 3.4.2 for information on mercury standard gases.

<sup>(b)</sup> Calculated according to Equation 4, Section 5.4.

<sup>(c)</sup> Measurements at analyzer and inlet separated by almost seven hours.

## 6.5 Relative Calibration and Zero Drift

Two mercury gas standards, including one used for the sampling system bias checks (Section 6.4), were analyzed by the Argus-Hg 1000 periodically throughout the verification test, to assess the drift in calibration response of the Argus-Hg 1000. The results of these analyses are shown in Table 6-6, which lists the date of each analysis, and the Argus-Hg 1000 readings on the mercury standards. Also shown in Table 6-6 are the mean, standard deviation, %RSD, and range of the readings.

The 15 analyses of the lowest concentration standard (CC133146) took place over a period of about six weeks, and exhibited an RSD of 6.3%. The four analyses of the medium concentration standard (CC133357) over a two-week period resulted in an RSD of 5.2%.

Zero gas also was sampled dozens of times during the verification period by the Argus-Hg 1000. However, nearly all of the resulting readings were recorded only as zero. Consequently, the variability in zero response could not be determined, but it can be concluded that the great majority of Argus-Hg 1000 zero gas readings were near zero.

## 6.6 Response Time

On three occasions during the verification test, successive Argus-Hg 1000 readings were recorded at times when the Argus-Hg 1000 switched from zero gas to a mercury standard gas, or vice versa. These records were used to evaluate the response time (i.e., the rise and fall times) of the Argus-Hg 1000. The Argus-Hg 1000 is a batch analyzer, which provided a reading of Hg<sub>T</sub> at

**Table 6-6. Calibration Drift Test Results**

Date	Argus-Hg 1000 Readings ( $\mu\text{g}/\text{m}^3$ )	
	CC133146 <sup>(a)</sup>	CC133357 <sup>(a)</sup>
8/8/02	14.2	
8/9/02	13.1	
8/9/02	13.5	
8/10/02	13.2	
8/11/02	13.6	
8/12/02	13.4	
8/22/02	13.8	
8/28/02	14.5	37.7
8/30/02	13.5	
9/4/02	15.0	34.9
9/5/02	14.8	33.4
9/12/02	15.6	36.4
9/17/02	15.5	
9/18/02	15.5	
9/19/02	15.1	
<b>Mean</b>	14.3	35.6
<b>Std. Dev.</b>	0.91	1.9
<b>%RSD</b>	6.3%	5.2%
<b>Range</b>	13.1 – 15.6	33.4 – 37.7

<sup>(a)</sup> See Section 3.4.2 for information on mercury standard gases.

intervals of approximately seven minutes during the verification test. Consequently, the evaluation of response time is reported in terms of the extent of response to a step change in mercury concentration that was achieved in each measurement cycle. Table 6-7 summarizes the response time data, showing the date and time of each reading, the indicated mercury concentration, and the resulting percent rise or fall in successive readings. In these estimates, it is assumed that the last recorded reading in a sequence is a stable response, i.e., a final reading against which other readings can be judged to estimate response time. Note that Table 6-7 includes data from a test in which the zero and standard gases were supplied to the inlet of the Argus-Hg 1000's sampling system, as well as data from tests in which the gases were supplied directly to the mercury analyzer of the Argus-Hg 1000.

**Table 6-7. Summary of Data Used to Estimate Response Time**

Date	Time	Zero/Span Gas	Analyzer/ Inlet <sup>(a)</sup>	Argus-Hg 1000 Response ( $\mu\text{g}/\text{m}^3$ )	Result
9/4/02	10:42	Air	A	0.0	
	10:48	CC133146 <sup>(b)</sup>	A	13.86	92.6% rise in one cycle
	10:54	CC133146	A	14.97	
	11:01	CC133357	A	33.81	94.4% rise in one cycle
	11:07	CC133357	A	34.92	
9/18/02	11:07	Air	A	0.0	
	11:14	CC133174	A	40.92	89.9% rise in one cycle
	11:21	CC133174	A	43.58	95.8% rise in two cycles
	11:28	CC133174	A	45.27	99.5% rise in three cycles
	11:35	CC133174	A	45.50	
	11:44	Air	A	0.0	100% fall in one cycle
9/18/02	17:52	N <sub>2</sub>	I	0.0	
	18:02	CC133174	I	45.36	100% rise in one cycle
	18:08	CC133174	I	45.04	
	18:14	CC133174	I	45.37	
	18:21	N <sub>2</sub>	I	5.38	88% fall in one cycle
	18:31	N <sub>2</sub>	I	0.29	99.4% fall in two cycles

<sup>(a)</sup> Indicates whether zero and standard gases were supplied to the CEM's mercury analyzer (A) or to the inlet (I) of the CEM's sampling system.

<sup>(b)</sup> See Section 3.4.2 for information on mercury standard gases.

Table 6-7 shows that the response of the Argus-Hg 1000 rose to about 90 to 100% of its final value within one batch measurement cycle when switching between standard gases or from zero gas to an Hg<sup>o</sup> gas standard. Similarly, the response fell by 88 to 100% of the initial reading within one measurement cycle in the two cases of switching from a mercury standard gas to zero gas. In general terms, these results indicate that 95% rise and fall times were achieved in approximately one Argus-Hg 1000 measurement cycle, whether sampling occurred at the CEM's mercury analyzer or at the sample inlet.

## 6.7 Data Completeness and Operational Factors

The operational factors associated with using the Argus-Hg 1000 were evaluated by SEI staff, who operated the Argus-Hg 1000 during the five-week period of routine monitoring. These operators recorded observations on daily maintenance, repair, expendables use, waste generation

---

and disposal, etc., in a separate logbook for each CEM. The Argus-Hg 1000 vendor also recorded activities in the first and last weeks of the field period. Particular attention was paid to the cause and extent of any down time of the Argus-Hg 1000 during the field period. Table 6-8 lists the dates of significant down time of the Argus-Hg 1000 during the entire verification period, along with the duration of the down time, the duration of the service time, and a description of the cause and resolution of each problem.

The operation and maintenance activities listed in Table 6-8 include only those that were not required by the test/QA plan (e.g., time required to conduct zero and standard gas checks was not considered down time) and that were responsible for either CEM down time or for operator intervention. As Table 6-8 shows, the most common maintenance needed on the Argus-Hg 1000 was to restart the system after the Argus-Hg 1000 data system had hung up or gone into an error mode. This problem was eliminated when the vendor implemented a correction to the data acquisition software of the Argus-Hg 1000 on August 30. Other causes for service included replacing the mercury reduction catalyst, maintaining the water level in the reservoir, and adjusting the sample flow rates. The total down time experienced during the six-week test period was 5,060 minutes (approximately 84.3 hours); the down time includes a total required service time of 780 minutes (13 hours). The total down time amounted to about 8.3% of the total duration of the field period (August 8 through September 19), so that data completeness was 91.7%.

The cost of the Argus-Hg 1000 also was considered as an operational factor. The approximate purchase cost of the Argus-Hg 1000 as tested was \$42,000.



**Table 6-8. Extent of Down Time and Service Time**

<b>Date</b>	<b>Downtime <sup>(a)</sup></b>	<b>Service Time <sup>(b)</sup></b>	<b>Activities</b>
8/8/02	1 hour (hr)	1 hr	Recalibrated Argus-Hg 1000 using permeation tube source.
8/9/02	1 hr	1 hr	Recalibrated Argus-Hg 1000 using permeation tube source – final calibration.
8/13/02	1 hr 10 min	15 min	Found the instrument in standby mode. A message was printed on the laptop following a blowdown that was done on 8/13/02 at 09:05:39. The message stated that the instrument was “Quitting after this cycle.” Option 5 was entered on laptop per vendor procedure to reinitiate the measurement cycle. The instrument began reporting measurements again at 10:16.
8/15/02	NA <sup>(c)</sup>	30 min	Found water reservoir low due to isolation of facility water during maintenance outage. Per instructions from vendor, routed water from outside drain line to the reservoir until facility water restored.
8/16/02	17 hr 10 min	20 min	Found the Argus-Hg 1000 in standby mode following a blowdown that was done on 8/15/02 at 17:13:21. Option 5 was entered on laptop per vendor procedure to reinitiate the measurement cycle. The Argus-Hg 1000 was generating “Spectrometer ERR03” message on the laptop.
8/16/02	10 min	30 min	Received a new set of operating instructions from the vendor. Procedure on clearing the spectrometer was followed. This cleared the spectrometer error message, and the Argus-Hg 1000 resumed normal measurement cycle.
			Discovered a water leak at the interface of the facility water line and the water reservoir due to damaged ferrule. Repaired leak and cleaned up water on the floor.
8/19/02	NA	10 min	Instrument cycling through measurement sequence and reporting results, but measurement report accompanied by “Spectrometer ERR03” message. Reported finding to vendor.
8/20/02	NA	10 min	Observed that instrument was cycling through measurement sequence and reporting results, but appeared hung up and reporting same results each cycle.
8/20/02	NA	20 min	Per vendor directions, verified that the Argus-Hg 1000 was hung up and reporting the same results each cycle.
8/20/02	28 hr	20 min	Cleared spectrometer following operating instructions per vendor recommendation. The Argus-Hg 1000 resumed normal measurement cycle.

**Table 6-8. Extent of Downtime and Service Time for the Argus-Hg 1000 (continued)**

<b>Date</b>	<b>Downtime <sup>(a)</sup></b>	<b>Service Time <sup>(b)</sup></b>	<b>Activities</b>
8/23/02	10 hr	30 min	Found the Argus-Hg 1000 reporting “Spectrometer ERR03” message. Scrolled back through data and found that this message first appeared at approximately 22:20 on 8/22/02. The Argus-Hg 1000 was hung up and reporting the same results since the spectrometer error message began. Cleared the spectrometer following operating instructions, and the Argus-Hg 1000 resumed normal measurement cycle.
8/23/02	4 hr 30 min	30 min	Disconnected and reconnected spectrometer power plug per vendor instructions without result. Followed procedure to clear the spectrometer and reinitialize the Argus-Hg 1000. The Argus-Hg 1000 resumed normal measurement cycle.
8/23/02	NA	5 min	Found the Argus-Hg 1000 in standby mode. Option 5 was entered on laptop per operating instructions to reinitiate the measurement cycle. The Argus-Hg 1000 resumed normal measurement cycle.
8/24/02	16 hr	20 min	Found that the Argus-Hg 1000 ran three measurement cycles and then stopped measurements after a blowdown at 16:20:25 after the Argus-Hg 1000 had been restarted the previous day. Followed procedure to clear the spectrometer and reinitialize the Argus-Hg 1000. The Argus-Hg 1000 resumed normal measurement cycle.
8/27/02	NA	20 min	Observed the “Spectrometer ERR03” error message in the results report on the laptop. Followed procedure to clear the spectrometer and reinitialize the Argus-Hg 1000. The Argus-Hg 1000 resumed normal measurement cycle.
8/30/02	NA	20 min	Observed the “Spectrometer ERR03” error message in the results report on the laptop. Followed procedure to clear the spectrometer and reinitialize the Argus-Hg 1000. The Argus-Hg 1000 resumed normal measurement cycle.
8/30/02	3 hr	3 hr	Vendor installed new software to resolve the problem with the “Spectrometer ERR03” message.  Vendor observed that the catalyst in the catalytic converter needed to be replaced because the sampling flow rate had dropped below 1 liter/min. A replacement catalyst cartridge was left with the Argus-Hg 1000 when it was delivered in early August, and the replacement cartridge was installed. After replacement, the flow rate returned to its normal range of 1.5 to 1.6 liter/min.

**Table 6-8. Extent of Downtime and Service Time for the Argus-Hg 1000 (continued)**

<b>Date</b>	<b>Downtime <sup>(a)</sup></b>	<b>Service Time <sup>(b)</sup></b>	<b>Activities</b>
9/11/02	NA	20 min	Found water reservoir low due to isolation of facility water during maintenance outage. Manually filled water reservoir.
9/11/02	NA	20 min	Manually filled water reservoir.
9/12/02	NA	20 min	Found water reservoir low. Manually filled water reservoir.
9/12/02	1 hr	1 hr	Disconnected condensate drain line from outside drain line and ran condensate drain line to the water reservoir to recirculate water through the reservoir until facility water was restored.
			While observing the standard gas measurements, noticed that the excess flow jumped to about twice the target value of 3 liter/min. Manually lowered the excess flow to 3 liter/min. During the next measurement cycle, noticed that the excess flow jumped again to nearly twice the target flow rate. This phenomenon was observed several times.
9/16/02	1 hr 20 min	1 hr 20 min	Observed on both 9/13/02 and 9/15/02 that the signal from the flow meter to the microprocessor would decrease periodically for a few seconds, resulting in abnormally high mercury concentrations. The drop in flow rate seemed to be correlated with touching the instrument. The problem was traced to an intermittent wire connection that was repaired on the evening of 9/16/02.
<b>Total</b>	<b>5,060 min</b>	<b>780 min</b>	<b>91.7% availability and 13 service man-hours <sup>(d)</sup></b>

<sup>(a)</sup> Down Time = time that the CEM was taken off line for zero or standard gas measurements, was not operating, or was operating but not reporting reliable measurements. The period over which down time was evaluated begins at the start of OH method testing on 8/8/02 and ends at the conclusion of testing on 9/19/02. The amount of time was rounded to the nearest 5 minutes.

<sup>(b)</sup> Service Time = time spent performing daily checks, conducting routine operation and maintenance activities, and troubleshooting problems. The period over which service time was evaluated begins at the start of OH method testing on 8/8/02 and ends at the conclusion of testing on 9/19/02. The amount of time was rounded to the nearest 5 minutes.

<sup>(c)</sup> NA = not applicable.

<sup>(d)</sup> Availability = the ratio of time that the CEM was not experiencing down time to the total time available for monitoring mercury emissions from the start of OH reference method testing on 8/8/02 to the end of testing on 9/19/02. The total time that was available for monitoring was 60,936 minutes or 1,015.6 hours.

---

## Chapter 7

### Performance Summary

The RA of the Argus-Hg 1000 for measuring total vapor-phase mercury was verified by comparison with the results of 18 sampling runs using dual trains of the OH reference method at  $Hg_T$  levels from <1 to 200  $\mu\text{g}/\text{dscm}$ . The overall RA was 76.5%, but if the results of OH Run 16 are excluded, the overall RA was 55.5%.

Correlation of the Argus-Hg 1000  $Hg_T$  results with the OH results showed an  $r^2$  value of 0.839 when all 18 OH results were included. With OH Run 16 excluded, the overall  $r^2$  was 0.976.

Precision of the Argus-Hg 1000 was estimated using two OH sampling periods having relatively stable introduction of mercury in aqueous waste into the TSCAI. The estimated maximum variability attributable to the Argus-Hg 1000 was 10.1% and 22.1% RSD for these two periods.

The bias introduced by the Argus-Hg 1000 sampling system was evaluated by introducing  $Hg^0$  standard gas both at the Argus-Hg 1000 and at the inlet to the sampling system. Sampling system bias was 14.6% in the first bias check and 4.3% and 0.3% in the two checks over a month later.

Mercury gas standards were used to assess the calibration drift of the Argus-Hg 1000 throughout the verification test. Fifteen analyses of an approximately 11.6  $\mu\text{g}/\text{m}^3$   $Hg^0$  standard over six weeks resulted in an RSD of 6.3%. Four analyses of an approximately 38.3  $\mu\text{g}/\text{m}^3$   $Hg^0$  standard over two weeks resulted in an RSD of 5.2%.

Rise and fall times of the Argus-Hg 1000 response were determined at times of switching between the zero and mercury standard gases. The Argus-Hg 1000 achieved 95% rise and fall times in approximately one seven-minute measurement cycle.

The Argus-Hg 1000 data completeness was 91.7%. The most common maintenance needed was to restart the Argus-Hg 1000 after the data system had hung up or gone into error mode. However, this problem did not occur after the vendor implemented a correction in the data acquisition software.

---

## Chapter 8

### References

1. *Test/QA Plan for Field Demonstration of Mercury Continuous Emission Monitors at the TSCA Incinerator*, Revision 3, Battelle, Columbus, Ohio, June 2002.
2. *Standard Test Method for Elemental, Oxidized, Particle-Bound, and Total Mercury in Flue Gas Generated From Coal-Fired Stationary Sources (Ontario Hydro Method)*, American Society for Testing and Materials, Draft Method, September 3, 2001.
3. Dunn, J. E., Jr., Kelly, T. J., and Allen, M. W., “Field Demonstration of Mercury Continuous Emission Monitors at the TSCA Incinerator,” in *Proceedings of the International Conference on Air Quality III: Mercury, Trace Elements, and Particulate Matter*, Arlington, Virginia, September 1-12, 2002.
4. Kelly, T. J., Dunn, J. E., Jr., and Allen, M. W., “Evaluation of Mercury Continuous Emission Monitors at the Oak Ridge TSCA Incinerator: ETV Phase II Verification Test,” presented at the EPRI CEM User’s Group Meeting, San Diego, California, May 13-16, 2003.
5. Dunn, J. E., Jr., Kinder, K. K., Calcagno, J. A. III, Davis, W. T., Geisler, T. J., Allen, M. W., Kelly, T. J., and Priebe, S. J., “Evaluation of Mercury Continuous Emission Monitors at the U.S. DOE TSCA Incinerator,” paper #70249, presented at the Air and Waste Management Association 96th National Conference and Exposition, San Diego, California, June 22-26, 2003.
6. Method 101A – Determination of Particulate and Gaseous Mercury Emissions from Sewage Sludge Incinerators, 40 Code of Federal Regulations 61, Appendix B, pp. 1,731-1,754.
7. Dunn, J., Klamm, S., and Mandel, S., “Status of Mercury Calibration Gas for Mercury CEMs,” presented at the EPRI CEM User’s Group Meeting, San Diego, California, May 13–16, 2003.

- 
8. *Quality Management Plan (QMP) for the ETV Advanced Monitoring Systems Pilot, Version 3.0*, U.S. EPA Environmental Technology Verification Program, Battelle, Columbus, Ohio, December 2001.