

How to Stop, Download, Save, and Send TempTale Download by E-mail

17 May 2016

Instructions for Stopping the TempTale

1. With the TempTale monitor still in the box, look at its LCD display to determine what graphic(s) is/are present. Without picking up the TempTale monitor, press and hold the “Stop button” until the “Stop Sign” icon appears in the upper right corner of the display.
2. If there is NO “Alarm Bell” in the lower right corner of the display, your shipment is suitable for issue. Remove the vaccine from the shipping container and store the vaccine at 2-8 degrees Celsius (36-46F) – DO NOT FREEZE!
3. If there IS an “Alarm Bell” in the lower right corner of the display, your shipment MAY or MAY NOT be suitable for issue. Remove the vaccine from the shipping container and store at 2-8 degrees Celsius (36-46F). Suspend/Quarantine the vaccine and separate the vaccine according to the box/TempTale it came with. Place a sign/note that the vaccine is suspended/quarantined. Include the “10 Digit TempTale Number” that is on the edge of the TempTale.




Go to computer that has TempTale Reader installed and open the Sensitech program



Log-in. The default is:
Login: admin
Password: password




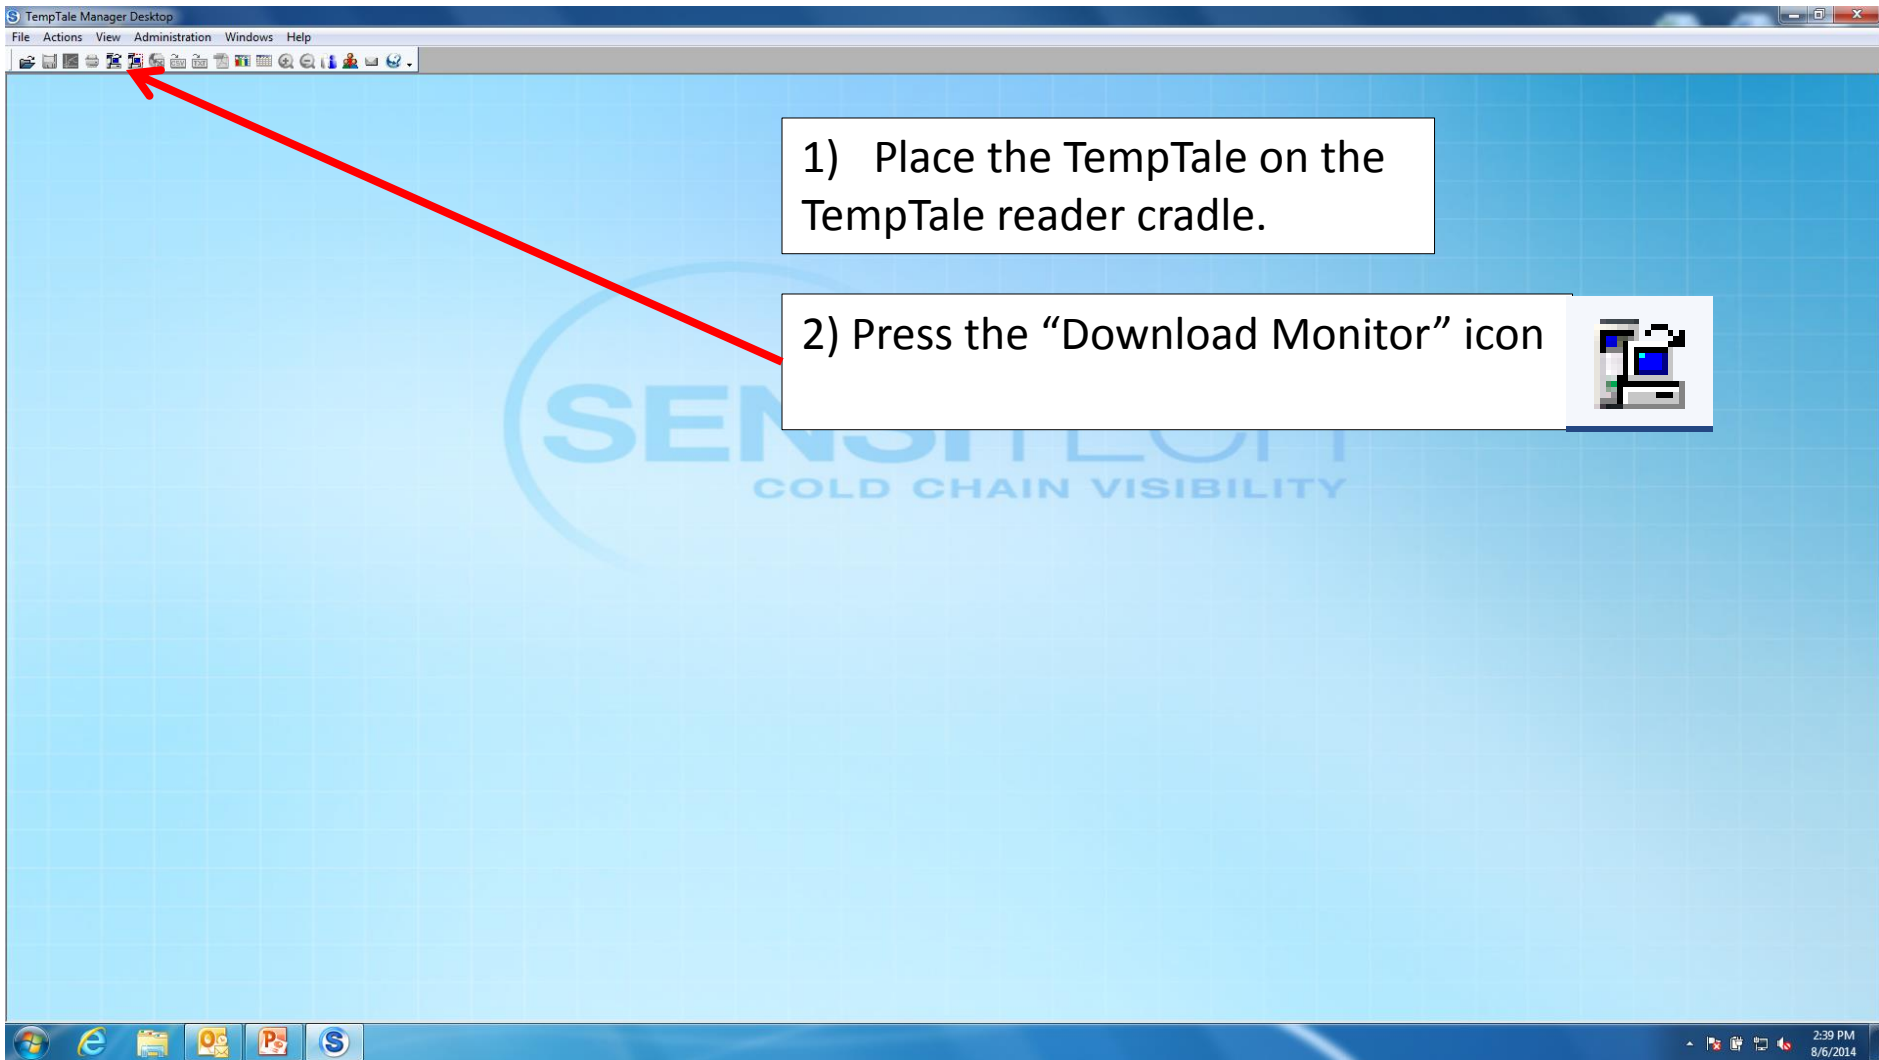

1) Place the TempTale on the TempTale reader cradle.

2) Press the "Download Monitor" icon



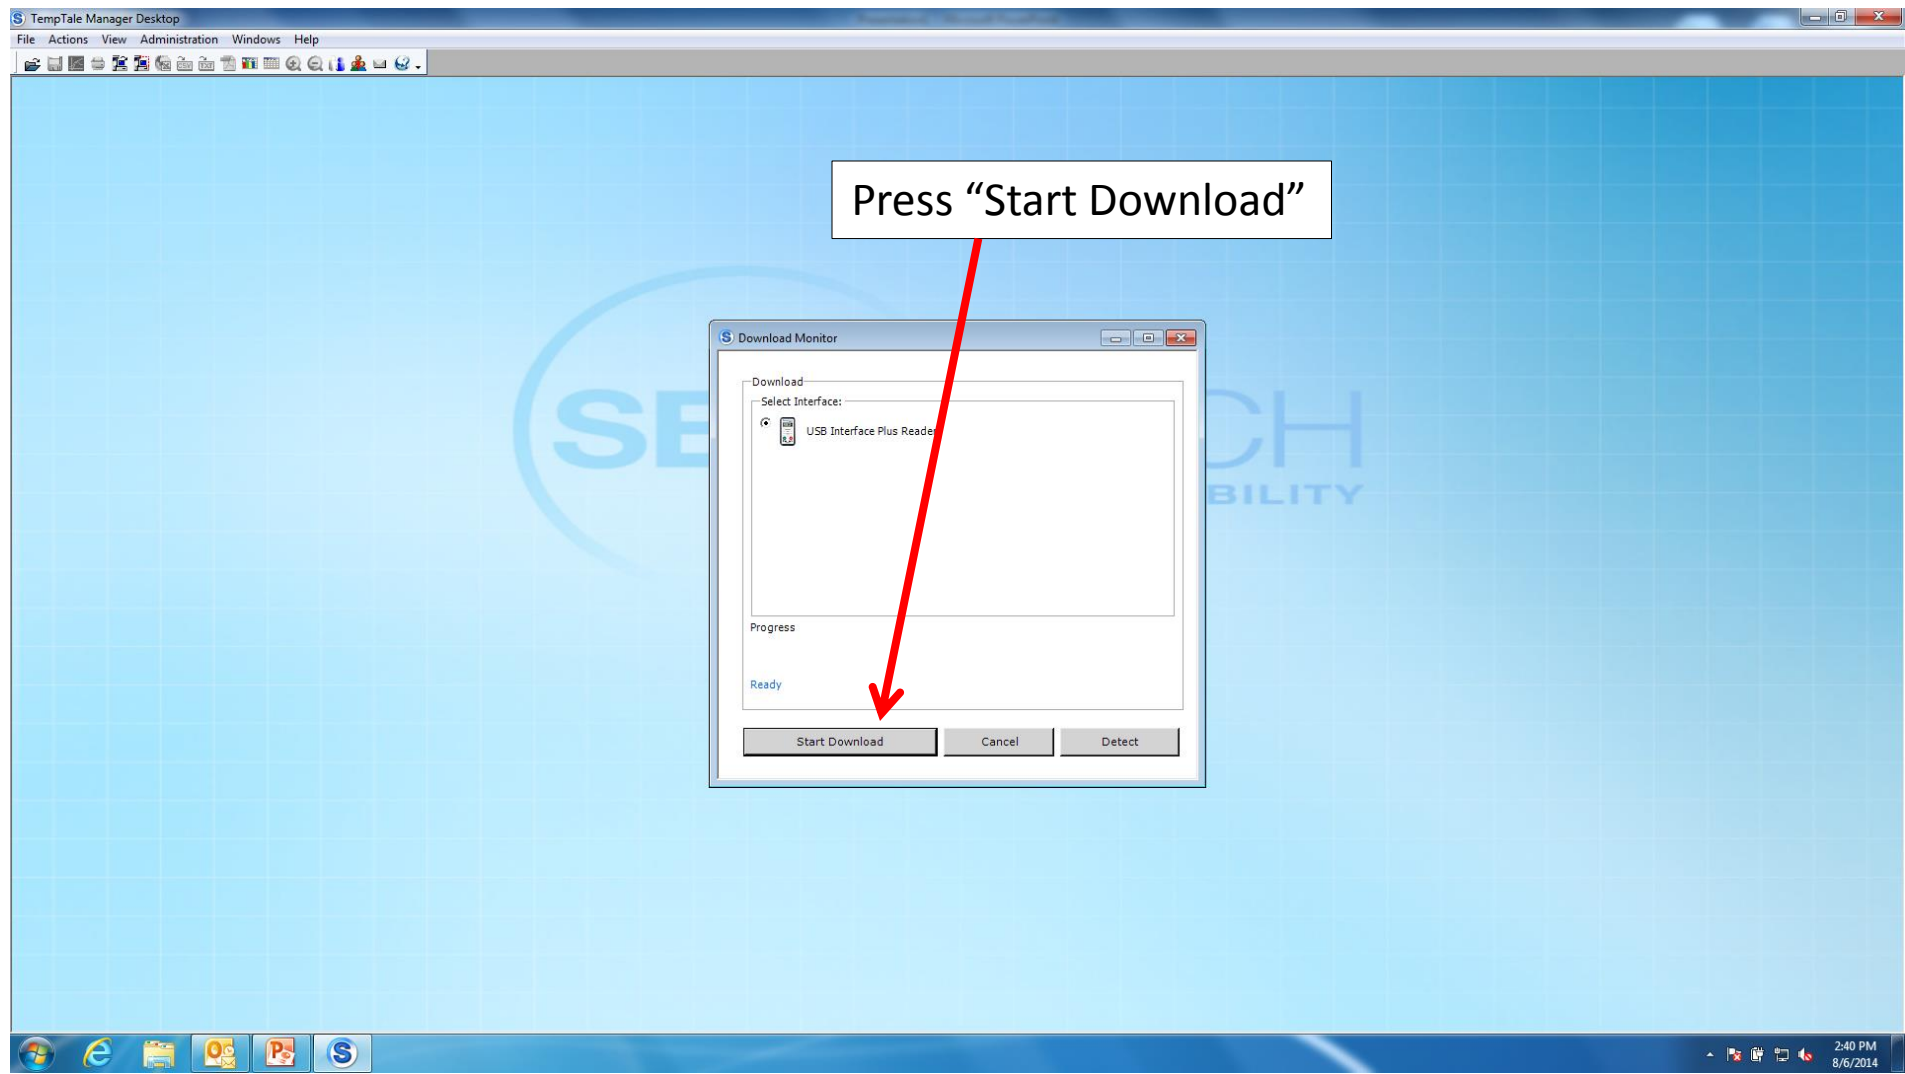

Press "Start Download"

TempTale Manager Desktop - [View Monitor]

File Edit View Administration Windows Help

Graph View Summary View Tabular View Composite View

Celsius Fahrenheit

Primary

Originator Notes:
TempTale4 Trip: 8915 Serial: 3516300235 - 3199 (GMT-04:00)

Temperature (°C)

Date / Time

■ Primary: Ambient(*)

(*) minimum 2 points required to draw a line


First Recorded Point:
10/2/2013 9:18:01 AM


Displaying: 1 points

Last Recorded Point:
10/2/2013 9:18:01 AM

Comments:

Windows taskbar: 2:42 PM 8/6/2014

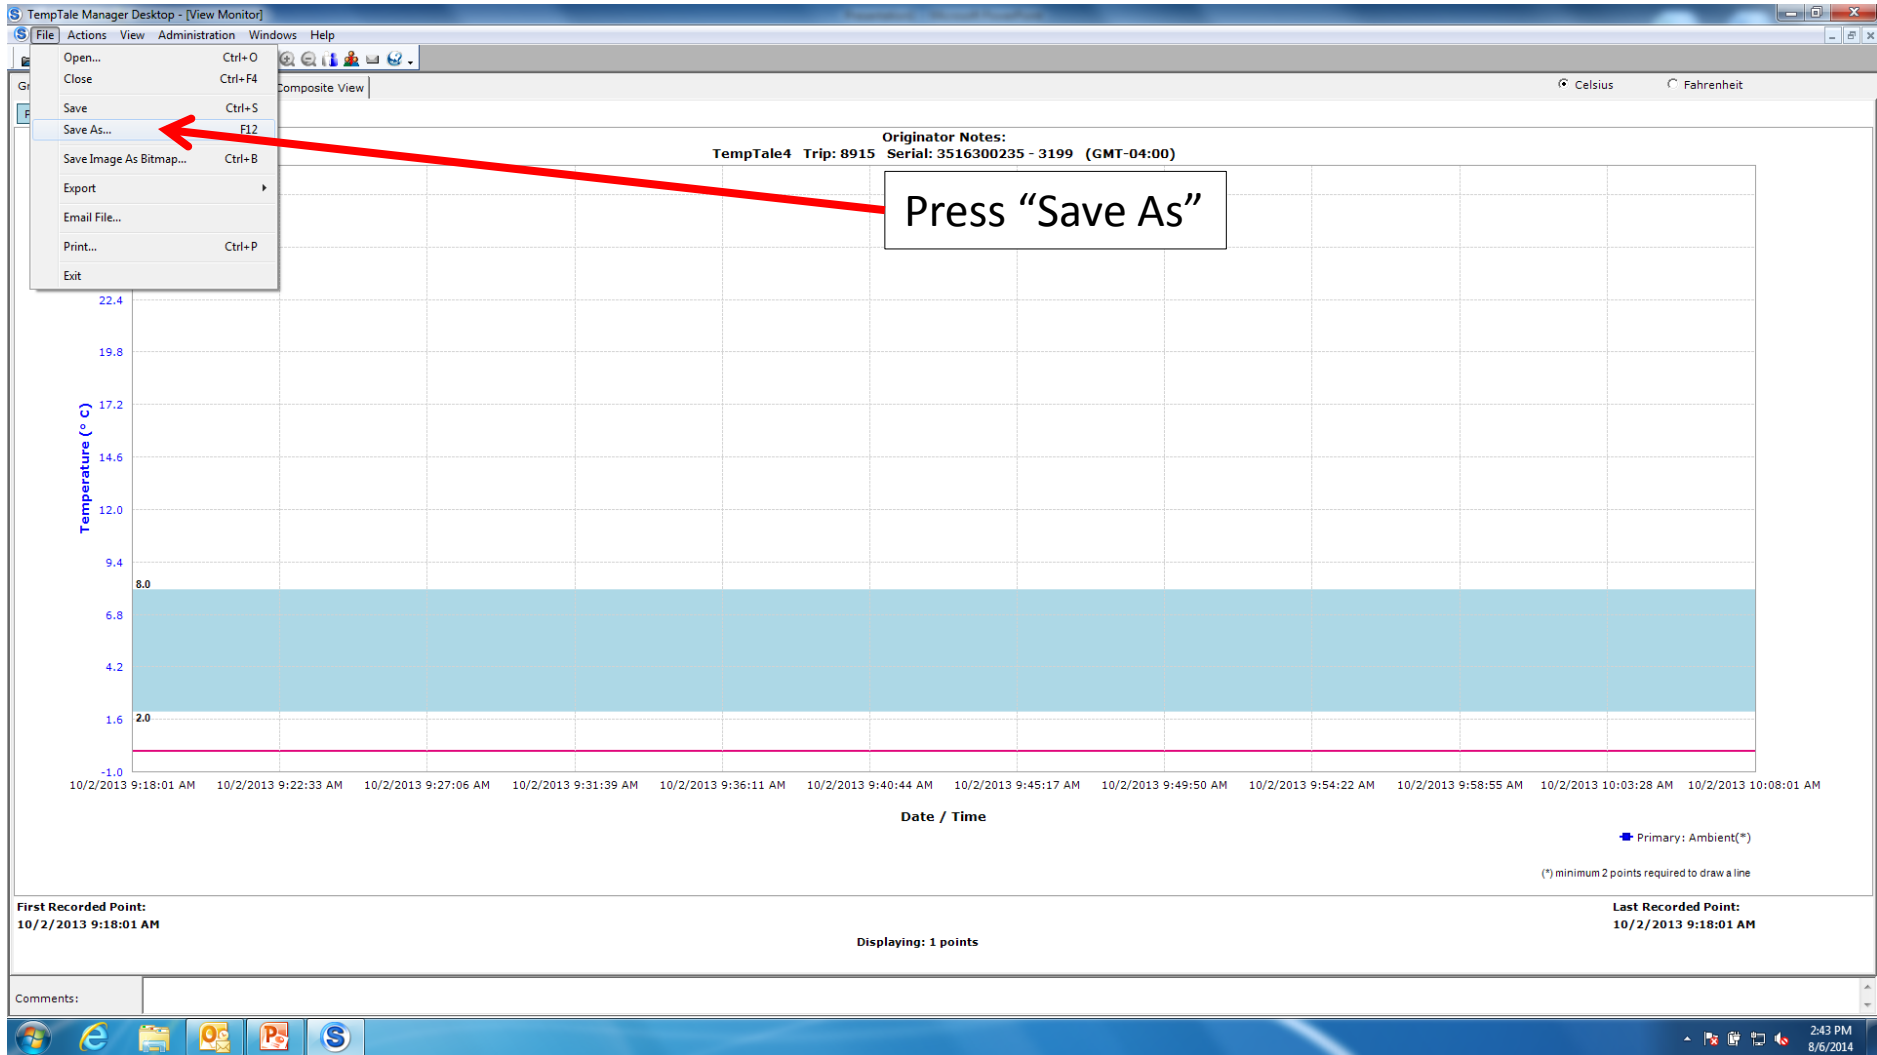

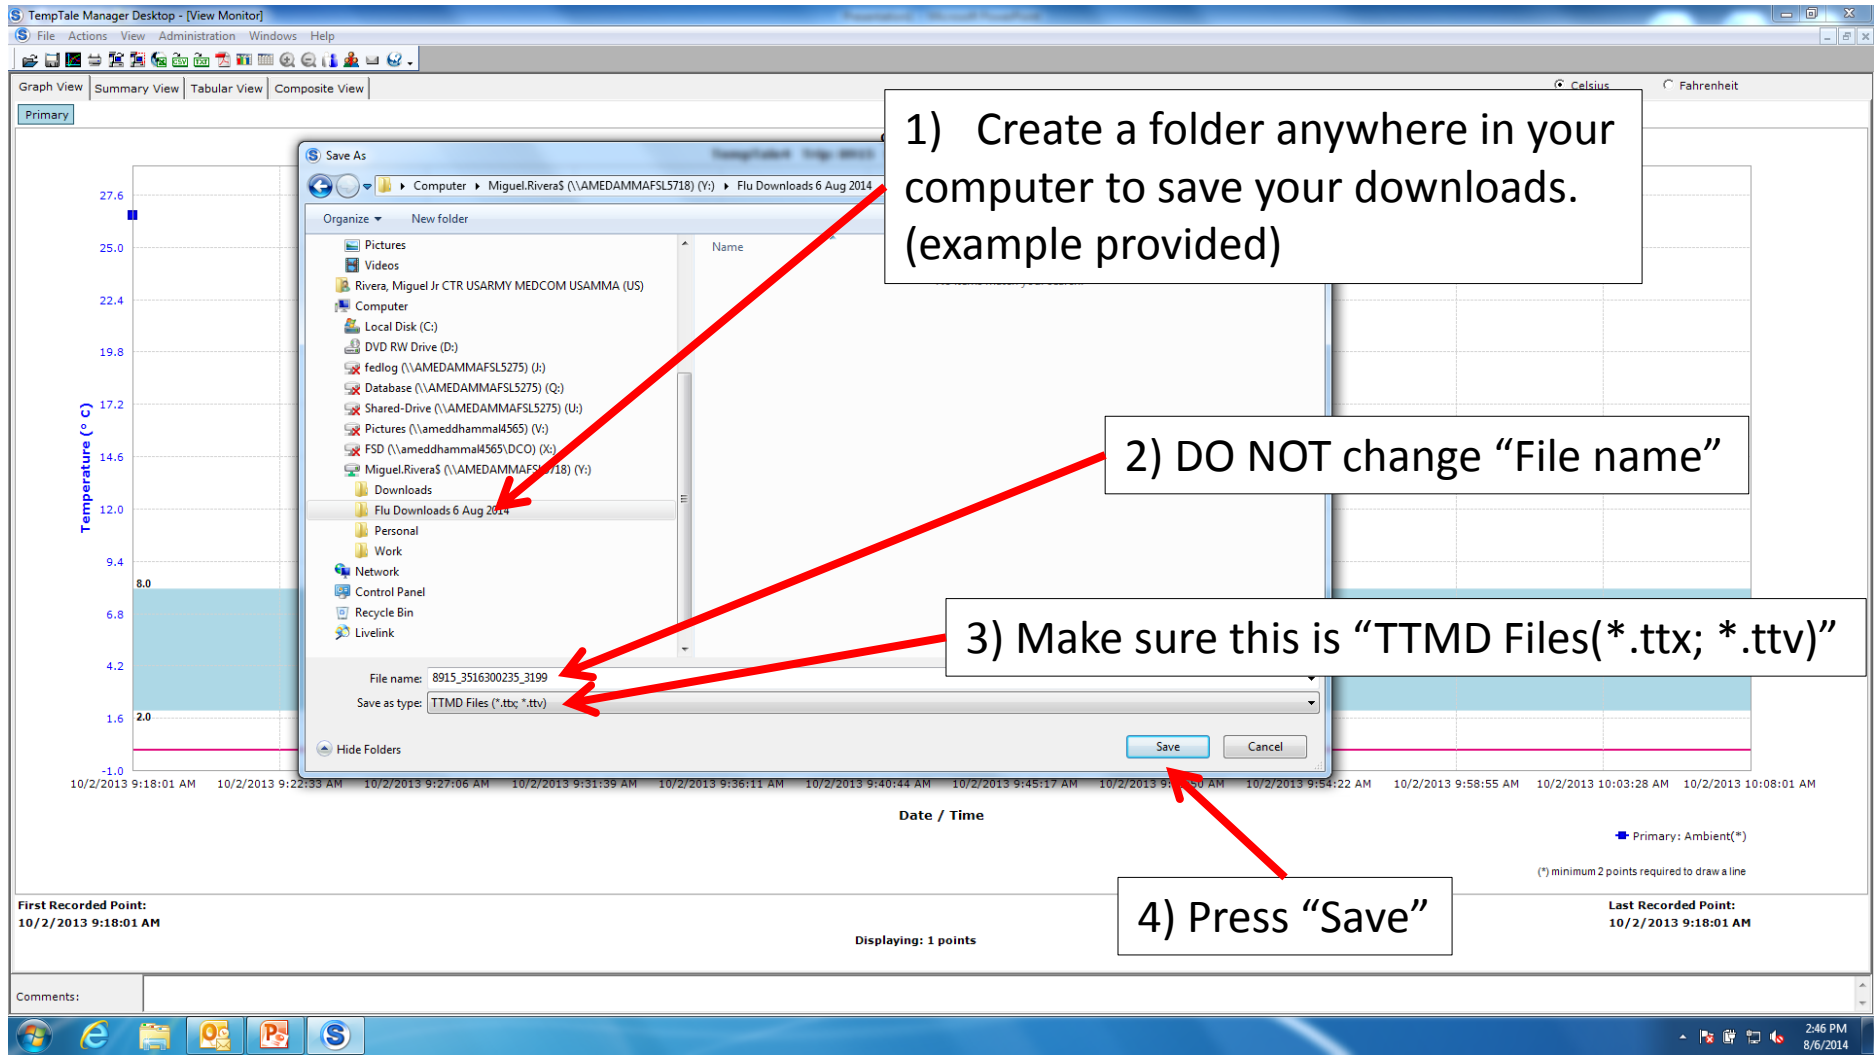


1) Create a folder anywhere in your computer to save your downloads. (example provided)

2) DO NOT change "File name"

3) Make sure this is "TTMD Files(*.ttv; *.ttv)"


4) Press "Save"

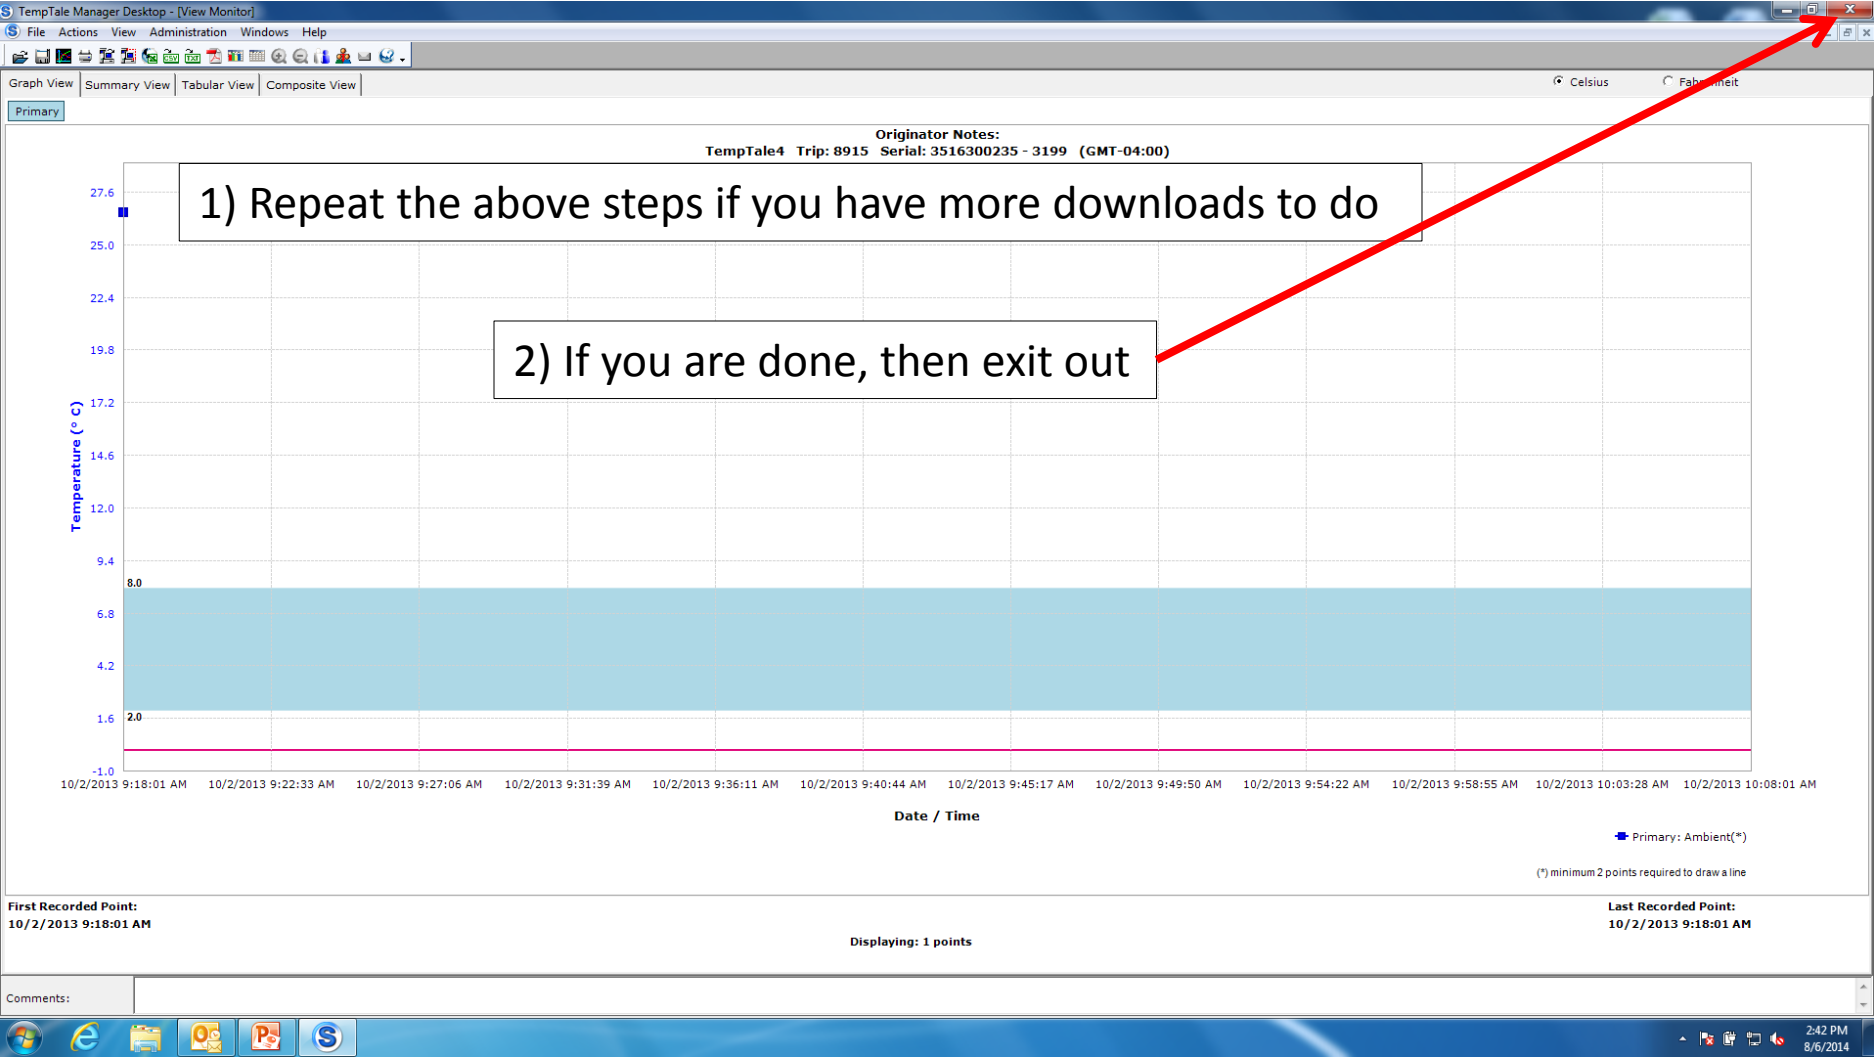


- 1) Fill out the form that is included with each box.
- 2) Scan the forms in one PDF file.
- 3) Save the scanned PDF file in your computer in same folder you saved the TempTale downloads.

DO NOT FREEZE!
MONITORS TO DLA-TS MEDICAL
– TEST IT WHILE IT IS
BOX

(s) is/are present. If the screen is **BLANK, DAMAGED,**
 pTale is running (a Sunshine icon will be displayed), without

picking the monitor up, press and hold the **STOP** button for 1 to 3 seconds until the "Stop Sign" icon  appears in the upper right corner of the display. If the TempTale has already been Stopped (i.e. the icon is already present), move on to Step 2 or 3, as appropriate. NOTE: there will be no audible sounds.

2. If there is **NO ALARM BELL** in the lower right corner of the display, your shipment is **SUITABLE FOR ISSUE**. Remove the vaccine from the shipping container and store the vaccine at 2-8 degrees Celsius (36-46F) - **DO NOT FREEZE!** Proceed to Step 4 to **RETURN THIS FORM AND THE TEMPTALE** to DLA-TSM within at least 24hrs of receipt so that the data can be archived (disposition is not required, the material is suitable for immediate use).

3. If there IS an **ALARM BELL** icon  in the lower right corner of the display, your shipment MAY or MAY NOT be suitable for issue. Remove from the container, store at 2-8 degrees Celsius (36-46F), and temporarily **SUSPEND THE MATERIAL FROM USE** (do not discard). IF you have the TempTale Manager software, download the monitor data and e-mail it to Dana.Dallas@dla.mil and Nancy.Collins@dla.mil. If you DO NOT, return your TempTale immediately using the included pre-addressed/pre-paid FedEx materials to DLA-TSM/FSAB and **AWAIT A DISPOSITION DECISION** from them via email (which will indicate whether the material can be used, or if it should be discarded and reordered/reshipped).

4. Complete **ALL** of the information in the box below, **KEEP A COPY** for your records, and mail this completed sheet **WITH** the TempTale to Dana Dallas or Nancy Collins at DLA Troop Support Medical (Philadelphia) using the FedEx materials provided. Contact Dana Dallas at (215) 737-5537, DSN: 444-5537, Dana.Dallas@dla.mil; or Nancy Collins at (215) 737-5365, Nancy.Collins@dla.mil if you have any questions. DLA Troop Support Medical's address is: DLA-TSM/FSAB, Attn: Dana Dallas, 700 Robbins Ave., Bldg. 6A, Philadelphia, PA 19111-5096.

For your protection, send the monitor back by FedEx (or other certified/traceable means), and be sure to maintain a copy of this form and tracking info. Wherever/Whenever possible, avoid using US Mail, US Postal Service, US Navy Ship Mail, etc.


MONITOR DISPLAY? (Circle):	ALARM	NO ALARM	PRODUCT (Circle):	FLU	TYPHOID	JE VAC	PB TABS	OTHER
				(Vial or Syringe?)	(Oral or Injectable?)			
DOCUMENT / REQUISITION #:	W81BU842118000			Product Name(s): <u>Fluzone</u>				
FEDEX TRACKING#	804747035657			NDC/Part#(s): <u>4928151425</u>				
DATE & TIME MONITOR RECEIVED:	9:43 CST SAUG (Note Time Zone)			TELEPHONE # (To include DSN Prefix): <u>123-456-7890</u>				
YOUR NAME:	PVT Joe Snuffy			QUANTITY (in vials, pkgs, syringes, etc.): <u>125</u>				
YOUR SHIP NAME, FACILITY, and/or DODAAC/UIC:	Camp IMSA			TempTale Serial #(s) <u>3516300235</u>				
BASE, POST, and/or LOCATION RECEIVED:	Fort Anywhere			(10-Digit # located on top edge of the TempTale)				
YOUR EMAIL ADDRESS:	<u>Joe.Snuffy.mil@mail.mil</u>							

DO NOT FREEZE!

DO NOT FREEZE!

DO NOT FREEZE!

1) Find e-mail in Outlook that was sent to you with Tracking numbers for the shipment and press "Reply to All"



This message was sent with High importance.
From: Smith, Mark Randal CIV (US)
To: Rivera, Miguel Jr CTR USARMY MEDCOM USAMMA (US); Bess, Teresa E CIV USARMY MEDCOM USAMMA (US); Dallas, Dana L CIV DLA TROOP SUPPORT (US); Nancy.Collins@dla.mil
Cc: Ivy, Sharon M CIV USARMY MEDCOM BACH (US); Higginbotham, John M CPT USARMY MEDCOM BACH (US); Newman, Gary CIV USARMY MEDCOM BACH (US); Sanchez, Ricardo J CIV USARMY MEDCOM BACH (US); Leon Guerrero, Frances J CIV USARMY MEDCOM BACH (US); Lockhart, Deidre B MAJ USARMY MEDCOM BACH (US)
Subject: FW: 6505-01-627-2023 - Campbell (4AUG2014) (UNCLASSIFIED)

Message 3525103050_3525103050_0.ttx (6 KB) 6505.01.627.2023.W81B1B42118000B_8_5_2014_10_2_15.pdf (82 KB)

ALCON
Please open and view the attachments. There will be a total of 3 attachments. Information requested is below.

2) Attach ALL TempTale downloads for each box that pertains to this e-mail. ("Alarmed" and "Not Alarmed")

NO
1.. L
2. Q
3. Ex
Thar
vVr
Mar

3) Attach the "PDF" scanned document

4) Make sure this e-mail also goes to:
miguel.rivera13.civ@mail.mil
dana.dallas@dla.mil
nancy.collins@dla.mil

-----Original Message-----
From: Leon Guerrero, Frances J CIV USARMY MEDCOM BACH (US)
Sent: Tuesday, August 05, 2014 10:07 AM
To: Smith, Mark Randal CIV (US)
Subject: FW: 6505-01-627-2023 - Campbell (4AUG2014) (UNCLASSIFIED)
Importance: High

Classification: UNCLASSIFIED
Caveats: NONE

-----Original Message-----
From: Rivera, Miguel Jr CTR USARMY MEDCOM USAMMA (US)
Sent: Monday, August 04, 2014 3:08 PM
To: Wilson, Andrew W CPT USARMY MEDCOM USAMMCE (US); Higginbotham, John M CPT USARMY MEDCOM BACH (US); Parker, Nicole CIV (US); Newman, Gary CIV USARMY MEDCOM BACH (US); Sanchez, Ricardo J CIV USARMY MEDCOM BACH (US)
Cc: Bess, Teresa E CIV USARMY MEDCOM USAMMA (US)
Subject: NSN: 6505-01-627-2023 - Campbell (4AUG2014) (UNCLASSIFIED)

Classification: UNCLASSIFIED
Caveats: NONE

See more about: Smith, Mark Randal CIV (US).

If you have any questions please contact:
Miguel Rivera: 301-619-4128