Disdrometer and Tipping Bucket Rain Gauge Handbook

January 2006

M.J. Bartholomew

Work supported by the U.S. Department of Energy, Office of Science, Office of Biological and Environmental Research

Contents

1.	General Overview	.1
2.	Contacts	.1
3.	Deployment Locations and History	.1
	Near-Real-Time Data Plots	
5.	Data Description and Examples	.2
6.	Data Quality	.8
7.	Instrument Details	.9

Figures

Figure 1	System Wiring Diagram.	10
Figure 2	Data Aqcuisition Enclosure 1	11
Figure 3	Data Acquisition Enclosure 2	12

1. General Overview

The Distromet disdrometer model RD-80 and Novalynx tipping bucket rain gauge model 260-2500E-12 are two devices deployed a few meters apart to measure the character and amount of liquid precipitation. The main purpose of the disdrometer is to measure drop size distribution, which it does over 20 size classes from 0.3mm to 5.4mm. The data from both instruments can be used to determine rain rate. The disdrometer results can also be used to infer several properties including drop number density, radar reflectivity, liquid water content, and energy flux. Two coefficients, N₀ and Λ , from an exponential fit between drop diameter and drop number density, are routinely calculated. Data are collected once a minute.

The instruments make completely different kinds of measurements. Rain that falls on the disdrometer sensor moves a plunger on a vertical axis. The disdrometer transforms the plunger motion into electrical impulses whose strength is proportional to drop diameter. The rain guage is the conventional tipping bucket type. Each tip collects an amount equivalent to 0.01 inch of water and each tip is counted by a data acquisition system anchored by a Campbell CR1000 data logger.

2. Contacts

2.1 Mentor

Mary Jane Bartholomew Brookhaven National Laboratory MS 490D Upton, NY 11973 Phone: 631-344-2444 Fax: 631-344-2060 bartholomew@bnl.gov

2.2 Instrument Developer

Distromet LTD Basel, Switzerland www.disdtromet.com

NovaLynx Corp. Grass Valley, CA www.novalynx.com

3. Deployment Locations and History

One system will be deployed at the Darwin TWP site in December of 2005 and the other will go to the SGP central facility early in the spring of 2006.

4. Near-Real-Time Data Plots

This section is not applicable for these instruments.

5. Data Description and Examples

5.1 Data File Contents

Data Streams XxxdisdrometerC1.00 XxxdisdrometerC1.b1 XxxrainC1.00 XxxrainC1.b1 XxxrainauxC1.00 XxxraiauxnC1.b1 Where xxx = three leter site designation.

5.1.1 Primary Variables and Expected Uncertainty

The variables for the disdrometer and tipping bucket rain gauge are listed in Tables 1 and 2.

Primary Variables for Disdrometer and Tipping Bucket Rain Gauge

Table 1 Disdrometer Variables, datastream ************************************						
Quantity	Variable	Measurement Interval	Unit	Manufacturer variable name		
			seconds since YYYY-			
base time in			mm-dd XX:XX:XX			
epoch	base_time	1 min	X:XX			
			seconds since YYYY-			
time offset from			mm-dd XX:XX:XX			
base_time	time_offset	1 min	X:XX			
			seconds since YYYY-			
time offset form			mm-dd XX:XX:XX			
midnight	time	1 min	X:XX			
north latitude	lat	constant	degrees			
east longitude	lon	constant	degrees			
altitude	alt	constant	meters above sea level			
instrument serial						
number	serial_number	constant				
calibration date	calib_date	constant				
				RA		
precipitation	precip_dis	1 min	millimeters	rain amount		
number of drops	num_drop	1 min	integer	n		
				D		
				_		
average diameter	1 1	1 .		Average diameter		
of drop class	drop_class	1 min	millimeters	of drops in class R		
rain rate	rain_rate	1 min	millimeters/hr	Rainfall rate		
				Dmax		
				Largest drop		
largest drop	d_max	1 min	millimeters	registered		
<u> </u>				N(D)		
number density	nd	1 min	$1/(m^3 \cdot m)$	Number density		
				v(D)		
fall velocity	fall_vel	constant	m/s	fall velocity		
1						
diameter interval						
between drop size				ΔD		
classes	delta_diam	constants	millimeters	delta diameter		
				Wg		
liquid water			2	Liquid water		
content	liq_water	1 min	grams/meter ³	content		

				ZdB
				Radar reflectivity
radar reflectiviey	zdb	1 min	dB	factor
				EF
energy flux	ef	1 min	joules/(meter ² \cdot hour)	Energy Flux
				Λ
distribution slope	lambda	1 min	1/millimeter	slope
distribution				N ₀
intercept	n_0	1 min	$1/(\text{meters}^3 \cdot \text{millimeters})$	intercept

Note: lat/lon/alt refers to the ground where the instrument is sited, NOT the height of the sensor.

Quantity	Variable	Measurement Interval	Unit
			seconds since YYYY-mm-dd
base time in Epoch	base_time	1 min	XX:XX:XX X:XX
-	Uase_time	1 11111	
time offset from	(1	seconds since YYYY-mm-dd
base_time	time_offset	1 min	XX:XX:XX X:XX
time offset form			seconds since YYYY-mm-dd
midnight	time	1 min	XX:XX:XX X:XX
north latitude	lat	constant	degrees
east longitude	lon	constant	degrees
altitude	alt	constant	meters above sea level
calibration date	calib_date	constant	
instrument serial			
number	serial_number	constant	
precipitation	precip_tbrg	1min	millimeters
rainfall rate	rain_rate	1 min	millimeters/hour

Note: lat/lon/alt refers to the ground where the instrument is sited, NOT the height of the sensor.

Expected Uncertainty

The disdrometer measures rain drop size over the range of 0.3mm to 5.4mm once a minute. The expected uncertainty is 3% of drop diameter for those drops landing on the very center of the sensor. Mainly due to the fact, that the sensitivity of the sensor is somewhat dependent on the location of a drop impact on the sensitive surface of the sensor cone the pulse amplitudes of drops of equal diameter will form a distribution around the average amplitude. The standard deviation of this distribution, transformed into drop diameters, is approximately +/- 5% if the drops are distributed evenly over the sensitive surface. The specified accuracy of a drop size measurement of +/- 5% of the measured drop diameter means, that the average measured diameter of a large number of drops of equal diameter. Typical values for the drop size classes, termainal fall velocities and diameter intervals are listed in Table 3.

Table 5 Drop Class Specifics						
Average	Fall	Diameter				
diameter of	velocity of	interval				
drops in	a drop in	between				
each class	each class	drop				
mm	m/s	classes				
		mm				
0.359	0.455	0.551				
0.656	0.771	0.913				
1.116	1.331	1.506				
1.665	1.912	2.259				
2.584	2.869	3.198				
3.544	3.916	4.350				
4.859	5.373	1.435				
1.862	2.267	2.692				
3.154	3.717	4.382				
4.986	5.423	5.793				
6.315	7.009	7.546				
7.903	8.258	8.556				
8.784	8.965	9.076				
9.137	0.092	0.100				
0.091	0.119	0.112				
0.172	0.233	0.197				
0.153	0.166	0.329				
0.364	0.286	0.284				
0.374	0.319	0.423				
0.446	0.572	0.455				

Table 3 Drop Class Specifics

Precipitation amounts measured by the rain gauge are reported once a minute with an uncertainty of 0.001mm.

5.1.1.1 Definition of Uncertainty

We define uncertainty as the range of probable maximum deviation of a measured value from the true value within a 95% confidence interval. Given a bias (mean) error *B* and uncorrelated random errors characterized by a variance σ^2 , the root-mean-square error (RMSE) is defined as the vector sum of these,

$$RMSE = \left(B^2 + \sigma^2\right)^{1/2}$$

(*B* may be generalized to be the sum of the various contributors to the bias and σ^2 the sum of the variances of the contributors to the random errors). To determine the 95% confidence interval we use the Student's *t* distribution: $t_{n;0.025} \approx 2$, assuming the RMSE was computed for a reasonably large ensemble. Then the *uncertainty* is calculated as twice the RMSE.

5.1.2 Secondary/Underlying Variables

This section is not applicable to this instrument.

5.1.3 Diagnostic Variables

When the rainfall rate is between 1 and 10 mm/hr for several hours, a comparison with the tipping bucket rain gauge is warranted. In such cases the total rain amounts over the event should agree to within 15%. Otherwise the best indicators of instrument health and performance are carried out via monitoring the quality control flags discussed in the next section.

5.1.4 Data Quality Flags

If the data is missing for a sample time, a "missing_value" value of -999 is assigned to that field.

Quantity	Variable	Measurement Interval	Min	Max	Delta
sample time	qc_time	1 min			
precipitation total	qc_precip_dis	1 min	0	10	N/A
number of drops	qc_numdrop	1 min	0	none	N/A
rain rate	qc_rain_rate	1 min	0	none	N/A
d_max		1 min	0	10	
ef		1 min	0	4000	
liq_water		1 min	0	100	

 Table 4 Disdrometer Data Quality Variables

Quantity	Variable	Measurement Interval	Min	Max	Delta
sample time	qc_time	1 min			
precipitation total	qc_precip_tbrg	1 min	0	10	N/A
battery voltage	qc_vbat	60 min	9.6	16	N/A
battery minimum	qc_batt_min	60 min	9.6	16	
battery maximum	qc_batt_max	60 min	9.6	none	
panel temperature	qc_panel_temp	60 min	-25.0	50.0	N/A
panel temperature minimum	qc_panel_min	60 min	-25.0	50.0	N/A
panel temperature maximum	qc_panel_max	60 min	-25.0	50.0	N/A

Table 5 Tipping Bucket Data Quality Flags

5.1.5 Dimension Variables

Table 6 Disdrometer Dimension Variables

Quantity	Variable	Measurement Interval	Unit
			seconds since YYYY-mm-dd
Base time in Epoch	base_time	1 min	XX:XX:XX X:XX
Time offset from			seconds since YYYY-mm-dd
base_time	time_offset	1 min	XX:XX:XX X:XX
Time offset form			seconds since YYYY-mm-dd
midnight	time	1 min	XX:XX:XX X:XX
north latitude	lat	once	degrees
east longitude	lon	once	degrees
altitude	alt	once	meters above sea level

Note: lat/lon/alt refers to the ground where the instrument is sited, NOT the height of the sensor.

Quantity	Variable	Measurement Interval	Unit
			seconds since YYYY-mm-dd
Base time in Epoch	base_time	1 min or 30 min	XX:XX:XX X:XX
Time offset from			seconds since YYYY-mm-dd
base_time	time_offset	1 min or 30 min	XX:XX:XX X:XX
Time offset form			seconds since YYYY-mm-dd
midnight	time	1 min or 30 min	XX:XX:XX X:XX
north latitude	lat	once	degrees
east longitude	lon	once	degrees
altitude	alt	once	meters above sea level

Table 7 Tipping Bucket Dimension Variables

Note: lat/lon/alt refers to the ground where the instrument is sited, NOT the height of the sensor.

5.2 Annotated Examples

5.3 User Notes and Known Problems

5.4 Frequently Asked Questions

6. Data Quality

6.1 Data Quality Health and Status

The following links go to current data quality health and status results:

- <u>DQ HandS</u> (Data Quality Health and Status)
- <u>NCVweb</u> for interactive data plotting using.

The tables and graphs shown contain the techniques used by ARM's data quality analysts, instrument mentors, and site scientists to monitor and diagnose data quality.

6.2 Data Reviews by Instrument Mentor

- **QC frequency:** Once or twice a week
- **QC delay:** Three days behind the current day
- QC type: DSview plots for instrument operation status, otherwise DQ HandS diagnostic plots
- Inputs: None
- **Outputs:** DQPR and DQR as needed
- **Reference:** None.

6.3 Data Assessments by Site Scientist/Data Quality Office

All Data Quality Office and most Site Scientist techniques for checking have been incorporated within <u>DQ HandS</u> and can be viewed there.

6.4 Value-Added Procedures and Quality Measurement Experiments

Many of the scientific needs of the ARM Program are met through the analysis and processing of existing data products into "value-added" products or VAPs. Despite extensive instrumentation deployed at the ARM sites, there will always be quantities of interest that are either impractical or impossible to measure directly or routinely. Physical models using ARM instrument data as inputs are implemented as VAPs and can help fill some of the unmet measurement needs of the program. Conversely, ARM produces some VAPs, not in order to fill unmet measurement needs, but to improve the quality of existing measurements. In addition, when more than one measurement is available, ARM also produces "best estimate" VAPs. A special class of VAP, called a Quality Measurement Experiment (QME), does not output geophysical parameters of scientific interest. Rather, a QME adds value to the input datastreams by providing for continuous assessment of the quality of the input data based on internal consistency checks, comparisons between independent similar measurements, or comparisons between measurement with modeled results, and so forth. For more information, see <u>VAPs and QMEs</u> web page.

7. Instrument Details


7.1 Detailed Description

A detailed discussion of the disdrometer instrumentation and technique can be found in Section 9 of the users handbook. See <u>RD-80 Manual Dec 04.pdf</u>

See <u>260-2500e-manual.pdf</u> for a discussion of the tipping bucket rain gauge.


7.1.1 List of Components

The sensors are well described in the links mentioned above. The other components of the system comprise the data acquistion system. Two waterproof enclosure boxes house the electronics used to collect and send the data to the site data management facility. Figure 1 shows the wiring diagram and Figures 2-3 show close up views of the data acquisition electronics.

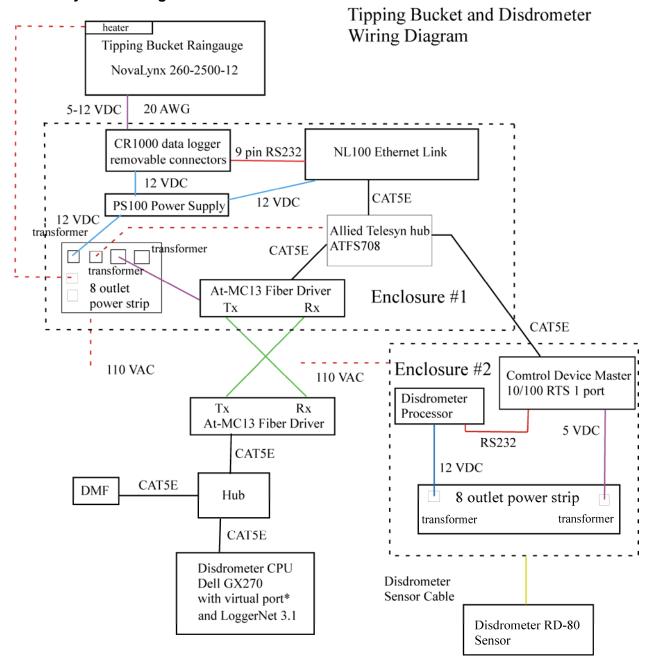

7.1.2 System Configuration and Measurement Methods

Figure 1

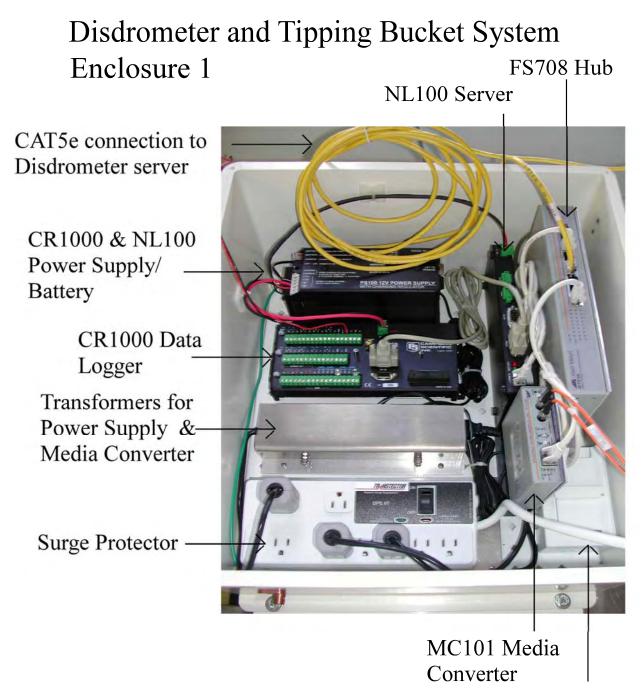

Power Outlet

<u>Not Shown</u> incoming 110-120V 60Hz power incoming Tipping Bucket Signal Cable on pulse channel one

Figure 2

Disdrometer and Tipping Bucket System Enclosure 2

CAT5e Connection to Hub in Enclosure 1

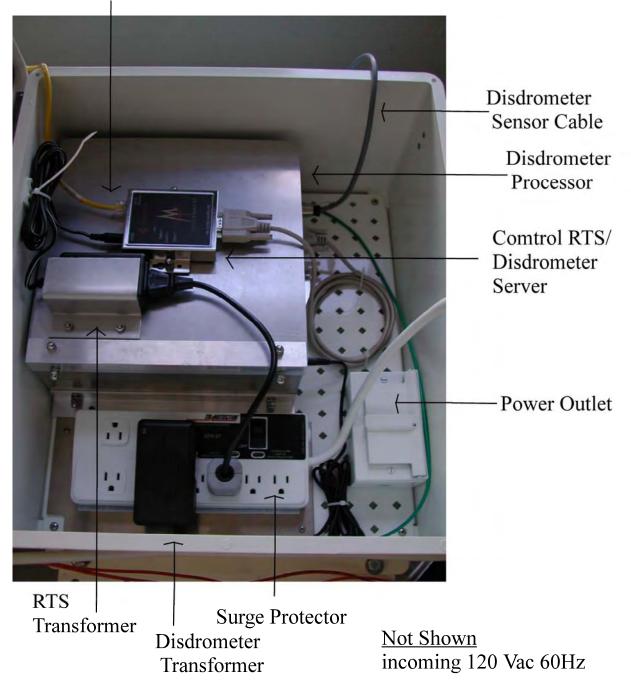


Figure 3

The Data Acquisition Cycle

During normal operation, both the disdrometer and the rain gauge make measurements once a minute.

Firmware Overview

Processing Received Signals

The disdrometer's manufacturer provides software for data acquisition, analysis and inspection. The program is called Disdrodata and it runs on a personal computer (Figure 3), which in this case is an ARM Core PC, Dell GX620 running Windows XP.

Data acquisition for the tipping bucket rain gauge is carried out with a CR1000 Campbell Scientific data logger. The CRBasic code can be found at <u>NOVA2CR1000.CR1</u>

Siting Requirements

The disdrometer needs a level firm base and a quiet environment because acoustic noise can be detected by the sensor. Strong winds which produce turbulence at the edges of the sensor, are a source of error as well. Mounting the top of the sensor flush with its surroundings minimizes the wind problem. Furthermore, the sensor must not be flooded. Furthermore, the top of the sensor needs to be free of snow. Lastly, external sources of electromagnetic fields and power surges can interrupt and influence the measurements made by the disdrometer.

The site requirements for the rain gauge include a solid footing and a relatively sheltered area. A wind screen will be required for an open SGP prairie installation and may be needed in Darwin as well. Objects near by should be at least twice as far away as their height. If snowfall can be expected at the site, the opening of the gauge should be above average snow level.

7.1.3 Specifications

The disdrometer specification can be found in Section 4 of the users manual. See <u>RD-80 Manual Dec</u> <u>04.pdf</u>

7.2 Theory of Operation

7.3 Calibration

The disdrometer sensor and processor will be sent to Distromet for calibrations once a year. This should be done during the winter at SGP and during the driest time of the year for Darwin.

The tipping bucket gauges should follow the procedures used for the SMOS system. Currently a tip test is conducted once every 2 weeks. When ARM's dynamic calibration system is ready, a full calibration should be done once a year.

7.3.1 Theory

7.3.2 Procedures

This section is not applicable to this instrument.

7.3.3 History

Both devices were last calibrated in the fall of 2005.

7.4.1 User Manuals

Disdrometer Manual- <u>RD-80 Manual Dec 04.pdf</u> Tipping Bucket Rain Gauge Manual- <u>260-2500e-manual.pdf</u>

7.4.2 Routine Operation and Maintenance

Frequency: weekly

Inspection of site grounds near the instrument:

Visually check the site grounds around the instrument for hazards such as rodent burrows, buried conduit trench settling, and insect nests.

Checklist response:

No Problems Noted

Problem - Enter any applicable comments for this PM Activity

Visual inspection of instrument components:

Conduit, Cables, and Connectors:

Check that all the conduits on the bottom of the control boxes are secure. Check all conduits from the control boxes to the sensors for damage. Check all sensor wires inside the control box for tightness and damage. Check all the connections at the sensors for damage, water intrusion, and tightness.

<u>Checklist response:</u> No Problems Noted Problem - Enter any applicable comments for this PM Activity

Check status of LED on CR1000 data logger

LED should flash once every second during normal operation

Checklist response:

No Problems Noted Problem - Enter any applicable comments for this PM Activity

Check status of power LED on disdrometer processor

Green LED/power switch should be lit.

<u>Checklist response:</u> No Problems Noted Problem - Enter any applicable comments for this PM Activity

Check clock values shown on LoggerNet connect screen:

The station clock should automatically be set to server clock if times differ by 1 second or more. This automatic check is done once a day by the LoggerNet program. The times should never differ by more than 1 minute. <u>Checklist response:</u> No Problems Noted Problem - Enter any applicable comments for this PM Activity

Active maintenance and testing procedures

Rain Gauge:

Remove the rain gauge funnel and ensure that both the large and small funnels are clear of debris. Check the wiring and connector for tightness and the housing for debris and damage. Inspect all conduits and cables. Re-install the rain gauge funnel.

Checklist response:

No Problems Noted Problem - Enter any applicable comments for this PM Activity

Rain Gauge tip test

1) Set flag 7 to high using the port and flags utility within the LoggerNet program running on the system's computer and log the time when the flag was set

2) A red led should now light up on Com port 5 of the CR1000 device in Enclouser 1

3) Remove the funnel from the top of the rain gauge and manually tip the rain gauge bucket several times to make sure that it is free to move

4) If desired the flag_tot variable can be checked. It should be equal the number of manual tips.

5) Check output of variable rain_mm; should be equal to # tips x 0.254.

6) Reset flag 7 to low or 0 and log the time that the flag was reset.

Checklist response:

No problems noted Problem - Enter any applicable comments for this PM Activity

Disdrometer maintenance

Keep sensor free of leaves and/or other debris

Disdrometer testing

The disdrometer has an internal circuit for testing the processor and presence of the sensor.

1) push the test button (no need to hold this down)

2) LED # 4 on processor front panel should light and the sensor should produce a faint 1000Hz sound.

3) If LED #4 does not light or a different LED lights, the processor may not be connected properly. Check sensor cable connections and repeat test

Checklist response:

No problems noted

Problem - Enter any applicable comments for this PM Activity

7.4.3 Software Documentation

Disdrometer-

Ingest software

Tipping Bucket Rain Gauge-Data logger script File splitting script Ingest software

7.4.5 Additional Documentation

7.5 Glossary

7.6 Acronyms

Also see the ARM Acronyms and Abbreviations.

7.7 Citable References

Joss, J., and A. Waldvogel, 1967: Ein Spektrograph fuer Niederschlagstropfen mit automatischer Auswertung. *Pure Appl. Geophys.*, **68**, 240-246.

Joss, J., and A. Waldvogel, 1969: Raindrop size distribution and sampling size errors. *J. Atmos. Sci.*, **26**, 566-569.